

25A Pinedale Tips



AIR CONDITIONING

The reverse cycle wall mounted air conditioners will heat and cool the room and work well all year round. There is a remote control for these units.

FRIDGE

Each room has its own designated fridge located in the lounge room.

RETIC

The rear patio has a bush that is climbing up the fence and this has retic set to come on twice a week.

PLEASE CHECK YOUR ROOM HAS THE FOLLOWING

Desk, chair, bed





CONTENTS

Please read this
OWNERS MANUAL
carefully prior to
use.....

**Installers Manual
located in the outdoor
carton**

structure and mechanism	Functions and Working temperature range	1
	Operation mechanism	2
	Technical specifications	4
	Important notices	5
	Structure description	6
Remote control operation procedure	Name and Function-Remote control	7
	Name and Function-Remote control(Remove the cover)	8
	COOL mode operation procedure	9
	HEAT mode operation procedure	10
	DRY mode operation procedure	11
	SLEEP mode operation procedure	12
	AUTO mode operation procedure	13
	TIMER mode operation procedure	14
	How to insert batteries	15
Care and maintenance	Emergency run operation procedure	16
	Air flow direction adjustment procedure	16
	Special performance	17
	Operation conditions	17
	Installation precaution	18
	Care and maintenance	19
	When malfunction happening	20
	Installation dimension diagram	21
	Installation location	22
	Install the indoor unit	23
	Install the outdoor unit	25
	Routine check after installation	27

Functions
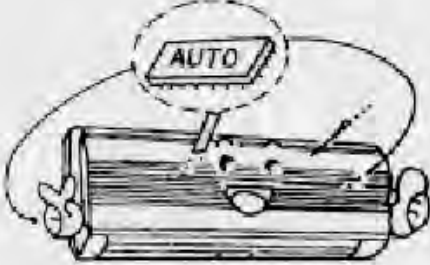
<p>Cooling you for summer</p>	<p>Dehumidifying on rainy days or in humid seasons</p>
<p>On hot days, your TECO Split System air-conditioner can cool room air by transferring the heat out.</p> 	<p>Teco air-conditioners can dehumidify and make the room air dry without reducing room temperature, making the room air more comfortable.</p> 
<p>Operating automatically</p>	<p>Heating in winter (Reverse Cycle Models)</p>
<p>According to room temperature, you can set the microcomputer to change automatically. COOL or HEAT or DRY operation mode which ever is the best effective for your comfort.</p> 	<p>Your TECO Reverse Cycle Split System, can supply warm air to raise the room temperature on cold seasons. Did you know that this is the cheapest form of home heating?</p> 

✘	Indoor side DB/WB(°C)	Outdoor side DB/WB(°C)
Maximum cooling	27/19	35/24
Maximum heating	21/—	24/18
Working Voltage: 50Hz 240V		

Installation Precaution:

- ① To prevent possible electrical shocks due to potential failure, the unit must be Earthed adequately.
- ② Provide a power circuit exclusively for each unit, and supply a circuit breaker for the correct current and an Earth Leakage Circuit Breaker (ELCB) protector should be provided for each unit.
- ③ All wiring must be done in accordance with the wiring system diagram, and in accordance to Australian Standards.
- ④ Wrong wiring may cause the unit to malfunction or become damaged.
- ⑤ Please disconnect the power plug or cut off the power supply when not in use.

Operation mechanism


Cooling cycle



Connected via pipes, indoor unit and outdoor unit form a refrigeration system. With power, compressor takes in low temperature and low pressure refrigerant then commences to compress the liquid gas which is now vaporised into the evaporator of indoor unit, compressing the gas into high temperature and high pressure gas, then discharging this gas into the condenser of outdoor unit. Helped by an axial-flow fan, heat is removed to outdoor air from the gas which then re-condenses back into liquid, the flow of liquid is now controlled, and the liquid starts to drop temperature and pressure. There, helped by another cross-flow fan, the liquid now absorbs heat from room air, evaporates and becomes low pressure vapour which then flows into compressor again, beginning next cooling cycle. Therefore, heat is transferred from indoor to outdoor, and room gets cooler and cooler.

Ventilation cycle



Ventilation cycle activates and divides the indoor and outdoor into two parts. With air movement provided by the cross-flow fan, room air continues to flow through filters, exchanges heat in evaporator, then returns to the room. In this way, room air can be cooled and dehumidified. At the same time, filtering the room air.

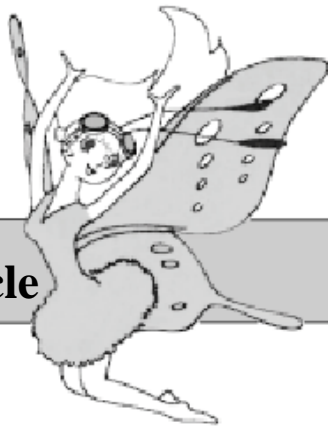


Heating cycle

TECO's Reverse Cycle type air conditioners use a reversing valve (4-way electromagnetic valve) to change refrigerant flow direction. When heating, refrigerant firstly enters indoor heat-exchanger, releasing heat and condensing. Then it enters the outdoor heat-exchanger, absorbing heat and evaporating. Because power consumption is used and converted into heat which is discharged in room, heating efficiency is very good, which means it saves you money. Reverse Cycle heating is the cheapest form of home heating today.

Important notices
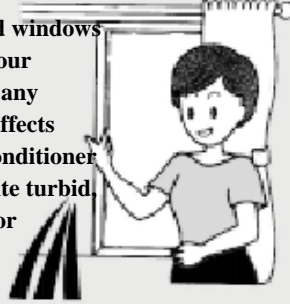
<p>Teco Air Conditioners should be operated with stable voltage in the range of 206-244V~1Ph 50Hz 240Volts</p> <p>Otherwise, the compressor may vibrate causing damage to the refrigeration system.</p> 	<p>Do not pull on power cords Cables or plugs.</p> 	
<p>Do not insert any foreign materials into the air inlet or air outlet, this is very dangerous due to the moving fans</p> 	<p>Try to keep all doors and windows closed while operating your air conditioner avoiding any heat gain or loss which affects how effective your air-conditioner can be. If room air is quite turbid, you should open a door or window little some outdoor fresh air.</p> 	
<p>Remember ONLY qualified and authorised technicians can operate and work with the PROHIBITED GASES contained in your air-conditioning system</p> <p>Connection of the refrigerant and electrical systems must be carried out by persons whom are licensed., it's the LAW!</p> 		
<p>Compressor Delay operation</p> <p>To avoid action of the overload protector and or other security devices, TECO design a delay for 3~4 minutes before starting the cooling or heating or dehumidifying cycle in following situations:</p> <ol style="list-style-type: none"> 1. To start again after Stopping; 2. To adjust operation mode 	<p>Smell</p> <p>Sometimes you may smell funny odours from your air-conditioner this is normal, however sometimes the indoor can send out some odour, this is because the air has mixed with the smell of furniture and any smoke on the air.</p>	<p>Electric circuit</p> <p>The must be a special electric circuit dedicated for the air-conditioner, do not use longer power lines, do not share the same outlet for another appliance.</p> 

Design of your TECO Split System

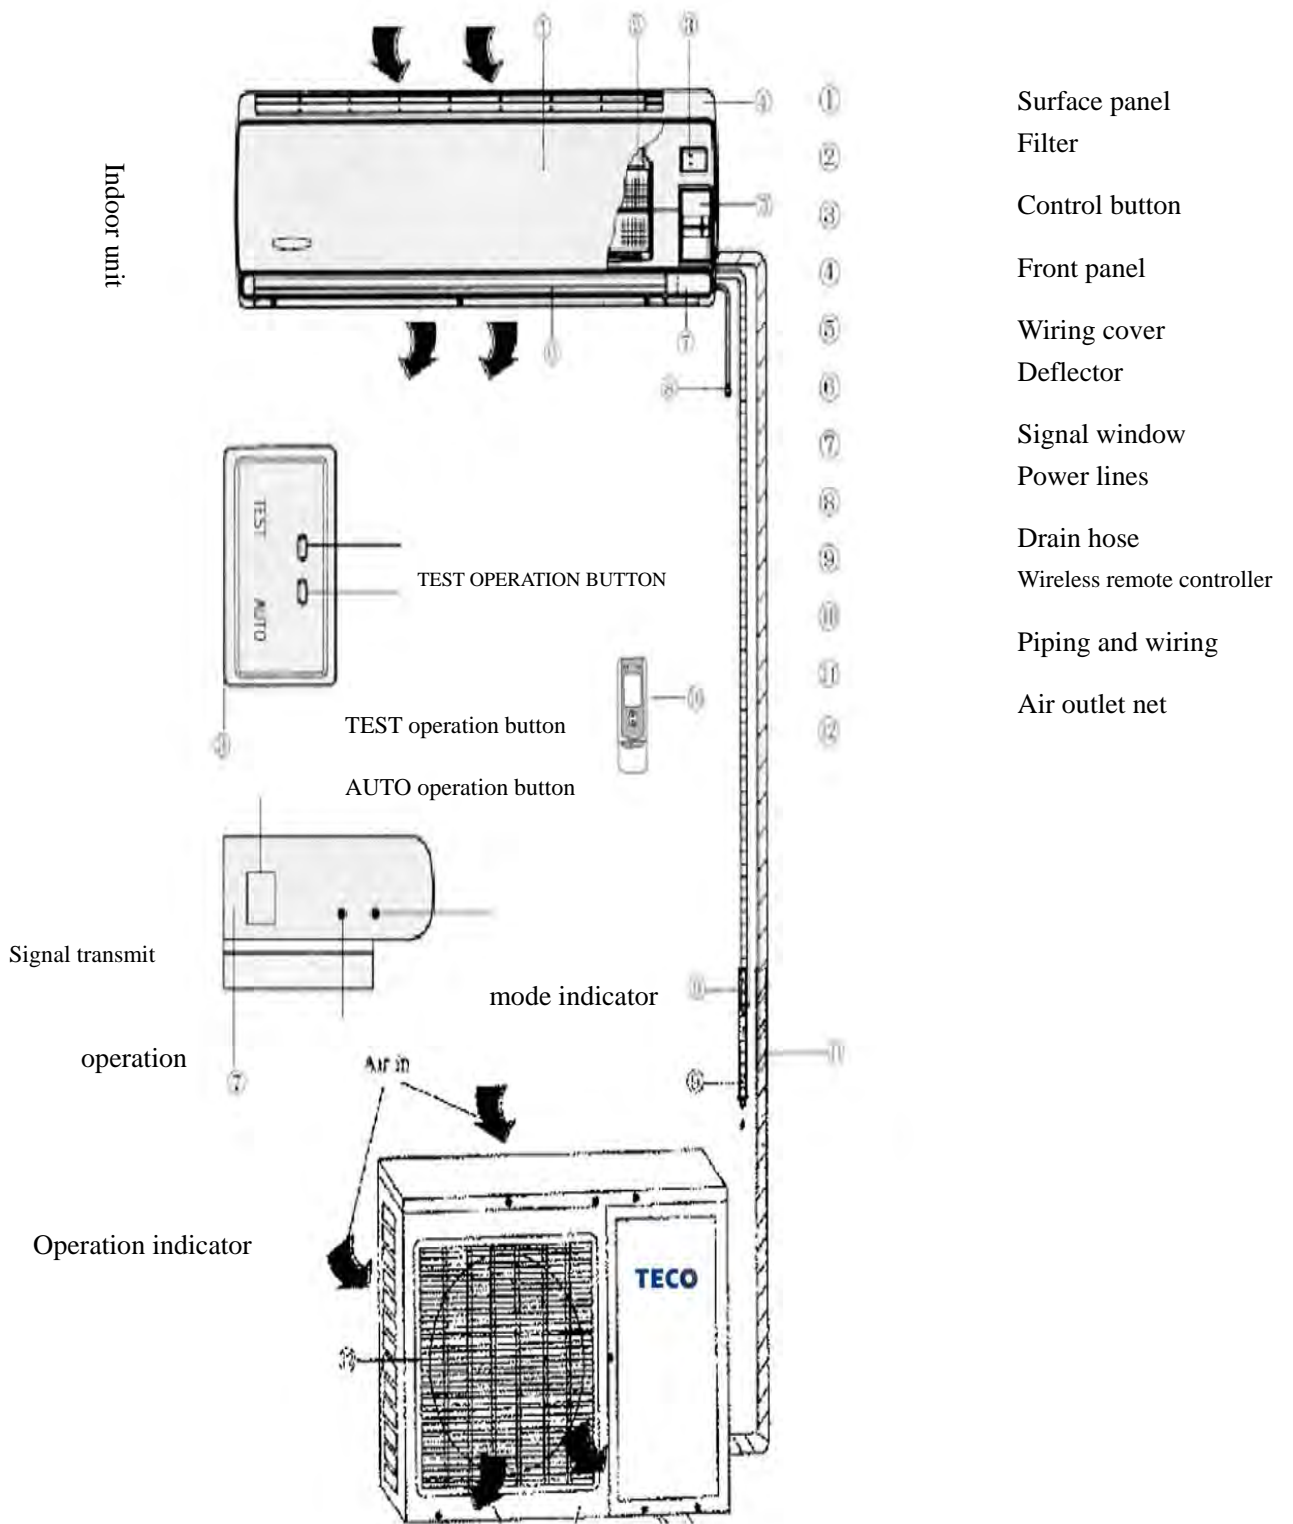


Remote control operation procedure

Names and Functions of buttons


Note:

- Be sure that there are no obstructions.
- The remote control signal can be received at a distance of up to about 10m.
- Don't drop or throw the remote control
- Don't place the remote control in a location exposed to direct sunlight

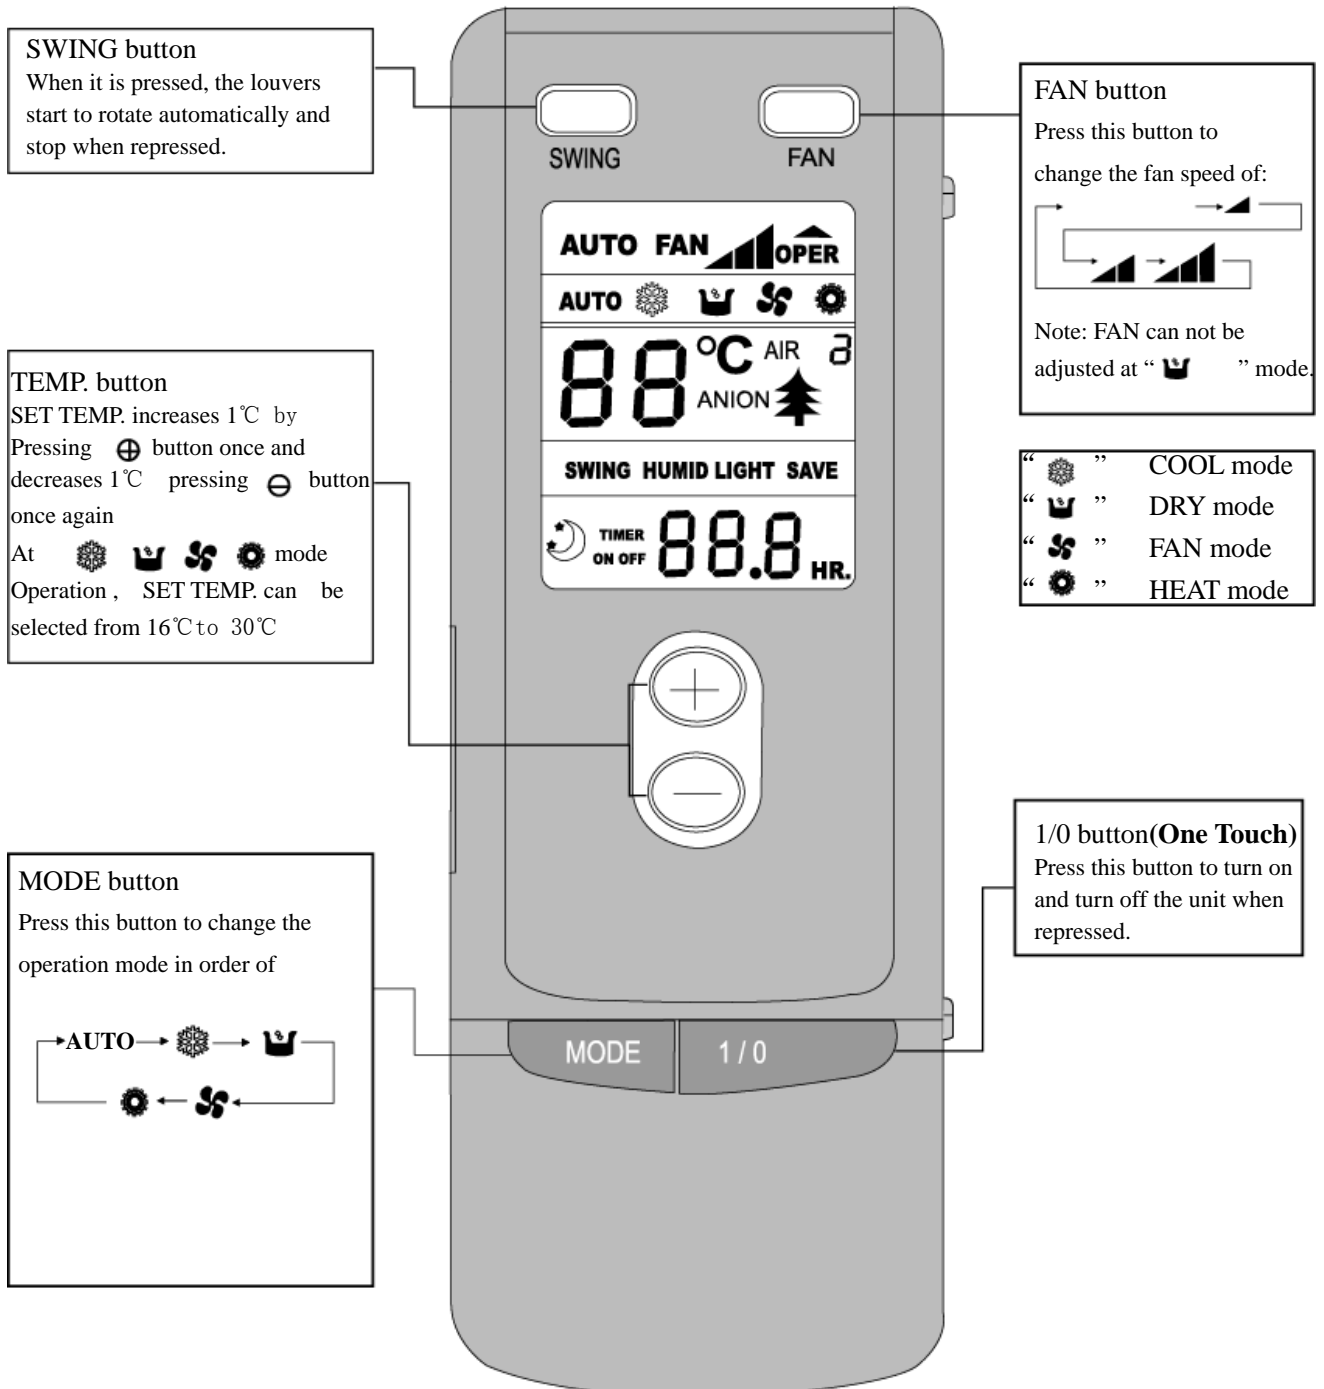

● **Names and Functions –Remote control. (Remove the cover)**


Note: Some features are not available to all models see your model number for the correct identification, and o the features incorporated

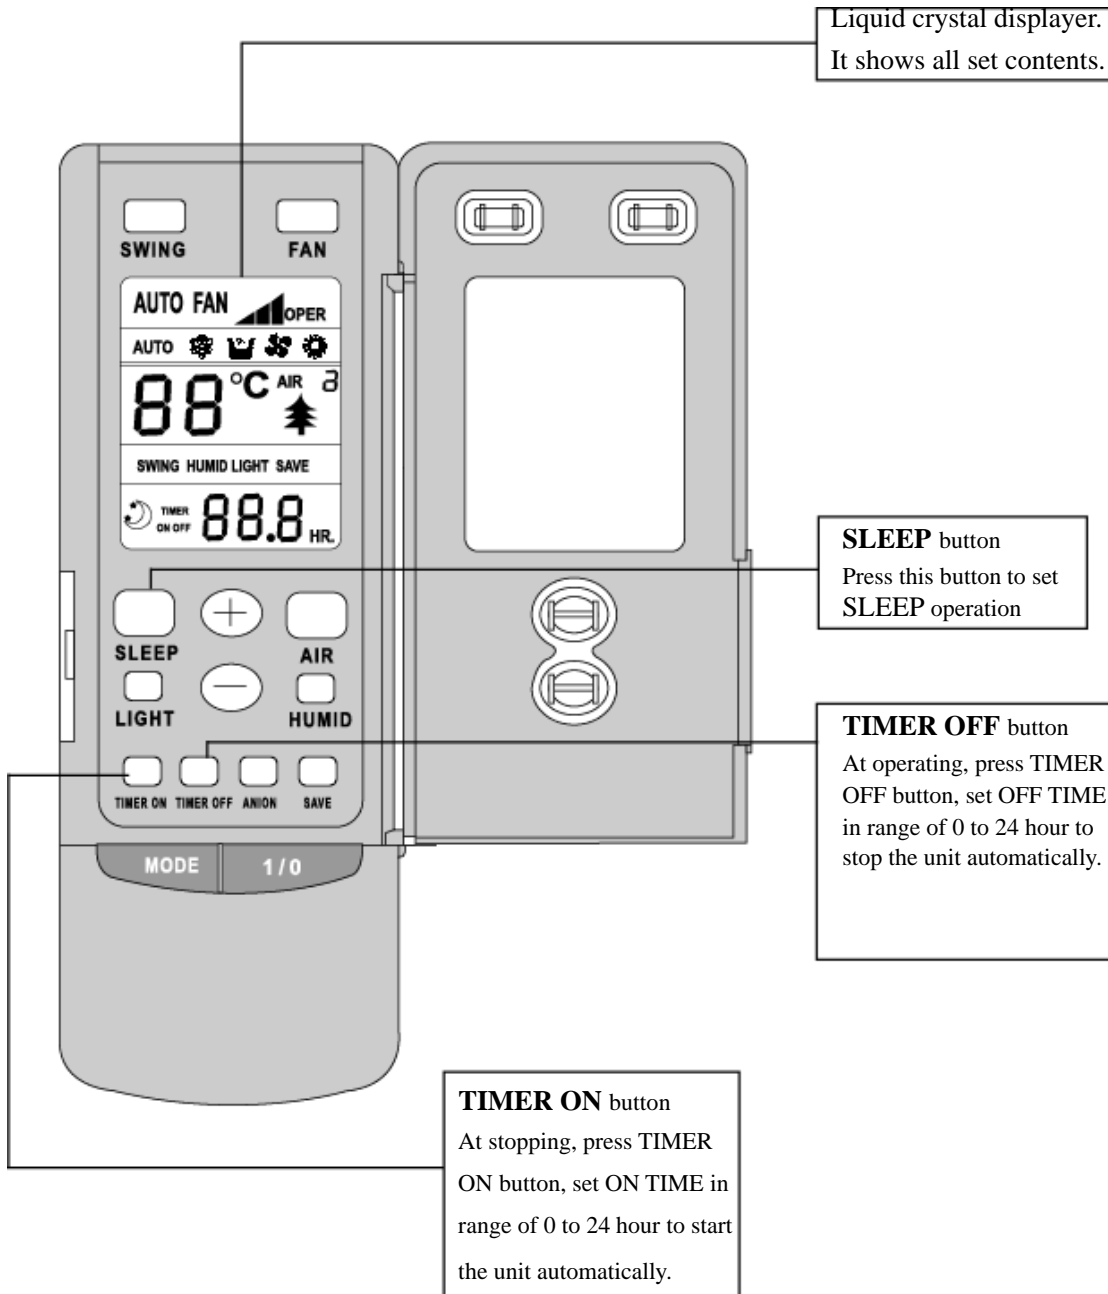

COOL mode operation procedure


According to difference between room temperature and the "Set Temperature" the microcomputer can control cooling on or not:

- If room temp. is higher than set temp., compressor runs at COOL mode.
- If room temp. is lower than set temp., compressor stops and only indoor fan motor runs.
- SET TEMP. should be in range of 16 to 30 .

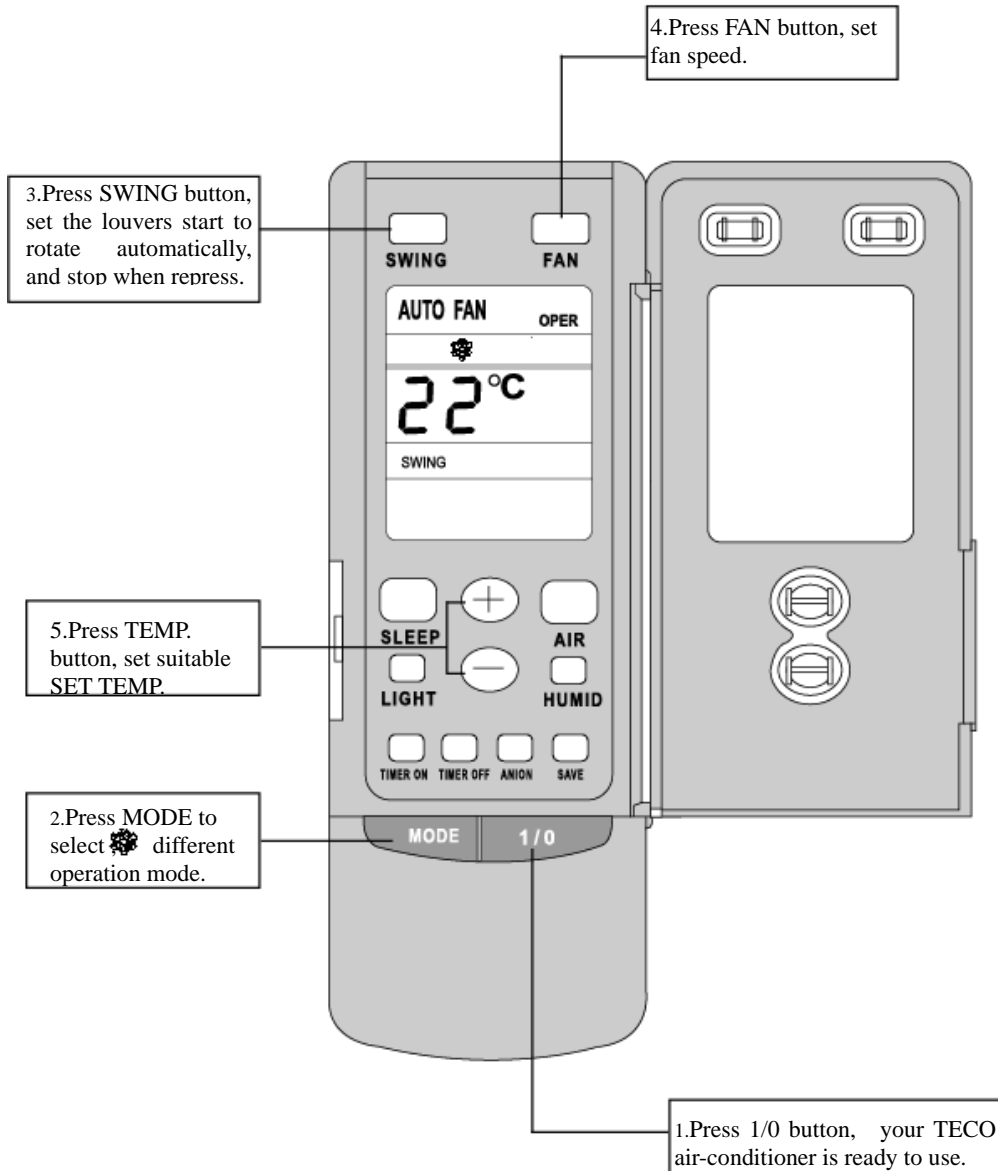


HEAT mode operation procedure

- If room temp. is lower than set temp., compressor runs at HEAT mode;
- If room temp. is higher than set temp., compressor and outdoor fan motor stop, only indoor fan motor runs.
- SET TEMP. should be in range of 16°C to 30°C.

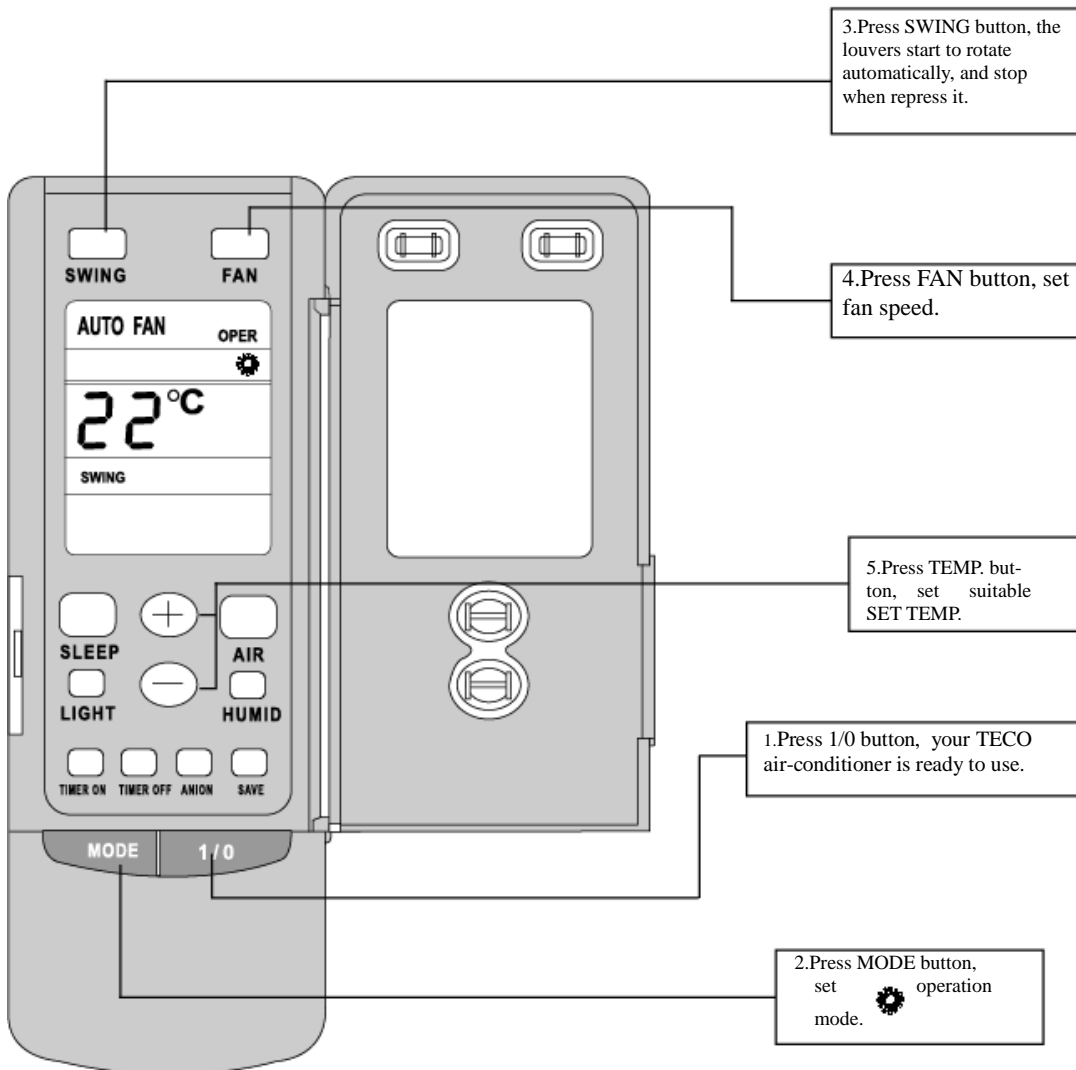


DRY mode operation procedure

- If room temp. is lower than set temp., compressor , outdoor and indoor fan motor stop. If room temp. is between $\pm 2^{\circ}\text{C}$ of set temp., Air conditioner is drying. If room temp. is higher than set temp., it's at COOL mode.
- SET TEMP. should be in range of 16°C to 30°C .

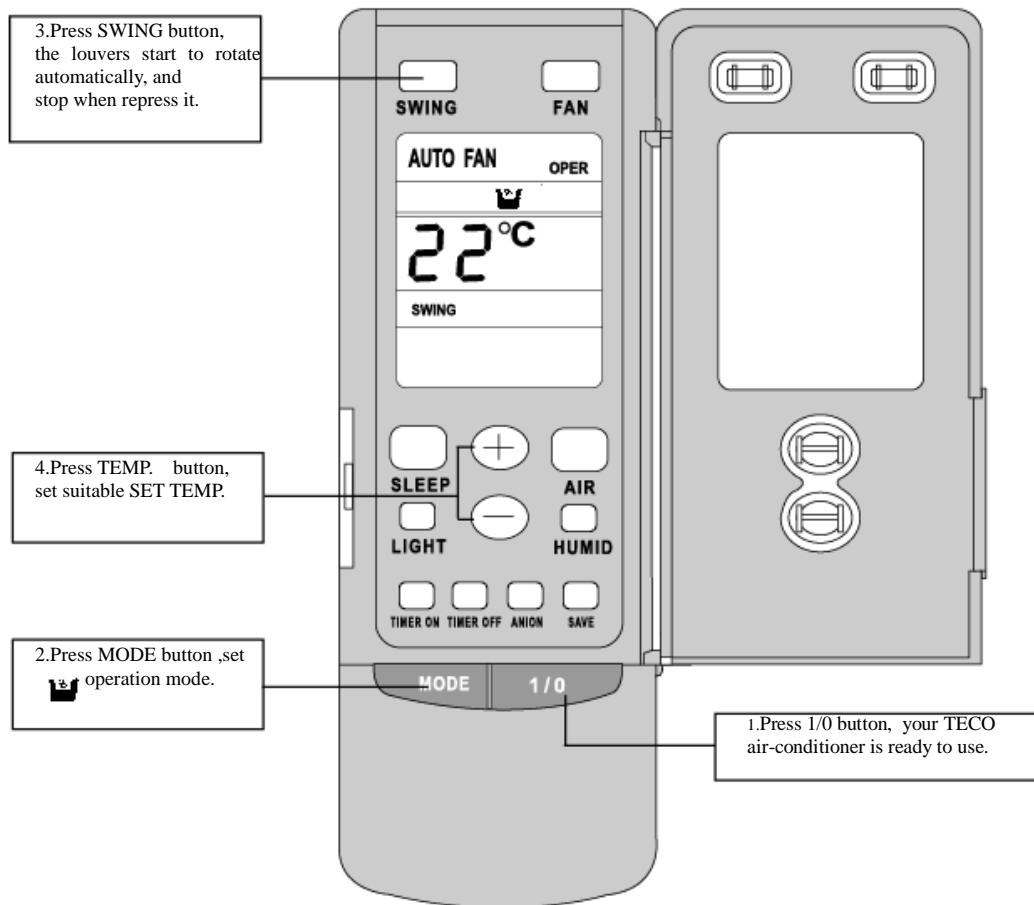


SLEEP mode procedure

- When the unit is cooling or drying, if SLEEP operation is set, SET TEMP. would increase 1°C in 1 hour and 2°C in 2 hours. Indoor fan motor runs at low speed.
- When the unit is heating, if SLEEP operation is set, SET TEMP. would decrease 1°C in 1 hour and 2°C in 2 hours. Indoor fan motor runs at low speed.

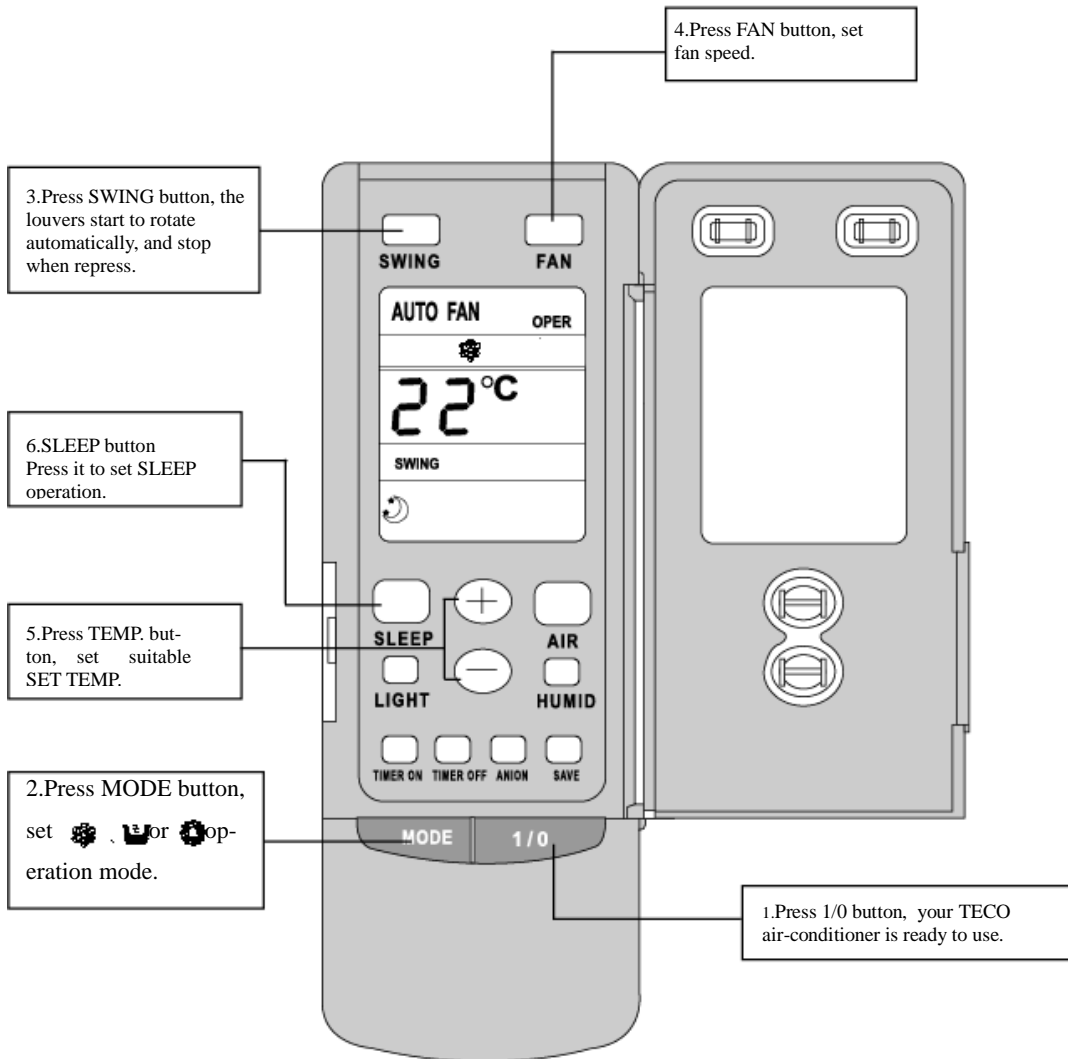


AUTO mode operation procedure

- At AUTO mode operation, standard SET TEMP. is 25°C for COOL mode and 20°C for HEAT mode.

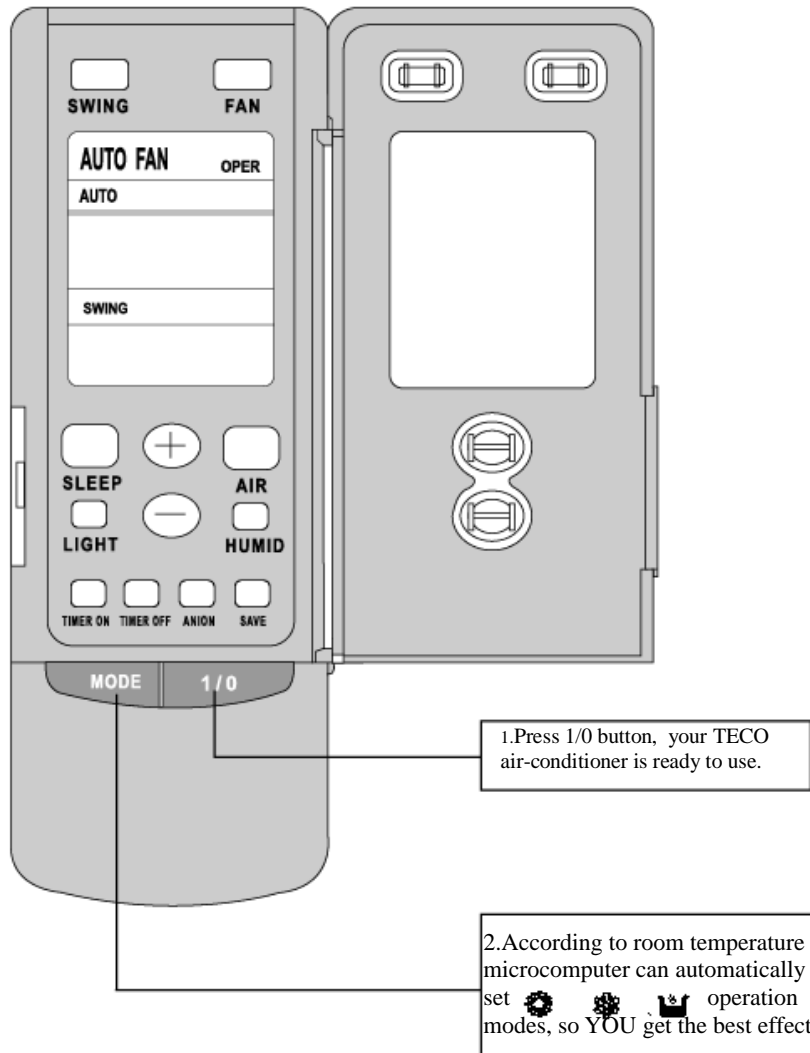


TIMER mode operation procedure

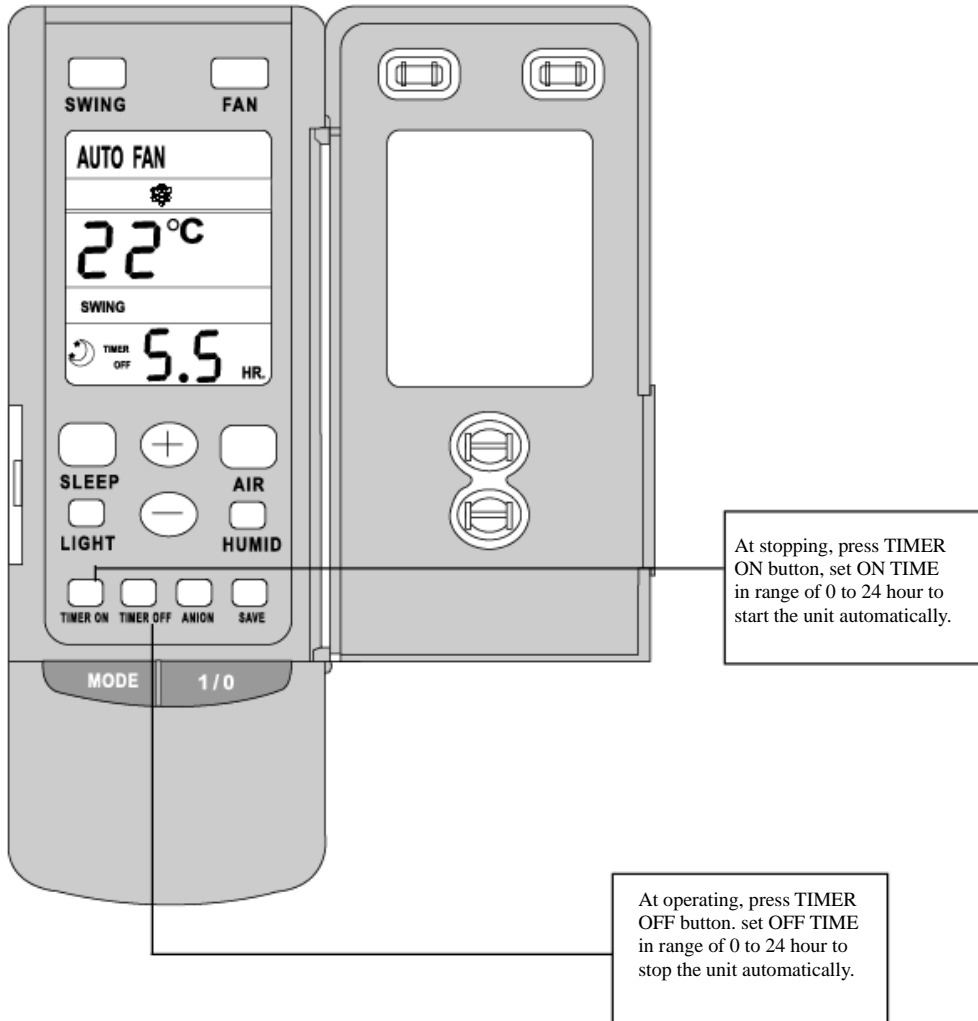


How to insert batteries

NOTE:

- Don't mix new and old or different batteries.
- Remove batteries when not in use for a long time.
- The remote control signal can be received at a distance of up to about 10m.

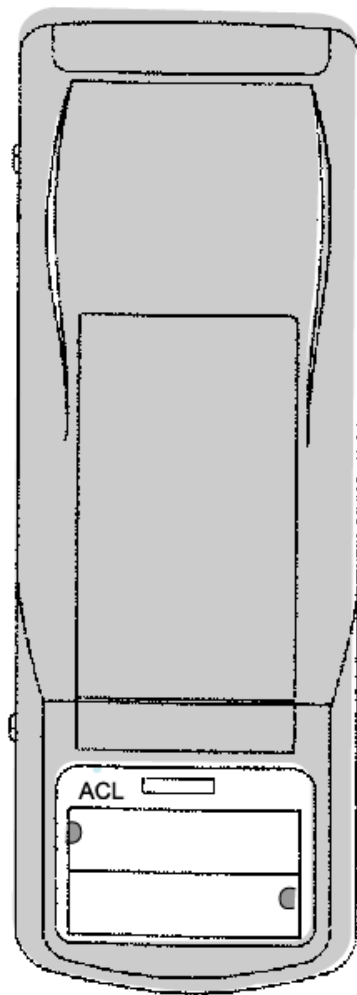


2 Insert the two AAA batteries

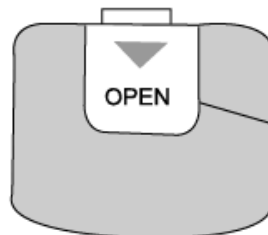

1 Remove the cover
3 Re - attach the cover.

Emergency Operation procedure

You can operate your TECO without the controller, by opening the fascia panel and operate as follows:

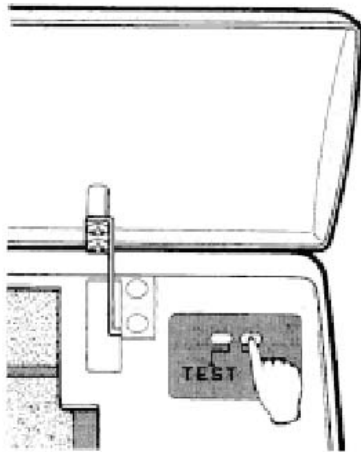

Start

At stopping, press AUTO button, start the air conditioner at AUTO mode operation.

*According to room temp. change, microcomputer can automatically set COOL or HEAT or DRY operation mode, so as for best effect.
*The OPERATION indicator keeps light while compressor runs.

Stop

At operation, press AUTO Button , stop the air conditioner.

*Both indoor unit and outdoor unit stop at the same time.


*The left TEST button is only for testing air conditioner. When it is pressed, no matter what room temp. is, air conditioner keeps cooling, so do not use it for normally operation.

Air flow direction adjustment procedure

1. Adjusting up/down air flow direction


Using the remote controller, adjust air flow direction by rotating the UP/DOWN deflectors up and down automatically or stopping at an angle.

- * Press SWING button, the deflectors start to rotate and stop when repress.
- * Press DIRE button once or for a moment, the deflectors move a special angle except they are rotating automatically.

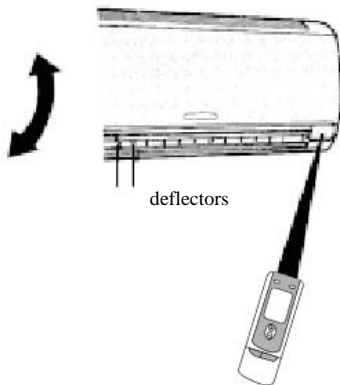




deflectors

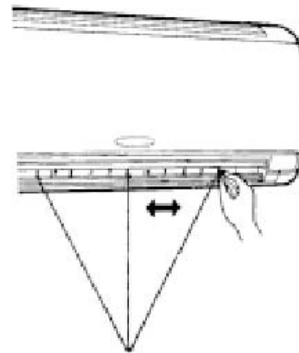



As shown, move the LEFT/RIGHT deflectors by hand, adjust air flow left or right or three different directions to every corner of room so as to make everywhere temp . average.



Adjusting left/right air flow direction

<p>Weather is unpredictable so your new system can comfort you during the hot summers or the coldest winters. Remember that keeping your filters clean will provide you with the best air conditioned and filtered air</p> 	<p>Remember to keep all your documents as the warranty is your protection and you will require these later should warranty be required</p>
--	--

<p>Outdoor temp. should be in range of 18°C to 40°C, otherwise it is possible for air conditioner to breakdown. Room temp. should be in range of 18°C to 32°C Room humidity should be lower than 80%, otherwise it is possible to dew at air conditioner surface and even drop water.</p> 	<p>After compressor continually working more than 8 minutes, and evaporator pipe temp. keeping no higher than 0°C in 3 minutes, the compressor and outdoor fan motor stop, while indoor fan motor runs at SET SPEED. When evaporator pipe temp. is not lower than 8°C, and after 3 minutes delay, a I conditioner restores previous operation.</p> 
<p>DRY mode operation</p>	<p>HEAT mode operation</p>
<p>Outdoor temp. should be in range of 18°C to 40°C otherwise it is possible for air conditioner to breakdown or not start. Room temp. should be in range of 18°C to 32°C</p>	<p>Outdoor temp. should be over 0°C otherwise it is possible for protect devices inside to act and air</p>

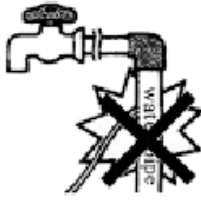
Installation position	Noise
<ul style="list-style-type: none"> * Drain the condensed water from indoor unit into ground pipe. * Install indoor unit far away TV set or radio etc., to avoid disturbing video or voice. * In salt and coastal area or place where is near thermal springs and polluted by various gases, or other special areas, please contact with seller before use. * Avoid place where is possible for flammable gas to leak out. * Avoid other heat sources or direct sun light. * Avoid place where is easy for children to touch. 	<ul style="list-style-type: none"> * Install on place firmly enough to avoid transmitting or increasing noise and vibration. * Do not put objects in front of outdoor unit air outlet, to avoid increasing noise. * Be sure not to make trouble to neighbors with hot air or noise from outdoor unit. * Please contact with seller as soon as there is strange noise during operation. 
Remove	Electric lines location
<p>When remove air conditioner to other place, it needs special technician, so contact with seller firstly.</p> 	<ul style="list-style-type: none"> * Must connect with ground. * Must use rated voltage and electric circuit specific for air conditioner. * Avoid octopus type of multi-plug which would cause over heat. * Do not pull power lines strongly. * To fit an electrical leakage-proof switch, please contact with special electric seller. * Chose proper fuse to meet with the current specification. * Power lines should be thick enough.
Earth wire Do not connect earth wire to following places:	
<p>Water pipe Sometimes, there is some plastic material such as Polythene used as part of water pipe, which is not available for earth.</p> 	<p>Gas pipe If there is electrical leakage accidentally from air conditioner, it is easy to cause fire or explosion, as is very dangerous.</p> 

- All the electrical work must be done by qualified personnel according to relative wiring regulation and this manual.
- The power supply is type Y connection. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- The rated voltage and the exclusive circuit must be used.
- Leakage circuit-breaker and air switch of correct capacity must be installed. The air switch of 25A should be used in these models.
- The plug must be accessible after the appliances have been positioned.

Care and maintenance


1. Plug out first before cleaning

Cleaning unit
Plug out only after air conditioner stops at all.

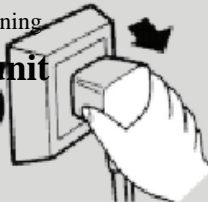


2. Clean surface panel with a soft and dry cloth, which is soaked warm water below 40°C

Must dry the cloth by hands before cleaning




3. Do not use chemical solvent for cleaning.




4. Do not splash water directly to indoor unit, in which there are microcomputer and circuit plate, they must not be touched by water.

Accident will happen.



* Check earth wire

Is it broken or loose?




Air filters should be cleaned once every


Cleaning filters

1. Open surface panel only after air conditioner stops completely


- ① Pull here up (both sides of the surface panel)
- ② Push filters up till hooks are free
- ③ Pull down and take out filters.



2. Clean filters with a vacuum cleaner or by typing them gently. If they are very Dirty, wash them in warm water below 40°C dissolved with neutral scouring agent, then dry them in cool air.

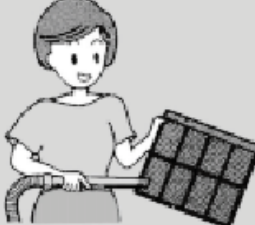


3. Insert them at original position, then push down and close surface panel.

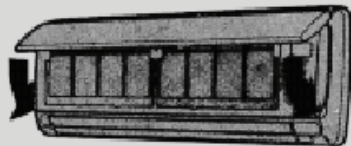

* Check air inlet and outlet of outdoor unit.





Air lock could result in bad efficiency.



- All the electrical work must be done by qualified personnel according to relative wiring regulation and this manual.
- The power supply is type Y connection. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- The rated voltage and the exclusive circuit must be used.
- Leakage circuit-breaker and air switch of correct capacity must be installed. The air switch of 25A should be used in these models.
- The plug must be accessible after the appliances have been positioned.

What to do is a malfunction occurs?

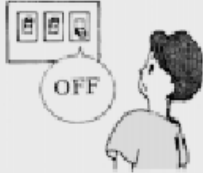Please check the following items before ask for repair, it saves your time and money.

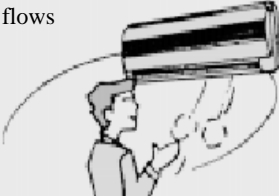
Fault phenomenon	Trouble shooting
<p>Air conditioner does not operate at all.</p> 	<ul style="list-style-type: none"> * Is power fail? * Is plug out? * Is power fuse or switch off? * Is voltage higher than 240V or lower than 206V? * Is SET TIME suitable?
<p>Cooling efficiency is not good.</p> 	<ul style="list-style-type: none"> * Is air inlet or outlet locking? * Is there any other heat source in room? * Are air filters dirty very much? * Is indoor fan speed set at LOW? * Is SET TEMP. suitable?
<p>Wireless remote controller is not available.</p> 	<ul style="list-style-type: none"> * If disturbed abnormally or operation modes changed too frequently, sometimes the electric controller would lose function. Please plug out and plug in again, it maybe OK. * Check batteries of wireless remote controller, if voltage is little, change batteries. * If wireless remote controller displays unclear or displays all symbols, please change batteries.
<p>Foggy air flows out.</p> 	<ul style="list-style-type: none"> * At COOL or DRY mode operation, sometimes there is foggy air flowing out of indoor unit, this is because that room humid air has been cooling rapid.

Immediately stop all operations and plug out, contact with your seller in the following situations.

- * Operation starts or stops abnormally;
- * Power fuse or switch often breaks;
- * Carelessly splash water or something into air conditioner;
- * Electrical lines are much hot or lines cover breaks;
- * Other strange situations.



Teco warrants this product free from manufacturers defects for a period of FIVE Years *** guarantee for all parts and labour required to fix our defects, this only applies to domestic application and we offer only a 12 months warranty if the product is used in a commercial premises. Conditions apply*** and are subject to any relevant state or territory law

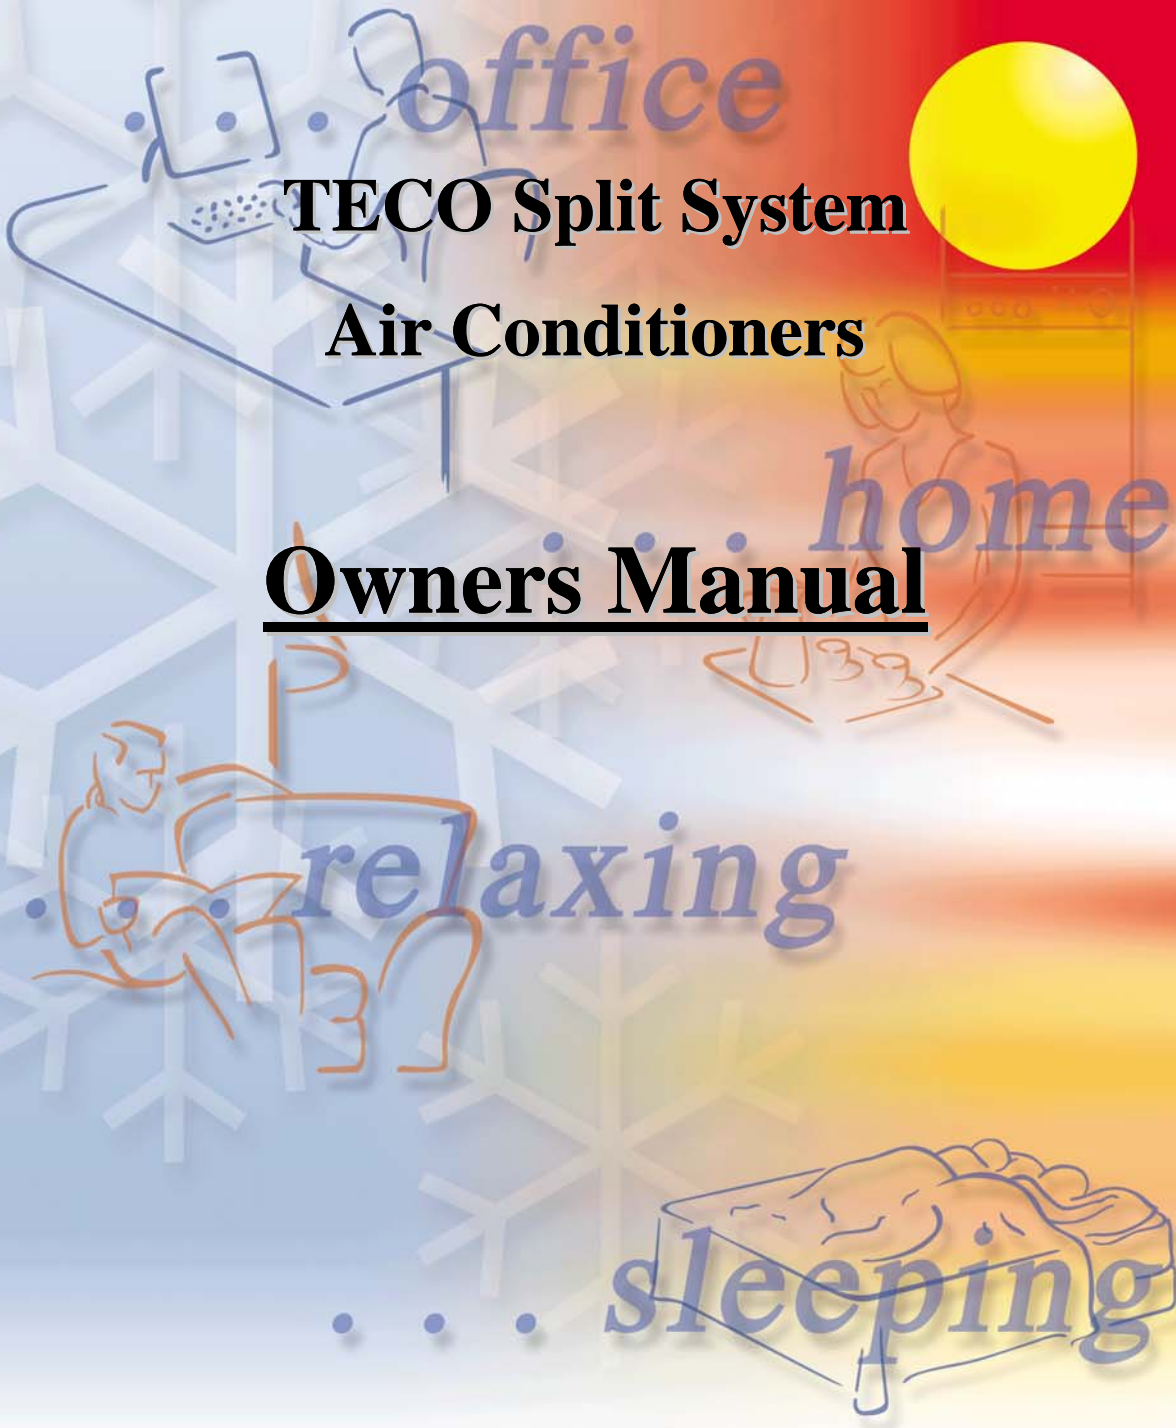

**TECO Split System
Air Conditioners**

Owners Manual

TECO
The Comfortable Choice


ZSARM2

Palsonic
The AUSTRALIAN Company

User's Manual

TFTV6840DT

66cm (26") LCD TV / DVD Combo with DVB-T

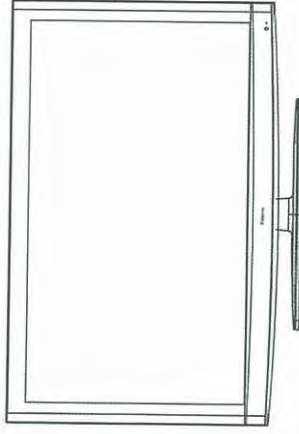

Palsonic
The AUSTRALIAN Company

Palsonic Customer Service
Telephone (Australia) 1300 657 888

Palsonic Corporation Pty Ltd ABN 34 000 474 108
1 Joynton Avenue, Waterloo NSW 2017 Australia

Telephone (02) 9313 7111 Facsimile (02) 9697 0655
www.palsonic.com.au

Offering Australians quality since 1958 | www.palsonic.com.au





Specifications

LCD Panel	Panel Size	26"
Max Resolution		1366 x 768
Input Connector:	VIDEO	2
	YPbPr	2
	VGA	1
	AUDIO (L/R)	2
	PC AUDIO	1
	HDMI	3
	RF	1
Output Connector:	USB	1
	HEADPHONE	1
	COAX	1
Main Voltage		100-240V ~ 50/60HZ
Power		100W

IMPORTANT NOTICE:


This product composes up to 6.0 million cells and a few cell defects may occur in the manufacture of the panel. Several dead pixels (allow up to 2 bright or 2 dark pixels) on the panel are deemed acceptable by the industry standards. In line with manufacturers and would not mean that the panel is faulty. Dead pixels panels with 6 pixels or more within 12 month period, Palsonic Corporation Pty Ltd. complies with industry standard and reserves the right to repair the unit and non-refundable. We hope you will understand that the product that corresponds to this standard is regarded as acceptable.

DVD Operation

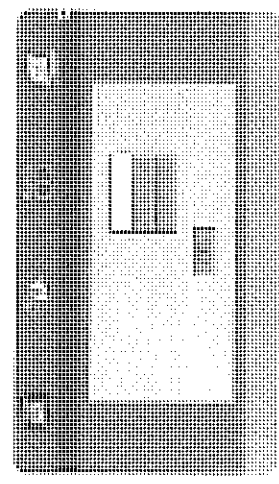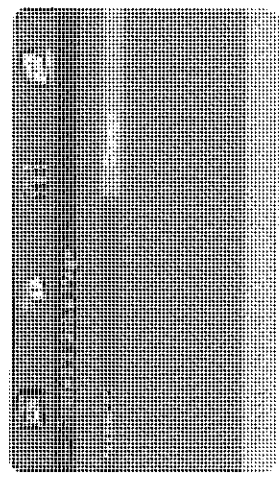

Default

User can load the original factory setting by choose RESET and press OK button .

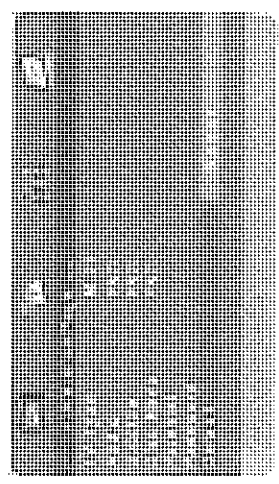

Safety Precautions

Power Supply 1

Installation 2

Use and Maintenance 3

Important Safety Instructions 4-5

User Guidance Information

Names of each part(Front View) / Accessories 6

Names of each part(Back View) 7

Remote control 8-9

Basic Operation

Basic Operation 10

OSD Menu

1. CHANNEL Menu 11-12

2. PICTURE Menu 13

3. SOUND Menu 14

4. TIME Menu 15

5. OPTION Menu 16

6. LOCK Menu 17

Multimedia Operation

Multimedia Operation 18-20

Recording Operation

Recording Operation 21-23

DVD Operation

DVD Operation 24-31

Specifications 32

Use and Maintenance

Warnings

 
Disconnect the power cord from the wall outlet during an electrical storm.

- Not doing so may result in fire or electric shock.



Do not insert any metal objects, such as a screwdriver, paper clip, or coin, into the ventilation openings or AV terminals.

- Doing so poses a serious risk of fire or electric shock.



Do not allow children to climb or hang on the unit.

- The unit could topple over onto a child and result in serious injury.



Never disassemble or modify the unit. If any part is not able to be serviced by yourself:

- Doing so may result in fire or electric shock. If the unit requires repair, contact the service center.



Cautions

When not using the unit for long periods of time, disconnect the power cord from the wall outlet.

- Do not accumulate over time on the unit, and cause it to generate heat and ignite or deteriorate insulation, which in turn may result in electric fire.



When moving the unit, be sure to turn off the unit and unplug the power cord from the wall outlet.

- Moving the unit with the power cord connected to the outlet may cause damage to the cord, resulting in the risk of electric shock.



If you notice any unusual odors or smoke around the unit, immediately disconnect the unit from the outlet and contact the service center.

- Failure to do so may result in fire or electric shock.



When removing the batteries from the remote control, make sure children do not swallow them. Keep the batteries out of the reach of infants and children.

- If a child has swallowed a battery, seek medical attention immediately.



Always use two or more people to lift or move the unit.

- If the unit is dropped, it could be damaged or otherwise cause injury.



Wipe off any moisture, dirt, or dust on the power plug pins with a clean dry cloth.

- Failure to do so may result in fire or electric shock.



 
It is advisable to clean the interior of the unit at least once a year. Contact the store of purchase or service center for information.

- Continuing to use the unit without cleaning of the dust buildup inside it may result in fire or electric shock.



Always turn off the unit and unplug the power cord when cleaning the unit. Use a soft dry cloth to clean the unit.

- Never clean with industrial strength polish, wax, benzene, paint thinner, air freshener, kerosene, detergent, or other such chemicals. Also, do not clean with a damp cloth.




DVD Operation


Dolby Digital Setup

Dynamic

This option is used to set the compression ratio in order to control the sound (Volume) contrast.

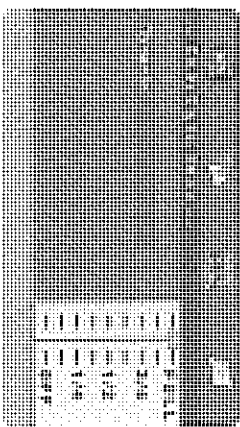

Preference Setup

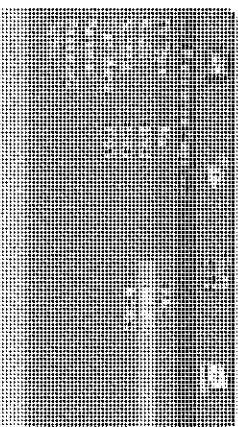

You must press STOP twice to enter Preference Page or NO disc

- TV Type
 - PAL
- This is selected when the player is connected to an PAL System TV.
- MULTI
- The player will set the TV system according to the disc. In the tray:
- NTSC
- This is selected when the player is connected to a NTSC System TV.
- Audio
- If a language listed below is recorded on the disc, you can play the sound in such language. If not, the language recorded will be used.

Important Safety Instructions

Warnings and Precautions


To prevent any injuries, the following safety precautions should be observed in the installation, use, servicing and maintenance of this equipment. Before operating this equipment, please read this manual completely, and keep it nearby for future reference.

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with a dry cloth.
- 7) Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use the attachments/accessories specified by the manufacturer.
- 12) Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus



combination to avoid injury from tip-over.

DVD Operation

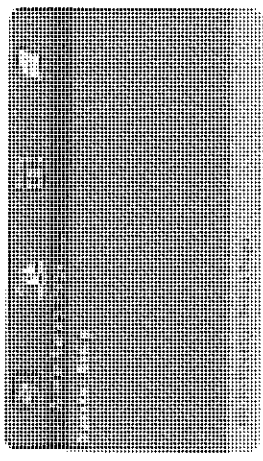


Downmix
• LT/RT

A disc recorded multi channel soundtrack, the output signal will be incorporated to left and right channel.


• Stereo

A disc recorded multi channel soundtrack, The output signal will be incorporated to stereo.

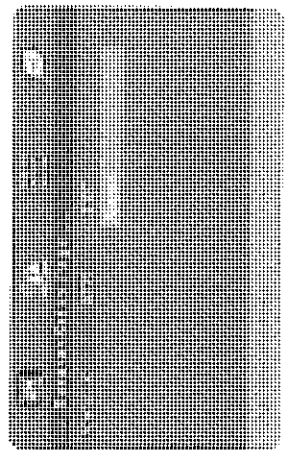

Important Safety Instructions

- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus

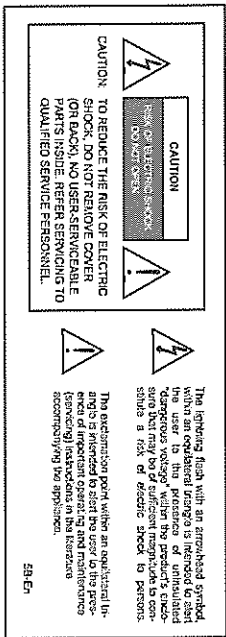

Apparatus with Class I construction shall be connected to a Mains socket outlet with a protective earthing connection.


WARNING

TO PREVENT DAMAGE WHICH MAY RESULT IN FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

Caution :

- These servicing instructions are for use by qualified service personnel only.
- To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.
- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

DVD Operation

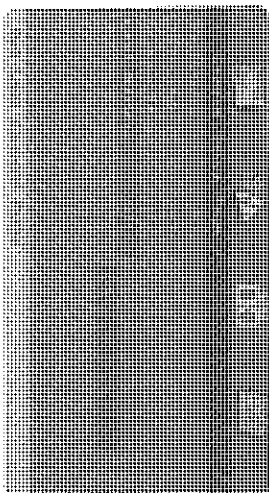


Audio Setup

- **Speaker Setup**
In the "Audio Setup page" press "V" button to select "Speaker Setup" item, press the "OK ENTER" or "▶" button (play) into the "Speaker Setup Page".

Names of each part


Front view

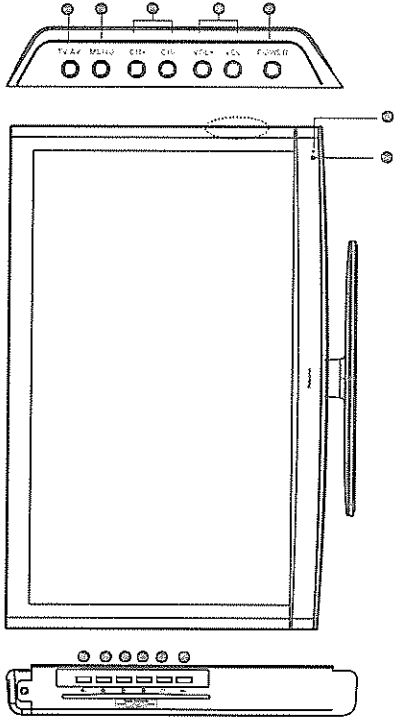

- ① TV/AV button - Input Source Select Button
- ② MENU button - OSD Menu Display Button
- ③ CH+/ button - Channel/Program up/down
- ④ VOL+/ button - Volume up/down
- ⑤ POWER button
- ⑥ POWER Indicator
- ⑦ IR (Remote Sensor). Infrared sensor for remote control
- ⑧ (EJECT): Load/Eject DVD disc.
- ⑨ (NEXT): DVD next chapter.
- ⑩ (PREV): DVD previous chapter.
- ⑪ (STOP): Stop DVD program.
- ⑫ (PAUSE): pause DVD program.
- ⑬ (PLAY): Play DVD program.

Accessories


* The configuration of the components may look different from the following illustration.

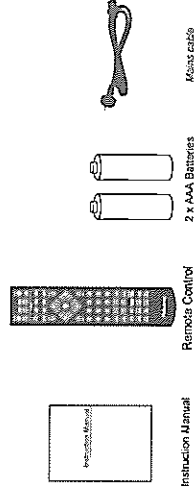

DVD Operation

OSD Language


This is used to select the OSD language.

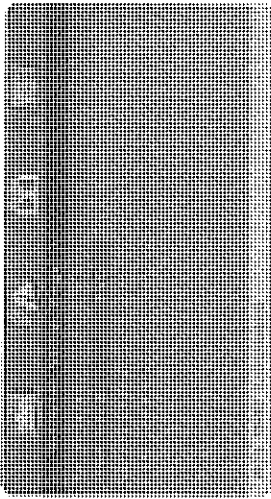

Screen Saver

Start the screen saver, the screen saver image will appear when the player stops or the picture is frozen for a few minutes. This saver can keep the screen from being damaged.

- On (Start the screen saver)
- Off (Remove the screen saver).

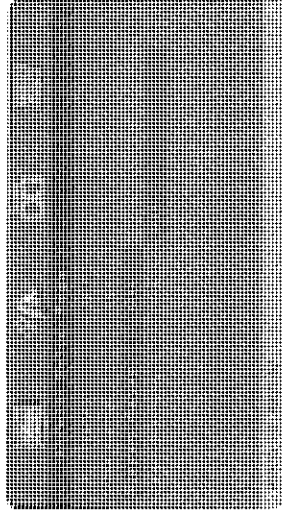



Last Memory

Can set the items on the last memory. "on" and "off" option. Select "On", the shutdown will shutdown the machine before the settings for memory, re-boot the machine settings. Set near the same time.

- Select "Off", every time the machine automatically switched back to the default settings
- On (Start the memory)
- Off (Remove the memory).

Names of each part

Back View

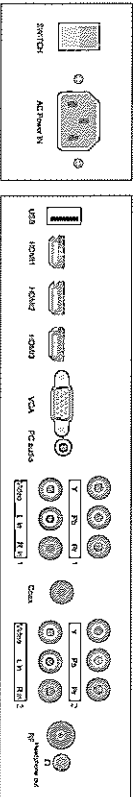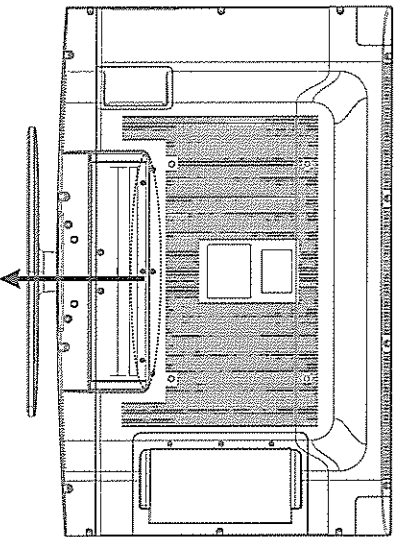

SWITCH: Switch on/off the power supply.

AC POWER IN: Connect it to AC100-240V ~ 50/60Hz power supply with the mains cable.

USB: Software update and Multimedia Operation.

HDMI 1/2/3: Connect it to the HDMI of DVD or other equipment.

VGA: For PC display. Connect it to the D-Sub 15 pins analog output connector of the PC.

PC audio in: Connect it to the audio output terminal of PC.

YPbPr1/2: Connect them to the YPbPr video output terminal of DVD.

Coax-out: Digital coaxial output.

VIDEO1/2: Connect it to video output terminal of DVD.

RIL In 1: Connect them to the audio output terminal of DVD (shared with YPbPr-1)

RIL In 2: Connect them to the audio output terminal of DVD (shared with YPbPr-2)

RF: Connect antenna or cable 75 Ohm coaxial to receive TV signal.

Headphone out: Connect it to your headphone or other audio equipment.

DVD Operation

Basic Operation

Press the Power button on the TV or the remote control, then press the TV/AV button to select DVD mode. If there is no disc in the DVD player the screen will show "NO DISC".

Insert Disc according to picture next to disc slot.

Do not touch the playing surface.

Hold the disc around the outside with your fingers and place the disc into the slot. The player will automatically draw the disc into the player.

To "Eject" the disc, press the EJECT button on the TV or the "▲" button on the remote control.

DVD Setup Mode

• Setup Mode provides the menu for the configuration of General Setup Page, Audio Setup Page, Dolby Digital, Setup, Preference Page.

• Item selection in the Setup Menu is done by using the Navigation Arrows, SETUP button and the OK button.

• Press the SETUP button first, enter into SETUP menu, then press the DIRECTION RIGHT button, you can enter into the next Sub-menu.

• Press the SETUP button again to exit the Setup Menu.

General Setup

TV Display

- 4:3 Pan Scan


This is selected when the DVD player is connected to a normal TV. Wide-screen Images are shown on the screen, but with some parts cut automatically.

- 4:3 Letter Box


This is selected when the player is connected to a normal TV. Wide-screen Images are shown on the screen, with black belt on the top and bottom.

- Wide

This is selected when the player is connected to a wide-screen TV.

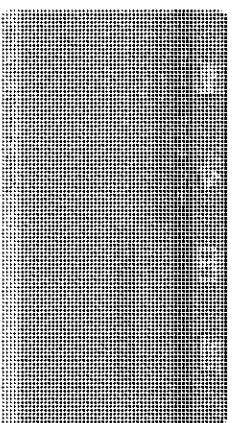

Remote Control

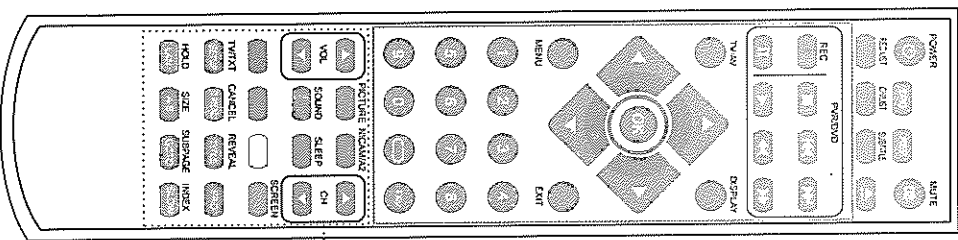


- CH▲▼: Scan through channels
- VOL▲▼: Adjust the volume
- PICTURE: Select the picture mode
- NICAM1A2: TV Nicam1A2 select.
- SOUND: Select the sound mode.
- SLEEP: Standby timer.
- SCREEN: Turn on/off the screen
- TV/TEXT: Turn on/off the Teletext display.
- CANCEL: Cancel the Teletext display.
- REVEAL: Reveal any hidden text.
- HOLD: Hold or carry on the current subpage.
- SIZE: Press to see top half of page double size. Press again to see the bottom half of page double size. Press again for normal size.
- SUBPAGE: Press to enter subpages, press again to cancel.
- INDEX: Go to index.
- Colour buttons: Short cuts-follow the coloured links in the text

- SETUP: DVD system setup.
- D-MENU: DVD play In/Out menu.
- TITLE: DVD title.
- PRO: Edit the program and play.
- LAN: Select DVD disc language.
- A-B: Select and play the preferable paragraph of DVD program by pressing this key twice at the beginning and end of it.
- GOTO: Play your favorite title/chapter/track.
- SLOW: Play DVD programs at slow speed.

Recording Operation


3). Schedule List

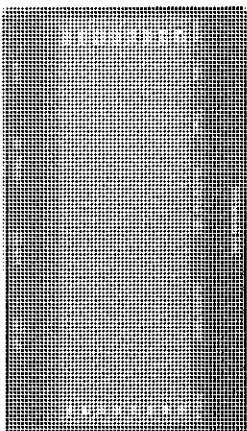

Display the recorder schedule

- Note: a. Can't add schedules which have existent on the list.
 b. Can't add schedules when the list is full, you have to delete some schedules;
 c. You could delete a schedules by RED button on the remote control.

4). PVR File System

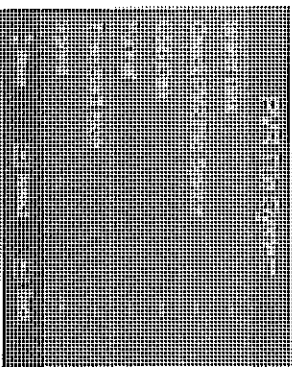


- Setup the PVR File system before you start recording.
- Select Disk: Select the device for the Record files.
- Check PVR File System
- USB Disk: Display the USB state.
- Format: Format the USB device for PVR operating. (The device has been formatted).
- Time Shift Size: Display the size of the USB device. (The device has been formatted).
- Speed: Display the speed of the USB device. (The device has been formatted).



Recording Operation

PVR settings

Press the MENU button, and select CHANNEL menu.

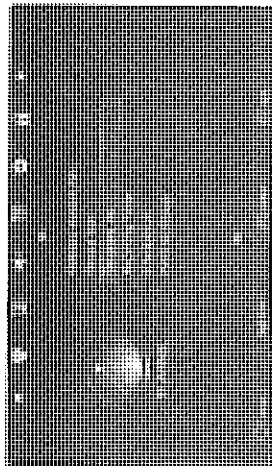

 1). Recorded List

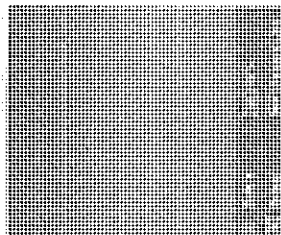


Display the recorded list

Recorded list: Display the Recorder List menu, and changed the mode of program.

INFO: Display the information of the program you recorded.
RED button: Delete the program you select

2). Recording Timer

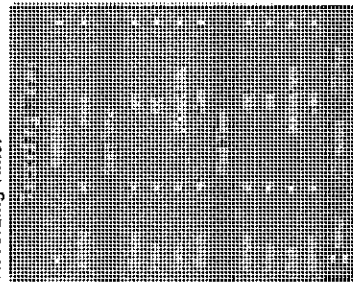

Set the Recording Timer

The TV will record the program automatically according to your settings.

TITLE: Display the name of the recording program.

MODE: Select the record mode.

Start Time: Set the start recording time.


End Time: Set the end recording time.

Press OK button to save the setting and exit the menu.

Basic Operation

Power on/off

1. Connect to the power.
2. -To turn on the TV
Press **POWER** button on the TV or remote control.
-To turn off the TV
Press **POWER** button on the TV or remote control.

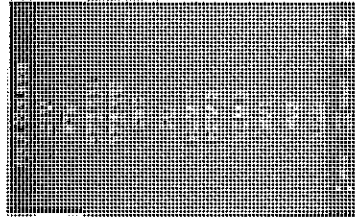


Input Source select

Press **TV/AV** button on the TV set or remote control to display input source menu, and use **CH+/-** button on the TV set or **^ / v** button on remote control to select the input source, press **OK** button on the remote control to enter.

Note: Before you select the **input source**, make sure the connections are prepared.

Basic OSD Menu operation

Press **MENU** button to display the OSD menu as below:

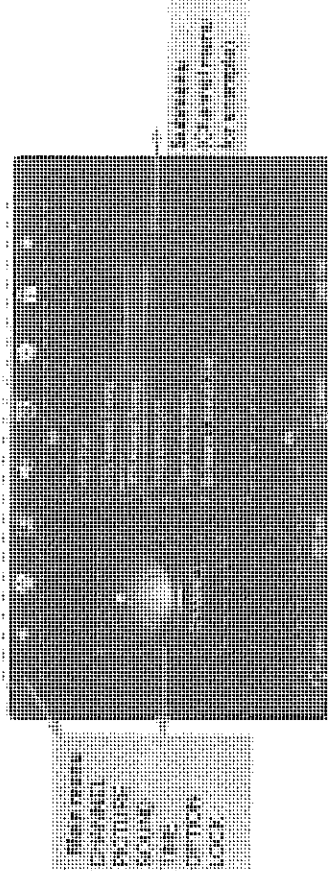


Hint:—you should operate the OSD menu according to the hint

Use **</>** button to select the main menu, and press **v** button to enter the submenu. In the submenu, use **^ / v** button to select the function item, press **</>** button to adjust/setup, or press **OK** button to enter the submenu.
* (Press **MENU** button to return to the upper menu.)
* (Press **EXIT** button to exit the menu display.)

Note1: Only when you input the suitable signal, the relevant items can be activated
Note2: Please operating the OSD menu according to hint on the bottom of the banner.

OSD Menu

2. PICTURE menu

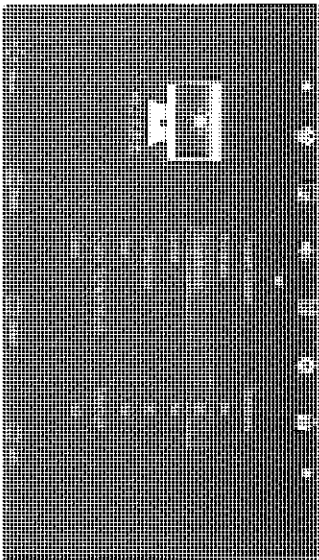

Description

Picture Mode: Choose from Standard, Dynamic, User and Mild.

Note: *Contrast, Brightness, Color and sharpness are only available and can be adjusted in the User mode option in the Picture Mode Settings.*

Contrast: Controls the difference between the brightest and darkest regions of the picture.

Brightness: Controls the overall brightness of the picture.

Color: Control the color.

Sharpness: Increase this setting to see crisp edges in the picture; decrease it for soft edges.

Tint: Controls the tint (NTSC mode only).

Color Temperature: Choose from Medium, Cool, User and Warm.

Red: Controls the red colour of the picture.

Green: Controls the green colour of the picture.

Blue: Controls the blue colour of the picture.

Aspect Ratio: Choose from 4:3, 16:9, Zoom1, Zoom2, Just Scan and Panorama.

Note: *The aspect ratio modes you can select according to the input source.*



Noise Reduction: Choose interference noise modes from Off, Low, Middle, High and Default.

Screen(PC mode only): Press OK button to enter the submenu to adjust Horizontal / Vertical position, Size or Phase of the picture.


Multimedia Operation

Basic Operation

1). Press the TV/AV button on the remote control to display the input source menu, select USB source by the ◀ / ▶ buttons, and press OK button to enter the Multimedia menu seen below.

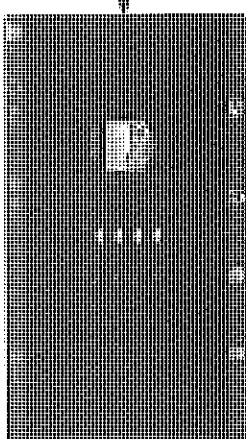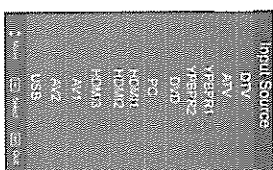

2). Insert USB device, you will find the name of the device display on the screen.

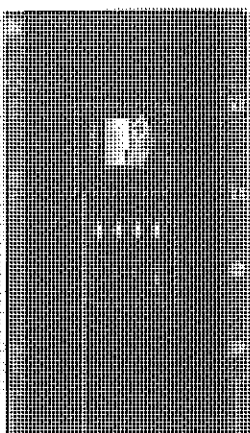

MENU

MUSIC MOVIE TEXT

device list


MENU

MUSIC MOVIE TEXT

operation

Hints and informations of USB device

3). Press ◀ / ▶ button to select the kind of the files in the device you want to program from PHOTO, MUSIC, MOVIE and TEXT. Press ▲ / ▼ button to select the device and press OK button to enter.

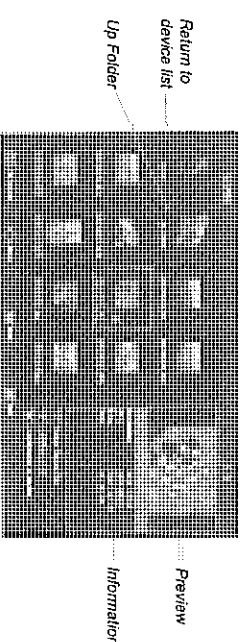

Return to device list

Up Folder


Preview

Information

Press ◀ / ▶ / ▲ / ▼ buttons to move, and press OK button to select the file or unfold the folder. Then press ▶ button to program the files (be signed) you select or the files in the fold you select. You can display the option table on the bottom of the screen by OK button, press ◻ button to hide. Press ◻ button to stop and exit the full screen program.

OSD Menu

3. SOUND menu

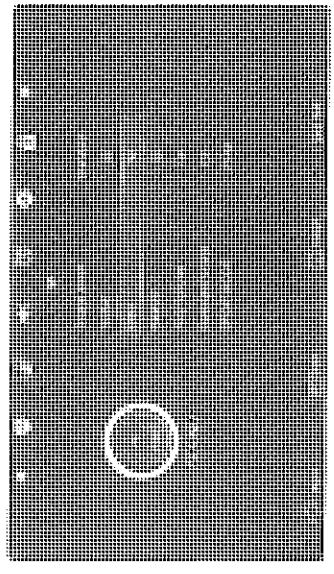


Description

- Sound Mode:** Allows you to select among: Standard, Music, Movie, Sports and User.
- Treble:** (Could be adjusted when the sound mode is User); Controls the relative intensity of higher pitched sounds.
- Bass:** (Can be adjusted when the sound mode is set to User); Controls the relative intensity of lower pitched sounds.
- Balance:** To adjust the balance of the left and right sound track, or turn off the volume of the left and right sound track.
- Auto Volume:** Control the volume of the program automatically when you turn on the function by selecting "On".
- Surround Sound:** Turn on/off the surround sound function by selecting "off"/"surround".
- SPDIF MODE:** Allows you to select among: Off, PCM and Auto.


OSD Menu

6. LOCK menu

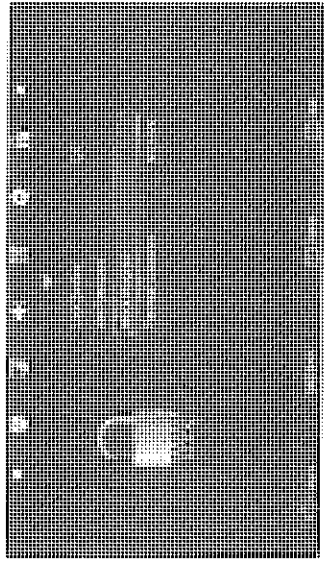

Description


- Lock System:** Turn on/off the Lock System function.
Note: You should enter the code to operate the menu. (original code is 0000)
- Set Password:** Set pin code. If the Pin code has been changed you must enter the present code.
New : Enter the new password.
Confirm: Enter the new password.
- Block Program:** Lock the channel, you have to enter the code to view the channel. Use ^ and V buttons to select the channel, and press the GREEN button on the remote control to lock the channel or cancel.

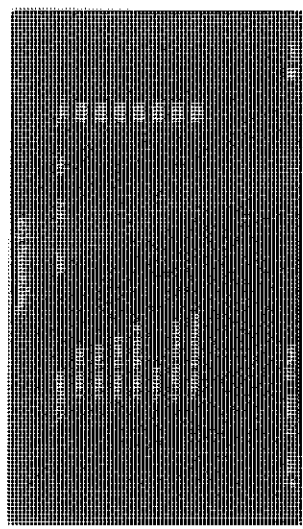

Parental Guidance: Allows you to select the Parental Guidance mode.

OSD Menu

4. TIME menu

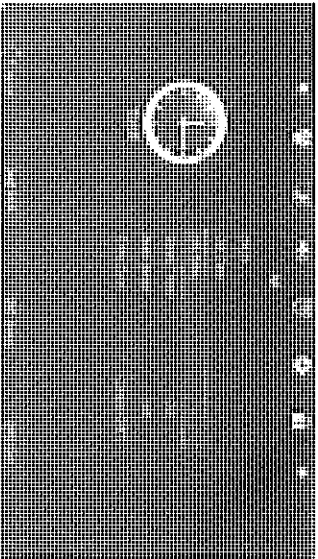

Description

Clock: Use the < and > buttons to select the position, and use the V and A buttons to set the time.

Note: *User can not change time manually during DTV mode, for time is from signal source directly.*

Off Time: Press OK button to enter the submenu, you could set the time when the TV set will be turned off automatically, you could also set the frequency.

On Time: Press OK button to enter the submenu, you could set the time when the TV set will be turned on automatically, you could also set the frequency, volume and program.


Sleep Timer: Allows you to setup the sleep timer among: 10min, 20min, 30min, 60min, 90min, 120min, 180min, 240min and off.

Auto Sleep: Turn on/off the auto standby function.

Time Zone: Allows you to select the time zone.

OSD Menu

5. OPTION menu

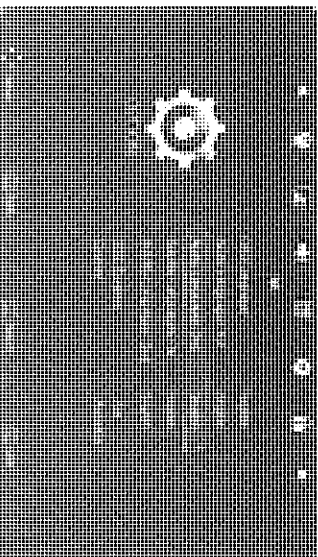

Description

OSD Language: Allows you to select menu language.

Audio Language 1st/2nd (can be selected in DTV mode): Allows you to select first and second audio language.

Subtitle Language 1st/2nd (can be selected in DTV mode): Allows you to select first and second subtitle language.

OSD Duration: Allows you to setup the time of the manu display on the screen among: 5s, 10s, 15s, 20s, 25s, 30s, 35s, 40s.

Country: Display the current Country, and you should select the Country when you want to auto tuning.

Restore Factory Default: Press OK button to restore factory default.


TECCO *25A Aug 3*

USER MANUAL

LCD TV



www.tecco.com.au

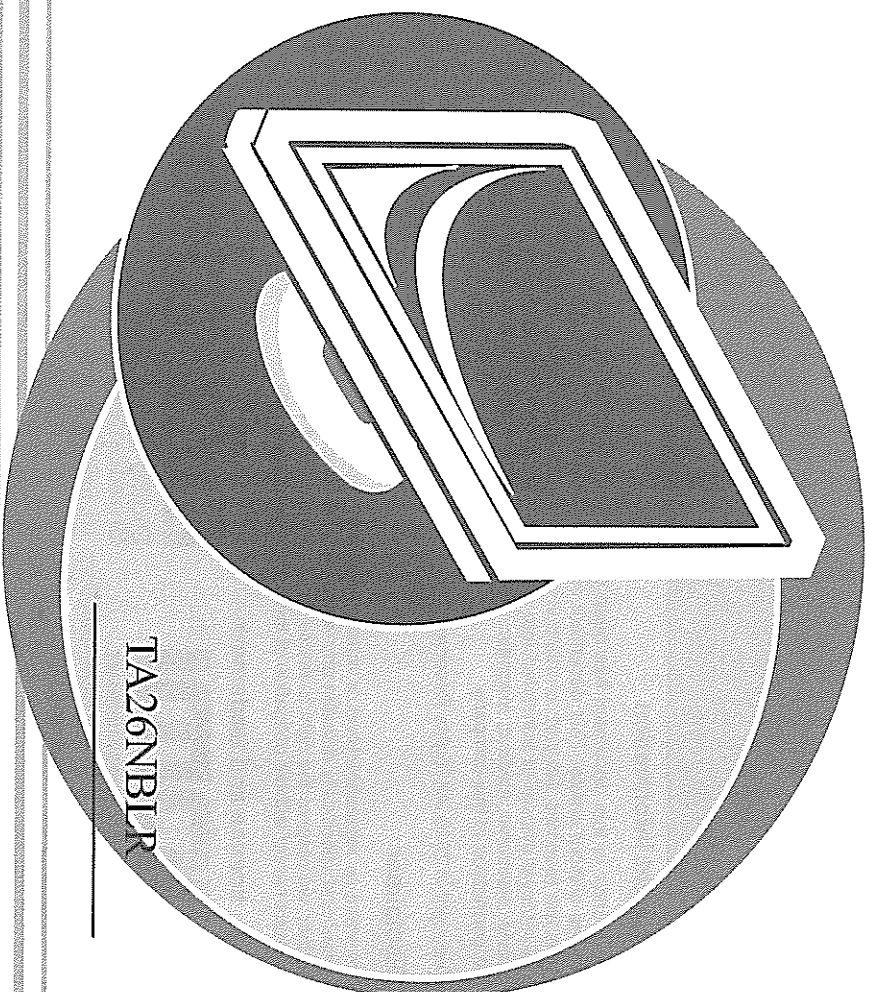

TA26NBLR


702475401181Z
BBB-PV

Preface

About this manual

Thank you for purchasing TECO LCD Colour Television (LCD stands for Liquid Crystal Display) We are pleased to present a product that has been designed with excellent quality, reliability and performance to make your viewing experience more satisfying than ever before. This manual provides detailed descriptions on how to use this product and making adjustments according to your personal preferences.

Please read the Safety Precautions on page ii and the instructions in this manual carefully, and keep them handy, for your future reference.

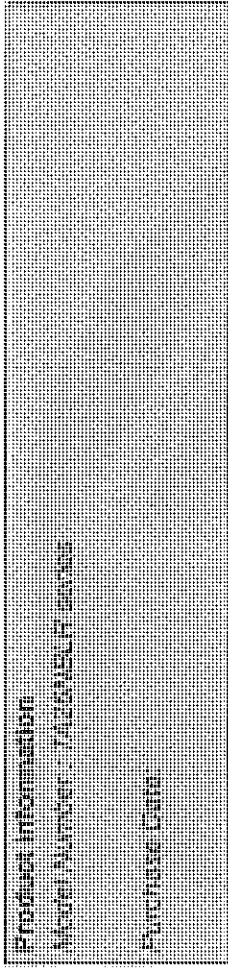

Copyright information

Information in this document has been carefully checked for accuracy; however, it is subject to change without notice. This document contains proprietary information protected by copyright. All rights are reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of this company.

Copyright © 2010, All Rights Reserved.

Disclaimer

We make no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaim any warranties, merchantability or fitness for any particular purpose. Further, we reserve the right to revise this publication and to make changes from time to time to the contents hereof without obligation of this company to notify any person of such revision or changes.


Logo, license and trademark


HDMI[™] HIGH DEFINITION MULTIMEDIA INTERFACE
DVB[®] Digital Video Broadcasting
DOLBY[®] **DIGITAL**


HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

DVB is a registered trademark of the DVB project.

Important safety information

 **CAUTION**
RISK OF ELECTRIC SHOCK. DO NOT REMOVE COVER. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

 **WARNING**
This symbol is intended to tell the user that parts inside the product pose a risk of electric shock to persons.

 **CAUTION**
This symbol is intended to tell the user that important operating and servicing instructions are described here.

English

Earthing information

This apparatus must be earthed. To ensure safe operation, the earthed plug must be inserted only into a standard earthed power outlet which is effectively earthed through normal household wiring. Extension cords used with the equipment could be hazardous. The fact that the equipment operates satisfactorily only means it is earthed, but the installation may not necessarily be safe. For your safety, if in any doubt about the effective earthing of the equipment or power outlet, please consult qualified service personnel.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. TO AVOID ELECTRIC SHOCK, INSERT THE PLUG FULLY INTO THE POWER OUTLET.

Product disposal

Do not dispose of the LCD television with general household waste. The LCD screen contains a small amount of liquid crystal and mercury. For disposal or recycling information, please contact your local authorities.

Safety precautions

Please read all of these instructions before you operate your television and save these instructions for later use. This unit has been engineered and manufactured to ensure your personal safety, however, improper use can result in electric shock or fire hazard. In order not to defeat the safeguards incorporated in this equipment, please observe the following basic rules for its installation, use and servicing.

- Always unplug this LCD television from the wall outlet before cleaning.
- Do not use liquid cleaners or aerosol cleaners. Use a soft cloth moistened with water for cleaning.
- Use only the attachments recommended by the television equipment manufacturer.
- Do not use this LCD television near water, for example, near a bath tub, washbowl, kitchen sink or laundry tub, in a wet basement, or near a swimming pool.
- Do not place this LCD television on an unstable surface, stand, or cart. The LCD television may fall, causing serious injury to a child or an adult and seriously damaging the equipment.
- When moving the LCD television, hold under the main unit. Do not grab the base when moving. The base could come off, causing you to drop the LCD television, possibly resulting in damage to the LCD television or causing injury.
- The LCD Television should be moved with care. Quick stops, and uneven surfaces when transporting may lead to damage of the LCD Television.
- Slots and openings in the back or bottom of the cabinet are provided for ventilation. To ensure reliable operation of the LCD television and to protect it from overheating, these openings must not be blocked or covered. This LCD television should not be placed in an enclosed installation such as a bookcase unless proper ventilation is provided.

- The openings should never be covered with a cloth or other material and the bottom openings should not be blocked.
- This LCD television should be operated only from a power source indicated on the marking label.
- As a safety feature, this LCD television is equipped with an earthed power plug. If the plug does not fit in your power outlet, contact your electrician. Do not modify the plug and defeat this safety feature.
- Do not allow anything to rest on the power cord. Do not locate the LCD television where the cord may be damaged due to lightning and power-line surges.
- Follow all warnings and instructions marked on the LCD television.
- If an outdoor antenna is connected to the LCD television, be sure the antenna system is earthed so as to provide some protection against voltage surges and static charges.
- For added protection for this LCD television during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna. This will prevent damage to the equipment due to lightning and power-line surges.
- An outdoor antenna system should not be located in the vicinity of power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outdoor antenna system, extreme care should be taken to keep from touching such power lines or circuits as contacting them could be fatal.
- Do not overload wall outlets and extension cords as this can result in fire or electric shock.
- Never push any kind of objects into this LCD television through cabinet slots as they may touch dangerous voltage points or result in short-circuits of internal parts. This could result in a fire or electric shock. Never spill any kind of liquid on the LCD television.
- Do not attempt to service the LCD television by yourself because opening or removing covers may expose you to dangerous voltage or other hazard. Refer all servicing to qualified service personnel.
- Unplug this LCD television from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - When the power cord or plug is damaged or frayed.
 - If liquid has been spilled into the LCD television.
 - If the LCD television does not operate according to the operating instructions, please just adjust those items that are covered by the operating instruction because improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the LCD television to normal state.
 - If the LCD television has been dropped or damaged.
 - When the television comes about a distinct change in performance —this maybe indicates the need of servicing.
- After the servicing of the LCD television, please ask the service technician to perform routine safety checks to determine that the television is in safe operating condition.
- If needing to replace parts, please make sure that the replaced parts that the service technician adapts are specified by the manufacturer that have the same characteristics as the original parts. Unauthorized substitutions may result in fire, electric shock, or other hazards.
- Note to CATV system installer: the note reminds the CATV system installers that the cable earth should be connected to the earthing system of the building as close to the point of cable entry practical as possible.
- Wall mounting should follow the manufacturer instructions, and should use a mounting kit approved by the manufacturer.
- The LCD television should not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the LCD television.
- A warning that excessive sound pressure from earphone and headphones can cause hearing loss.

Wall Mount Installation


(For reference only)

Wall mount items (sold separately) allow you to mount the TV on the wall. For detailed information on installing the wall mount, see the instructions provided with the Wall Mount items. Contact a technician for assistance when installing the wall mounted bracket.

TECO Australia is not responsible for any damage to the product, property or injury to yourself or others if you elect to install the TV.


Do not install your Wall Mount Kit while your TV is turned on. It may result in personal injury due to electric shock.

Remove the stand and fasten with two screw.

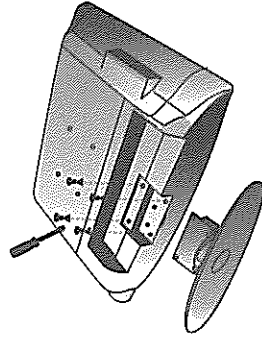

NOTE:

*Mounting interface dimensions(200mm*100mm)

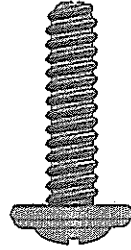

* Screw Size: M6×14mm

Troubleshooting

No power

- Make sure the TV and the power cord are connected correctly.
- Check if you pressed POWER on the remote control unit. If the indicator in the front panel is red, press POWER on the remote control or the front control panel.

LCD TV does not operate

- External influences such as lightning or static electricity may cause improper operation. In this case, operate the unit after first turning on the power, or unplugging the AC cord and plugging it in again after 1 to 2 minutes.

Power is cut off suddenly

- Check if the off timer or sleep timer are set.
- The unit's internal temperature has increased. Remove any objects blocking the vents and clean them to remove dust.

Remote control unit does not operate

- Check if the batteries are inserted with the polarity(+, -)correctly aligned.
- Check if the batteries are discharged. Please replace with new batteries.
- Make sure that you do not use the remote control under strong or fluorescent lighting.
- Check if there is a fluorescent light illuminated near the remote control sensor.
- The path of the remote control beam may be blocked; please make sure the path is clear and that remote control is aimed at the remote control sensor in the TV.

Picture is cut off /with side bar screen

- Check if the image position is correct.
- Check if the screen mode adjustments such as picture size are set correctly.

Strange colour, light colour, or colour misalignment

- Is the room too bright? The picture may look dark in a room that is too bright.
- Check the input signal setting.

CAUTION: If the set is not going to be used for a long period, such as during a vacation, remove the plug from the wall outlet to economise power. (If the TV set is plugged in, a slight current still flows, even the power button is in OFF position.)

Handling the LCD screen

- Direct sunlight on the LCD screen can cause damage to the screen. Take care when you are placing the television near a window.
- Do not push or scratch the LCD screen. Do not place heavy objects on the LCD screen. Those may cause the screen to lose conformity or cause the LCD panel to malfunction.
- If the TV is used in a cold place, fuzzy image may appear on the screen. This is not a malfunction. The screen will be normal as its temperature rises to the normal operating level.
- If a still picture is displayed for a long period of time on the television screen, ghosting may occur for a while. The ghosting will eventually disappear.
- Displaying a static image for a long period of time on the television screen may cause burn in.
- If the LCD panel becomes warm during operation, this is normal and not a malfunction.

Handling of broken glass and liquid crystal leakage

If the LCD panel is damaged, crystalline liquid leakage may occur, or scattered broken glass may result. Do not touch broken glass or crystalline liquid (which is toxic) with bare hands that have cuts or skin irritation as poisoning may result. If any crystalline liquid gets into mouth or eyes, rinse thoroughly with clean water and consult your doctor.

Table of Content

Overview of the LCD TV.....	1
Features.....	1
List of Parts.....	1
Product Components.....	2
Front View.....	2
Rear View.....	3
Remote Control.....	4
Getting started.....	6
Inserted the Remote Control Batteries.....	7
Connecting Power.....	7
Cable Connections.....	8
Basic Operations.....	10
EPG.....	11
Select Input Source.....	11
Using the OSD Menu.....	12
Channel Menu.....	12
Picture Menu.....	14
Sound Menu.....	15
Time Menu.....	16
Lock Menu.....	17
Setup Menu.....	19
PC Mode.....	19
Recording Function.....	21
Media Operation.....	22
Photo.....	22
Music.....	24
Movie.....	25
Text.....	27
Specifications.....	28
Troubleshooting.....	29
Wall Mount Installation.....	30

Specifications

I/O ports	
Active screen size	26inches
Aspect ratio	16:9
Response time	5.8ms
Resolution	1366*768
TV Functions	
Return	√
Number of channel	200
Standards	BG, DK, I
Color system	PAL, SECAM
AV	
Progressive scan	√
3:2:2:2pull down	√
Noise reduction	√
Audio	
Speaker	2
Audio power	5w+5w
Audio mode	Standard, Music, Movie, Sports, Personal
Audio adjustment	√
Function	
Zoom mode	16:9,4:3,zoom1,zoom2
Video mode	Dynamic, Standard, Mild, Personal
OSD languages	English, Espanol, Francais, Deutsch, Portugues, Italiano
No signal auto off	15min
Other	
User manual	√
Dimensions(HWD)	493mm×662mm×233mm
Packing size(HWD)	590mm×755mm×215mm
Gross weight	10.3kg
Power consumption	62w

* All specifications are subject to change without notice

Basic Function (Text)

Press DISPLAY button to display the function menu.



Prev. Page
Press ◀ / ▶ button to select Prev. Page, press OK to display the previous page.



Next Page
Press ◀ / ▶ button to select Next Page, press OK to display the next page.



Prev.
Press ◀ / ▶ button to select Prev., press OK to display the previous text.



Next
Press ◀ / ▶ button to select Next, press OK to display the next text.



 
Stop
Press ◀ / ▶ button to select Stop, press OK to stop.



Music
Press ◀ / ▶ button to select Music, press OK to play background music.



Playlist
Press ◀ / ▶ button to select Playlist, press OK to enter.



Info
Press ◀ / ▶ button to select Info, press OK to enter. You can see the detailed information of the text.

Overview of the LCD TV

Congratulation on purchasing the TECO LCD Colour Television. This product has been designed to provide you with a variety of audio and video experience, along with an easy and convenient connection. This LCD television enables you to watch broadcast or cable television, channels, connect a VCR, VCD or DVD player to watch your favorite movies or connect to a computer. The television is equipped with convenient control buttons and a handy remote control to let you adjust the television settings and customize the television preferences through an easy-to-use on screen menu system.

Features

Enjoy the versatility of your LCD TV with its wide variety of features:

- Colour active matrix TFT LCD TV with remote control
- Safe, sturdy construction
- Maximum resolution: 1366 x 768
- Audio / Video support:
 - HDMI input
 - RF input
 - YPbPr input
 - S-Video/Audio input
 - PC input
 - PC Audio input
 - AV input
 - Coaxial output
 - USB
- On-Screen Display (OSD) menu system
- Built-in 2 speakers

List of Parts


When you unpack this LCD TV, make sure the box contains the following items:

- LCD Colour Television
- Remote Control (with batteries)
- Power Cord
- User Manual
- Warranty Card
- Stand
- Stand Screws (QTY6)


If any of these items appears to be missing or damaged, please contact TECO on 1300 660 037 for assistance.

Product Components

Front View

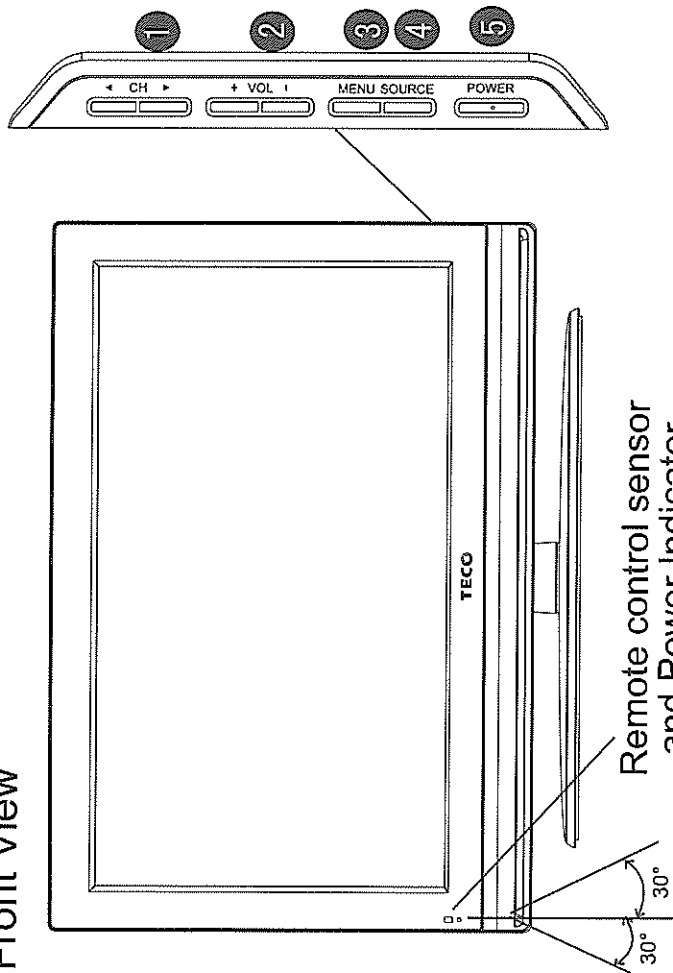


Remote control sensor and Power Indicator

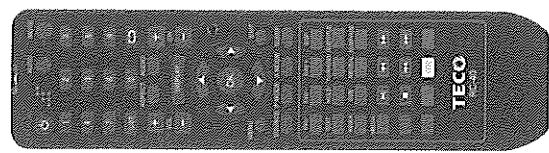

- ① **CH** ◀ ▶ Increase or decrease channel numbers.
- ② **VOL** + / - Increase or decrease the volume.
- ③ **MENU** (OSD). Press the button to enter On Screen Display
- ④ **SOURCE** Switch among the input sources.
- ⑤ **POWER** Turn the TV ON or OFF.

Basic Function (Movie)

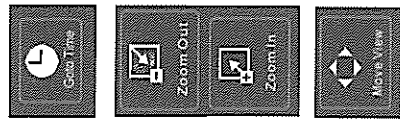


Press ◀ / ▶ button to select Goto Time, press OK to enter. You can set the time to start playing.

Zoom in/Zoom Out
You can choose to enlarge or reduce the picture.

Move View
If the picture is big enough to surpass the screen, you may use this function to move the picture.

TEXT

Press ◀ / ▶ button to select TEXT in the main menu, then press OK button to enter. Press MENU button to return back to the previous menu and EXIT button to quit.

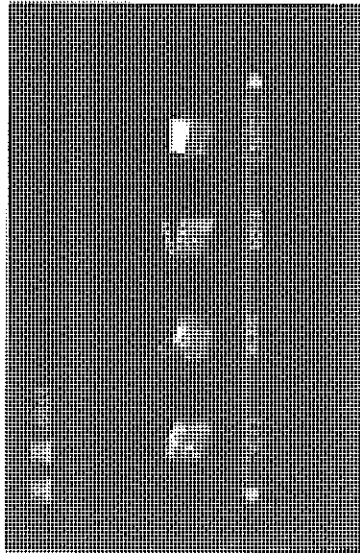

Basic Function (Movie)

Press DISPLAY button to display function menu.



Pause
Press ◀ / ▶ button to select Pause option, press OK to interrupt the movie briefly.



FB
Press ◀ / ▶ button to select FB, press OK to display the movie fast back.



FF
Press ◀ / ▶ button to select FF, press OK to display the movie fast forward.



Prev.
Press ◀ / ▶ button to select Prev., press OK to display the previous movie.



Next
Press ◀ / ▶ button to select Next, press OK to display the next movie.



Stop
Press ◀ / ▶ button to select Stop, press OK to stop.



Repeat All
Press ◀ / ▶ button to select Repeatoption, press OK to select Repeat none/all/1.



Set A
Press ◀ / ▶ button to select Set A, press OK to set a period you want to repeat.



Playlist
Press ◀ / ▶ button to select Playlist, press OK to enter.



Info.
Press ◀ / ▶ button to select info, press OK to enter. You can see the detailed information of the movie.

 



Slow Forward
Press ◀ / ▶ button to select Slow Forward, press OK to adjust. You can slow down the movie speed multiply.




Step Forward
Press ◀ / ▶ button to select Step Forward, press OK to adjust. You can slow down the movie speed by step.

Rear View

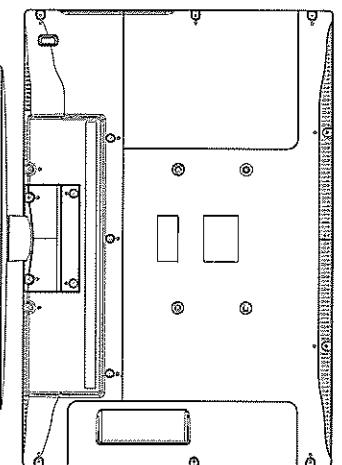


- ① **MEDIA(USB)**
Connect to portable USB device such as USB flash / hard drive device.
- ② **HDMI IN 1/2**
Connect to the HDMI output of your device.
- ③ **PC IN**
Connect to the VGA output of your PC.
- ④ **PC AUDIO IN**
Connect to the audio output of your PC (earphone jack).
- ⑤ **S-VIDEO**
Connect to the s-video output of AV device.
- ⑥ **YPbPr**
Connect to the component output of your component device.
- ⑦ **AV IN 1/2**
Connect to the audio and video output of AV or component device.
- ⑧ **COAXIAL OUT**
Connect to the audio and video input of AV device.
- ⑨ **RF IN**
Connect to the antenna or coaxial cable from local TV.
- ⑩ **POWER AC IN**
Connect to the power outlet.

Remote Control

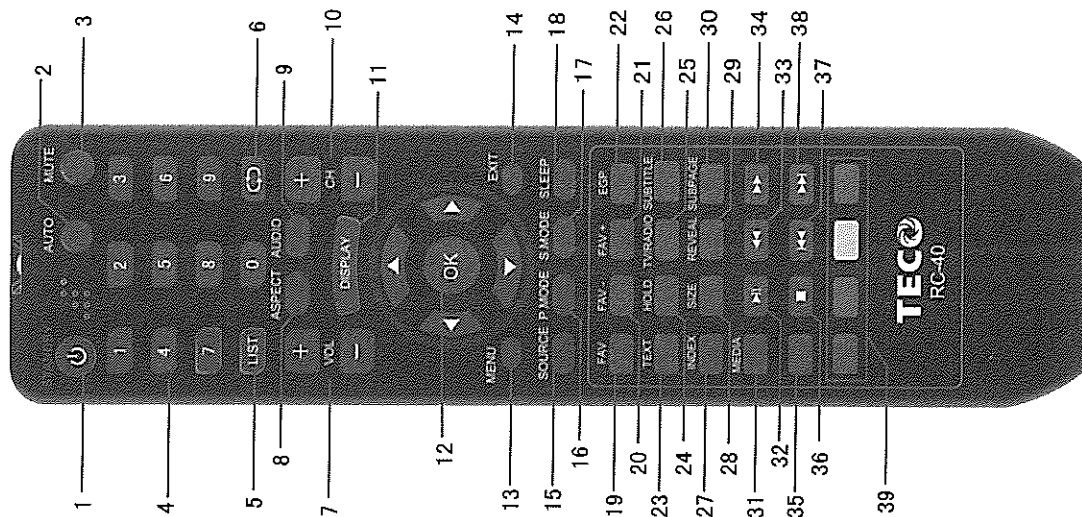

- Notes:
1. If direct sunlight shines directly on the remote sensor, the remote control's operation may be unstable, and the effective range will be reduced.
 2. Do not hit or violently shake the remote control.
 3. Never expose the remote control to high temperature or humidity.
 4. If the remote is not used for an extended period of time, remove the batteries to prevent damage or injury from possible battery leakage.

 

Stop
Press ◀ / ▶ button to select Stop, press OK to stop.



 
Repeat All
Press ◀ / ▶ button to select Repeat, press OK to select Repeat none/all/1.



MUTE
Press ◀ / ▶ button to select MUTE, press OK to display the audio output.



Playlist
Press ◀ / ▶ button to select Playlist, press OK to enter.




Info
Press ◀ / ▶ button to select Info, press OK to enter. You can see the detail information of music.



Press ◀ / ▶ button to select Goto Time, press OK to enter. You can set the time to start playing.

MOVIE

Press ◀ / ▶ button to select MOVIE in the main menu, then press OK button to enter, Press MENU button to return back to the previous menu and EXIT button to quit.

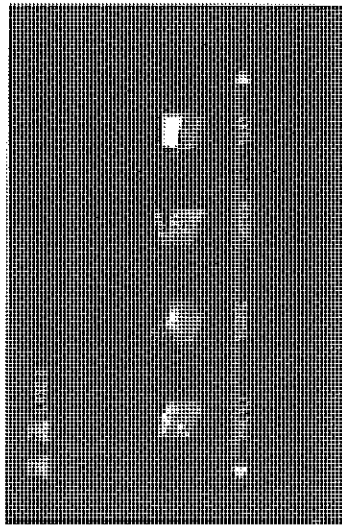

Press ◀ / ▶ button to select drive disk you want to watch, then press OK button to enter. Press ◀ / ▶ button to select return option back to the previous menu.

When highlighting the option you select, the file information will appear on the right and movie will be previewed in the center.


Press media button to play the selected movie.

Press display button to select menu in the bottom you want to run, then press OK button to operate.

Press menu button to go back to the previous menu and exit button to quit the entire menu.

Music

Press **▲ / ▶** button to select MUSIC in the main menu, then press OK button to enter.
Press MENU button to return back to the previous menu and EXIT button to quit.

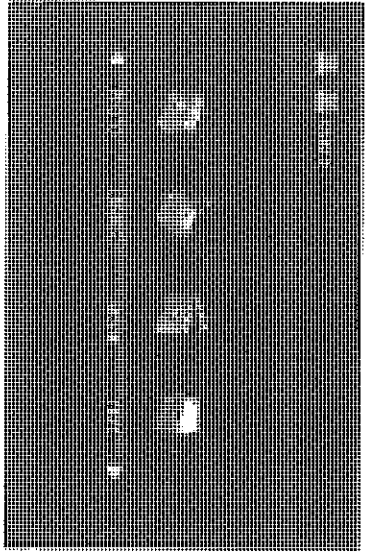

Press **▲ / ▶** button to select drive disk you want to watch, then press OK button to enter.
Press **▲ / ▶** button to select return option back to the previous menu.

Press **▲ / ▶** button to select the file you want to watch in the file selecting menu, then press OK button to add the file to playlist, press media button to display and operate file details.

Press **▲ / ▶** button to select menu in the bottom you want to run, then press OK button to operate.
Press menu button to go back to the previous menu and exit button to quit the entire menu.

When highlighting the option you select, the file information will appear on the right and music will be previewed in the center.

Basic Function (Music)

Press DISPLAY button to display function menu.



Pause
Press **▲ / ▶** button to select Pause option, press OK to interrupt the music briefly.



FB
Press **▲ / ▶** button to select FB, press OK to display the music fast back.



FF
Press **▲ / ▶** button to select FF, press OK to display the music fast forward.



Prev.
Press **▲ / ▶** button to select Prev., press OK to display the previous music.



Next
Press **▲ / ▶** button to select Next, press OK to display the next music.

BUTTON	FUNCTIONS
1. STANDBY	Turn the TV on or off.
2. AUTO	Press to adjust automatically in VGA mode.
3. MUTE	Disable the audio output.
4. NUMBER KEYS	Press number keys to enter channel numbers.
5. LIST	Display the channel list.
6. RETURN	Switch to the previously viewed channel.
7. VOL +/-	Press +/- button to control the volume up or down.
8. ASPECT	Switch the screen ratio: auto, 4:3, 16:9, zoom1, zoom2.
9. AUDIO	Select an audio source for the current programme.
10. CH +/-	Press +/- button to switch the channels.
11. DISPLAY	Display the information of the current channel.
12. OK	Confirm a setting.
13. MENU	Enter or exit the OSD menu.
14. EXIT	Exit the current menu.
15. SOURCE	Select the input source.
16. P.MODE	Press the button repeatedly to select the video mode: dynamic, standard, mild, personal.
17. S.MODE	Press the button to select the audio mode: standard, music, movie, sports, personal.
18. SLEEP	Press the button repeatedly to set the time to turn off the TV.
19. FAV	Press the button to display favorite programme list.
20. FAV -	Press the button to decrease the channel number in the favourite list.
21. FAV +	Press the button to increase the channel number in the favourite list.
22. EPG	Press to display electronic program guide menu.
23. TEXT	Start the text mode.
24. HOLD	Hold freeze the current teletext page on the screen.
25. TV/RADIO	Select the TV/RADIO mode.
26. SUBTITLE	Start the subtitle mode.
27. INDEX	Display a list and information about the teletext pages.
28. SIZE	You can change the picture size in the teletext mode.
29. REVEAL	Display or remove the content that is hidden.
30. SUBPAGE	Display the submenu of the text.
31. MEDIA	Press to play media mode.
32. M	Press to play or stop the current program.
33. ◀▶	Press to scan in reverse.
34. ▶▶	Press to scan in forward.
35. ●	Press to start recording.
36. ■	Press the button to stop the current program.
37. ◀◀	To play the previous chapter, title or track.
38. ▶▶	To play the next chapter, title or track.
39. COLOUR KEYS	Different input source has different functions.


Getting Started

Please refer to the following sections for detailed instructions about connecting the audio/video (AV) device of your LCD TV and view your favourite programmes or movies. These sections describe the basic procedures required to set up your TV for easy and convenient viewing.


Installing the stand

1. To avoid damaging the LCD TV, two or more people should carry the TV.
2. Carefully place the LCD TV faced down on a soft cloth or cushion on a table or flat surface.



1

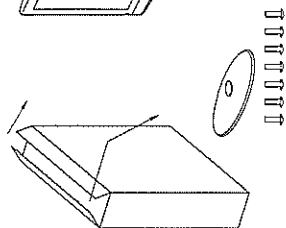

2

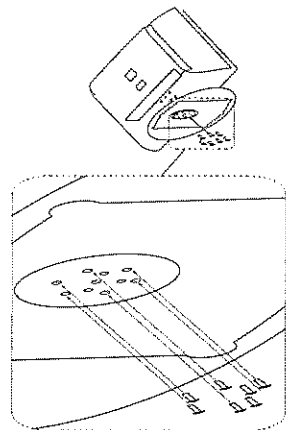

3

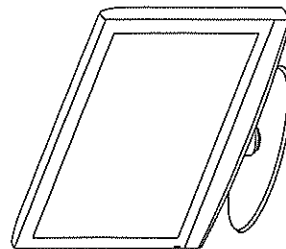 

Stop
Press ◀ / ▶ button to select Stop, press OK to stop.



Repeat All
Press ◀ / ▶ button to select Repeat option, press OK to select Repeat none/all/1.



Music
Press ◀ / ▶ button to select Music, press OK to play background music.



 
Playlist
Press ◀ / ▶ button to select Playlist, press OK to enter.




Info.
Press ◀ / ▶ button to select Info, press OK to enter. You can see the detail information of picture.



Rotate
Press ◀ / ▶ button to select Rotate. You may choose direction revolving or reversed direction revolving



 
Zoom in/Zoom Out
You can choose to enlarge or reduce the picture.



Move View
If the picture is big enough to surpass the screen, you may use this function to move the picture.

Media Operation

Note: Before operating Media menu, Plug in USB device, then press SOURCE button to set the Input Source to Media.
Press **▼ / ▲** button to select Media in the Source menu, then press OK to enter.

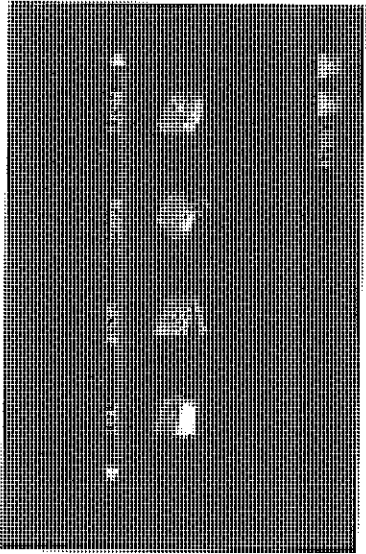

Press **◀ / ▶** button to select the option in the main Media menu, then press OK button to enter.

Photo

Press **◀ / ▶** button to select PHOTO in the main menu, then press OK button to enter.

Press MENU button to return back to the previous menu and EXIT button to quit.

Press **◀ / ▶** button to select drive disk you want to watch, then press OK button to enter.

Press **◀ / ▶** button to select return option to back to the previous menu.

Press **◀ / ▶** button to select the file you want to watch. In the file selecting menu, then press media button to display picture.

When highlighting the option you select, the file information will appear on the right and picture will be previewed in the center.

Basic Function (Photo)

Press DISPLAY button to display function menu.



Pause
Press **◀ / ▶** button to select Pause option, press OK to interrupt the picture briefly.



Prev.
Press **◀ / ▶** button to select Prev., press OK to display the previous picture.

 


Next
Press **◀ / ▶** button to select Next, press OK to display the next picture.


Inserting the Remote Control Batteries

Insert the two AAA batteries provided into the remote control as described below:

Step1 Press and lift the back cover up to open the battery compartment of the remote control.



 
Step2 Insert two AAA size batteries. Make sure to match the (+) and (-) ends of the batteries with the (+) and (-) ends indicated in the battery compartment. Snap the cover back into place.





Connecting Power

1. Connect the supplied power cord to the AC IN Jack on the rear of your TV.
2. Connect the other end of the power cord to a power outlet.

To correctly unplug the power cord: First, press POWER button to turn off your TV; second, turn off the switch from the back of your TV and the main power; and then unplug the power cord.

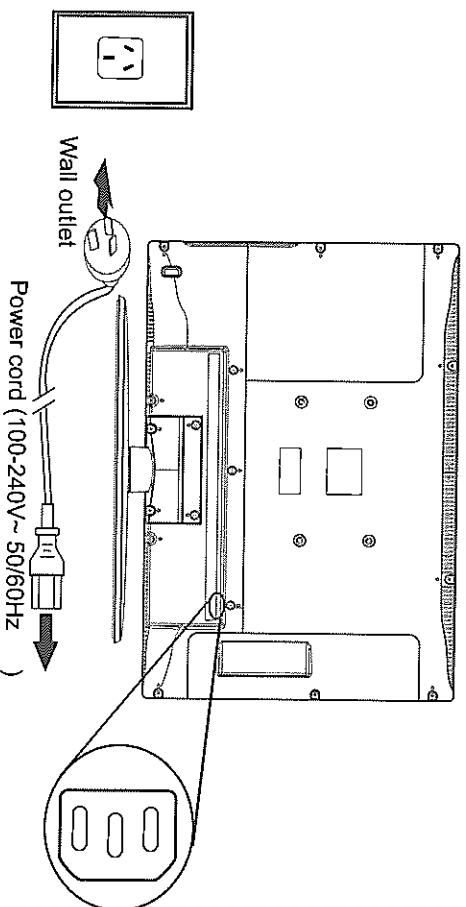

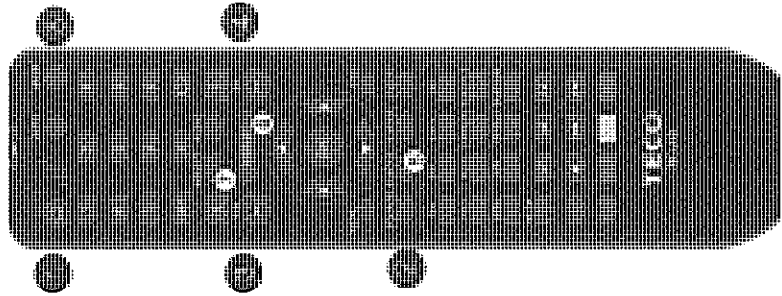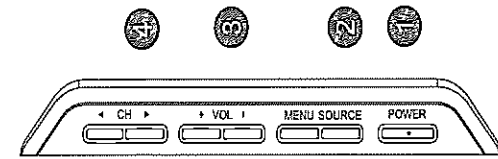

1 Turn on the LCD TV

Press the POWER button on the control panel or remote control to turn on or off the power of LCD TV. The indicator light is blue when power ON and red when power OFF.

2 Switch the input source

Press the SOURCE button on the control panel to switch the video input signal. Press channel + - to select the input source. Then press volume + - to confirm.

Press the SOURCE button of remote control to switch the video input signal source between ATV, DTV, Media, AV1, AV2, S-Video, PC, Component1, Component2, HDMI1, HDMI2.

3 Adjust volume

Press volume + - of control panel or of remote control to increase or decrease volume.

4 Select the channel

Press channel +/- to increase or decrease the channel numbers. Press channel return to switch to the previously viewed channel.

5 Select video mode

Press the P.MODE button to select your favourite video mode: dynamic, standard, mild and personal.

6 Display

Press the DISPLAY button to display the information of the current channel.

7 Select the screen ratio


Press the ASPECT button to switch display modes: auto, 4:3, 16:9, zoom 1, zoom 2.

8 Mute

Press the MUTE button to disable the audio output.

Setup Menu

Press MENU button to display the main menu. Press ◀ / ▶ button to select SETUP in the main menu.

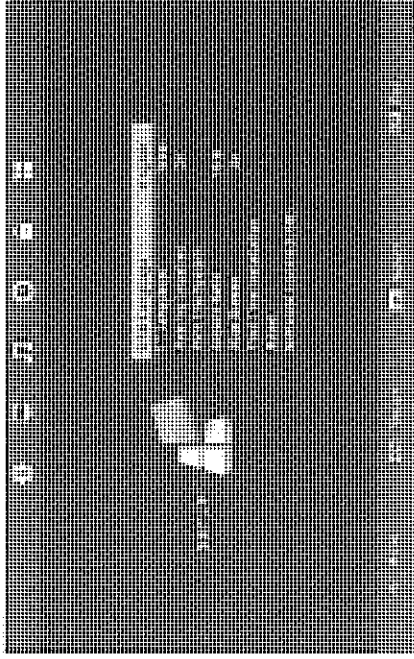

1. Press ▼ / ▲ button to select the option that you want to adjust in the SETUP menu.
2. Press ◀ / ▶ button to adjust.
3. After finishing your adjustment, press MENU button to save and return back to the previous menu.

OSD Language

Press ▼ / ▲ button to select OSD Language, then press OK button to enter sub-menu. Press ▼ / ▲ / ◀ / ▶ button to select OSD language, default setting is English.


Press ▼ / ▲ button to select TT Language, then press OK button to enter. Press ▼ / ▲ to select: West, East, Russian, Arabic, Farsi.

Hearing Impaired


Press ▼ / ▲ button to select Hearing Impaired, then press OK button to select On or Off.

PVR File System

Press ▼ / ▲ button to select PVR File System, then press OK button to enter sub-menu.

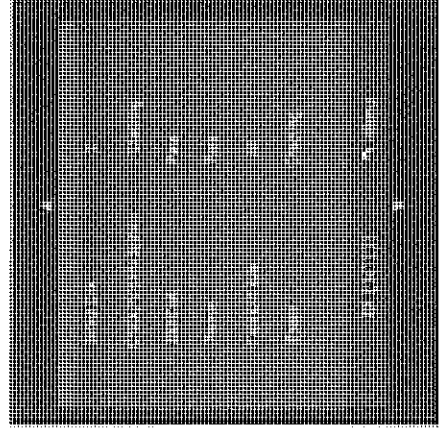

Press ▼ / ▲ button to select Check PVR File System, then press OK button to enter. Then it will check the USB

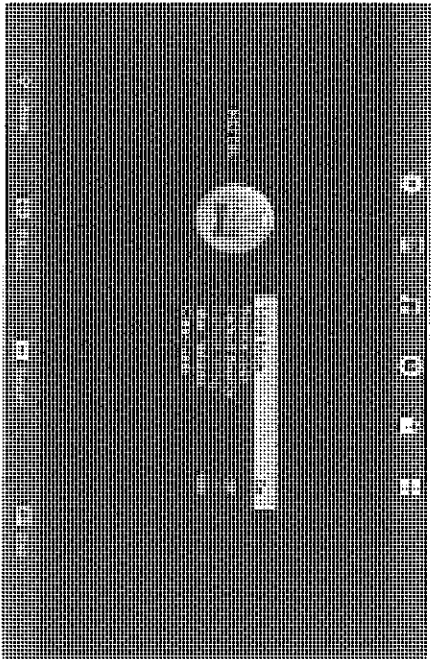

Hotel Mode

Press **▼ / ▲** button to select **Hotel Mode** , then press **◀ / ▶** button to select On or Off.

Source Lock

Press **▼ / ▲** button to select **Source Lock** , press **OK** button to enter the submenu, then press **▼ / ▲** button to select source you want to lock, press **◀ / ▶** button to select Off or On.

Default Source

Press **▼ / ▲** button to select **Default Source**, press **OK** button to enter the submenu, then press button to select source you want. Boot Source If you select Off, the default source will be the last source you select before you turn off the TV.

Default Prog (For ATV Mode)

Press **▼ / ▲** button to select **Default Prog** , then press **◀ / ▶** button to select program you want. Only when you select the TV as the Boot Source , you can select the Boot Channel If you select "Off", the default program will be the last channel you select before you turn off the TV.

Max Volume


Press **▼ / ▲** button to select **Max Volume**, then press **◀ / ▶** button to adjust. After set the Max Volume, The volume can't be adjusted above the Max Volume.

Clear Lock

Press **▼ / ▲** button to select **Clear Lock** , then press **OK** button to clear the setting you have done before.

EPG (only available in DTV mode)

Press the button EPG in the remote control to enter EPG menu.

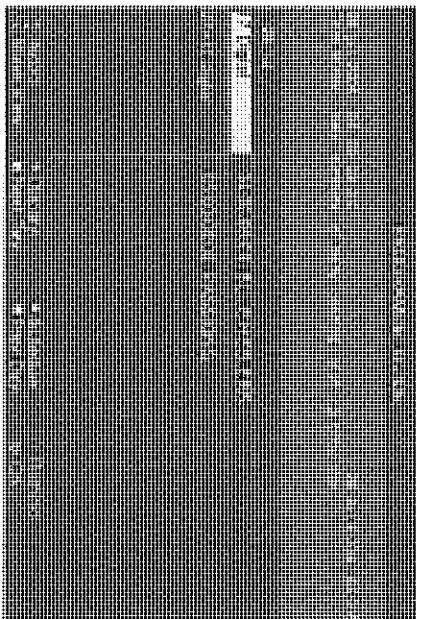

Press the **RED** button to enter the sub-menu . You can choose the time of the appointment to record you want.



Press the **GREEN** button to display the detail information about the program.

Press the **YELLOW** button to display the schedule list that you can see the settings you have done before.

Press the **BLUE** button to set the time you want to remind the program you want to see. Press **EPG** button or **EXIT** button to exit.

Select Input Source

Press the **SOURCE** button to select input source, press **▼ / ▲** to select the input source and then press **OK** button to enter.

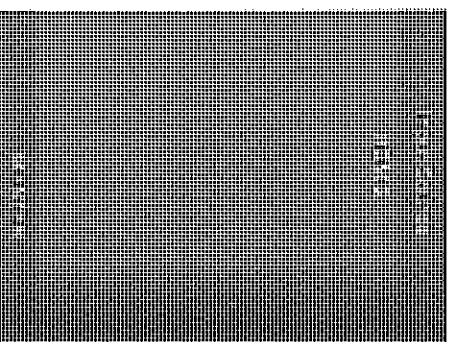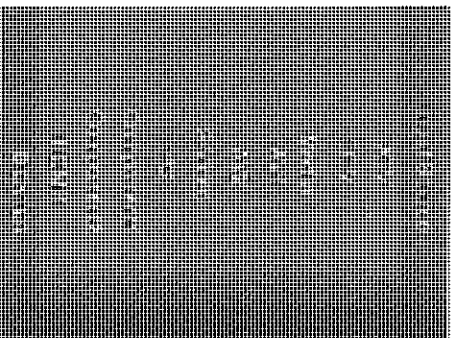


Using the OSD MENU

The On-Screen Display (OSD) menu system provides a quick and simple method to adjust LCD TV base setting. OSD menu can be viewed using both the remote control and the control buttons on the front panel.

Channel Menu

Press **MENU** button to display the main menu.
Press **◀ / ▶** button to select **CHANNEL** in the main menu.

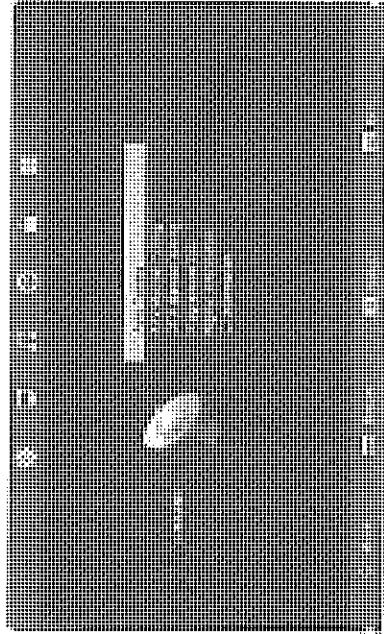

1. Press **▼ / ▲** button to select the option that you want to adjust in the **CHANNEL** menu.
2. Press **OK** button to enter.
3. After finishing your adjustment, press **MENU** button to save and return back to the previous menu.

Auto Tuning

Press **▼ / ▲** button to select **Auto Tuning**, then press **OK** button to start auto search.


ATV Manual Tuning

Press **▼ / ▲** button to select **ATV Manual Tuning**, then press **OK** button to enter sub-menu.
Press **◀ / ▶** button to select channel number you want to store.
Press **▼ / ▲** button to select **Color System**. Press **◀ / ▶** button to select option you want.
Press **▼ / ▲** button to select **Sound System**. Press **◀ / ▶** button to select option you want.
Press **▼ / ▲** button to select **Fine-Tune**. Press **◀ / ▶** button to adjust a suitable tune that make you watch comfortably.

After changes settings of the OSD menus, the new settings are confirmed automatically when OSD picture vanish, even did not press the menu to exit the OSD system.

Lock Menu

Press **MENU** button to display the main menu.
Press **◀ / ▶** button to select **LOCK** in the main menu.

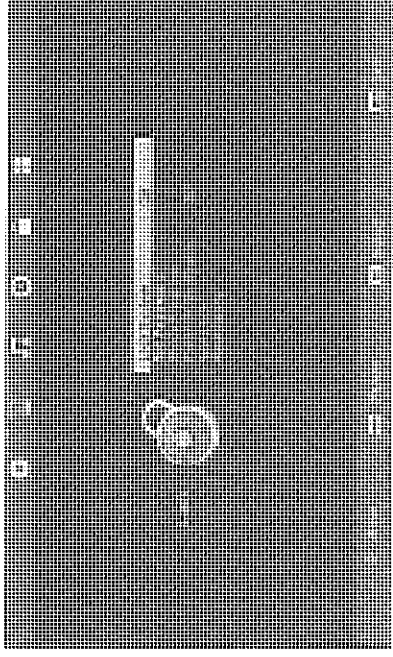

1. Press **▼ / ▲** button to select the option that you want to adjust in the **LOCK** menu.
2. Press **◀ / ▶** button to adjust.
3. After finishing your adjustment, press **MENU** button to save and return back to the previous menu.

Lock System

Press **▼ / ▲** button to select **Lock System**, then press **OK** button and enter password to unlock following settings. Press **◀ / ▶** button to turn On or turn Off **Lock System**. (Default password is '0000'.)
Set Password

Press **▼ / ▲** button to select **Set Password**, then press **OK** button to enter sub-menu to set new password.

Block Program

Press **▼ / ▲** button to select **Block Program**, then press **OK** button to enter sub-menu.

Press **▼ / ▲** button to select the program you want to lock, then press green button on your remote control. (To unlock program, input the password you set.)

Press **OK** button to save setting and **MENU** button to go back to the previous menu.

Parental Guidance

Press **▼ / ▲** button to select **Parental Guidance**, then press **OK** button to enter sub-menu to select. (Available options are: ALL, G, PG, M, MA, AV, R, No Block)

Key Lock


Press **▼ / ▲** button to select **Key Lock**, then press **◀ / ▶** button to select Off or On. When **Key Lock** status is on, you can't use the key panel button.

Hotel Mode

Press **▼ / ▲** button to select **Hotel Mode**, then press **OK** button to enter.

Time Menu

Press **MENU** button to display the main menu.
Press **◀ / ▶** button to select **TIME** in the main menu.

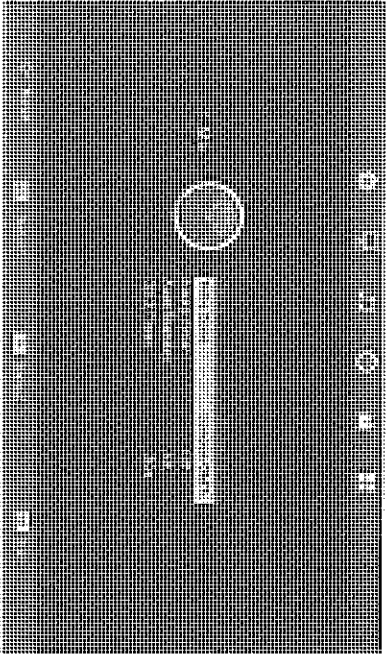

1. Press **▼ / ▲** button to select the option that you want to adjust in the **TIME** menu.
2. Press **◀ / ▶** button to adjust.
3. After finishing your adjustment, press **MENU** button to save and return back to the previous menu.

Time Zone (For DTV Mode)

Press **▼ / ▲** button to select Time Zone, then press **OK** button to enter sub-menu. Press **▼ / ▲ / ▶ / ◀** button to select time zone.

Sleep Timer

Press **▼ / ▲** button to select Sleep Timer, then press **OK** button to enter sub-menu. Press **▼ / ▲** button to select. (Available options are: Off, 10min, 20min, 30min, 60min, 90min, 120min, 180min, 240min).

Auto Standby



Press **▼ / ▲** button to select Auto Standby, then press **OK** button to set the time to turn off the TV: Off, 3H, 4H, 5H (H stands for Hour).

Tip: If the remote control does not operate, it will close down automatically.
If you do any operation, it will reset the time.

NOTE:

The Clock will change with the area which you have selected in the Time Zone.

Press **▼ / ▲** button to select AFC. Press **◀ / ▶** button to select On or OFF.
Press **▼ / ▲** button to select search, then press **OK** button to start tuning.
Press red button on your remote control to save the settings and menu button to hack to the previous menu.

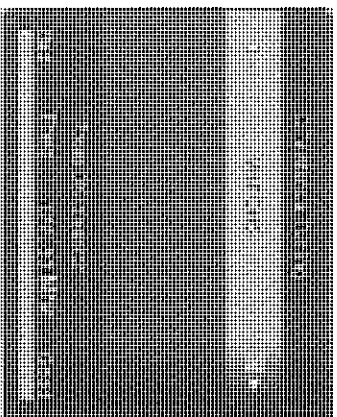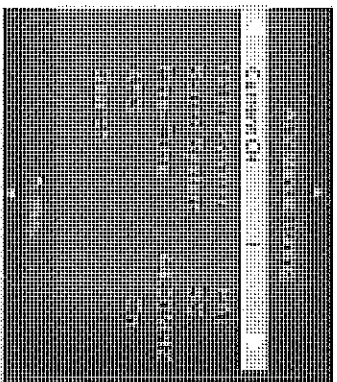


DTV Manual Tuning

Press **▼ / ▲** button to select DTV Manual Tuning, then press **OK** button to enter sub-menu.
Press **◀ / ▶** button to select channel, then press **OK** button to search program.

Program Edit

Press **▼ / ▲** button to select Program Edit, then press **OK** button to enter sub-menu

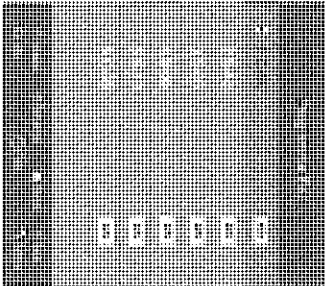

Under ATV Mode


This option has five functions.

- Use **Red** button to delete the current channel.
- Use **Green** button to rename the current channel.
- Use **Yellow** button and the **▲ / ▼** arrow button to move the current channel.
- Use **Blue** button to skip the current channel.
- Use **FAV** button to set the current channel for favour.

Under DTV Mode


This option has three functions.

- Use **Red** button to delete the current channel.
- Use **Blue** button to skip the current channel.
- Use **FAV** button to set the current channel for favor.

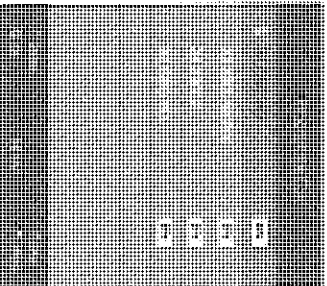

Picture Menu

Press **MENU** button to display the main menu.
Press **◀ / ▶** button to select **PICTURE** in the main menu.

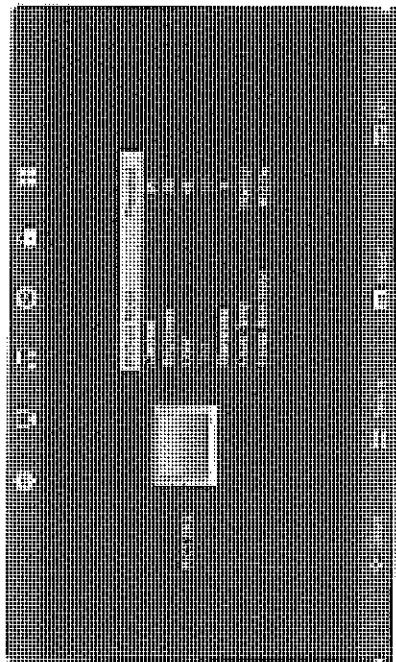

1. Press **▼ / ▲** button to select the option that you want to adjust in the **PICTURE** menu.
2. Press **OK** button to enter.
3. After finishing your adjustment, press **MENU** button to save and return back to the previous menu.

Picture Mode

Press **▼ / ▲** button to select **Picture Mode**, then press **OK** button to enter sub-menu. Press **▼ / ▲** button to select. (Available Picture mode: Personal, Dynamic, Standard, Mild).

You can change the value of contrast, brightness, colour and sharpness when the picture is in personal mode.

TIP: You can press **P.MODE** button on the remote control to change the **Picture Mode** directly.

Contrast/Brightness/Color/Tint/Sharpness

Press **▼ / ▲** button to select option, then press **OK** button to enter sub-menu. Press **◀ / ▶** button to adjust.

NOTE:

Contrast: This item can adjust the highlight intensity of the picture, but the shadow of the picture is invariable.

Brightness: This item can adjust the optical fiber output of the entire picture, it will effect the dark region of the picture.

Colour: This item can adjust the saturation of the colour based on your own like.

Tint: This item may use in compensating color changed with the transmission in the NTSC code.


Sharpness: This item can adjust the peaking in the detail of the picture.

Colour Temp: This item can increase or reduce warm colour of the picture personally (red), and the cool colour personally (blue) according to what you like. The choice of **COOL**, that means it will increase the blue tone for the white. The choice of **NORMAL**, that means it will increase the normal colours for the white. The choice of **WARM**, it will increase the red colour for the white.

Noise Reduction: This item can reduce the sound intensity.

Sound Menu

Press **MENU** button to display the main menu.
Press **◀ / ▶** button to select **SOUND** in the main menu.

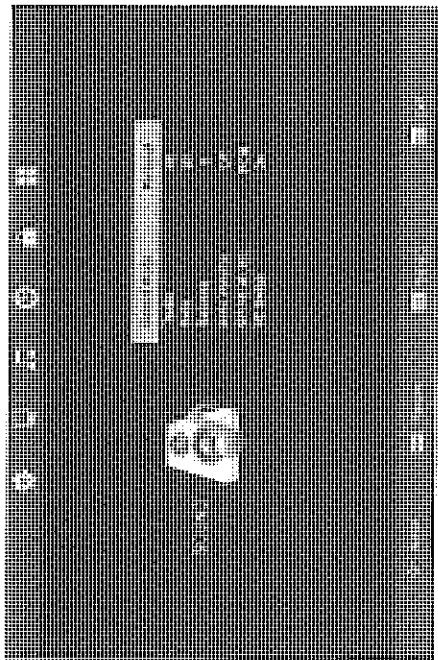

1. Press **▼ / ▲** button to select the option that you want to adjust in the **SOUND** menu.
2. Press **◀ / ▶** button to adjust.
3. After finishing your adjustment, press **MENU** button to save and return back to the previous menu.

Sound Mode

Press **▼ / ▲** button to select **Sound Mode**, then press **OK** button to enter sub-menu. Press **▼ / ▲** button to select. (Available Sound mode: Standard, Music, Movie, Sports, Personal).

You can change the value of Treble and Bass when the sound is in **USER** mode.

TIP: You can press **S.MODE** button on the remote control to change the **Sound Mode** directly.

Treble/Bass/Balance

Press **▼ / ▲** button to select option, then press **OK** button to enter sub-menu. Press **◀ / ▶** button to adjust.

Auto Volume

Press **▼ / ▲** button to select **Auto Volume**, then press **OK** button to select **On** or **Off**.

SPDIF MODE

Press **▼ / ▲** button to select **SPDIF MODE**, then press **OK** button to select **Off**, **PCM** or **Auto**.

Press **▼ / ▲** button to select **AD Switch**, then press **OK** button to enter sub-menu. Press **◀ / ▶** button to select **On** or **Off**. Press **▼ / ▲** button to select **AD Switch**, then press **◀ / ▶** button to adjust volume.

TIP: **AD** is short for **Audio Description**. When you select **On**, it can help the **Visual** impaired by the assisted audio track that use the voice to describe the picture.

NOTE:

Balance: This item can adjust the speaker's output, it enables you to hear best from your position.
Auto Volume: This item is for reducing the difference between channel and program's volume automatically. This function will also reduce the fluctuation of the sound.

Installation Instructions


You can choose to put your dryer:

- on the floor.
- on a work-bench.
- on a wall, upside down or upright, using the included mounting kit.
- on top of a front load washing machine (using a stacking kit available as an optional extra).


The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer in such a way that a full opening of the tumble dryer door is restricted.

Stacking Kit

You can use a stacking kit if you want to mount your dryer on top of a Simpson front load washing machine. Use the kit part number DKSK03. Refer to the kit instructions on how to install.

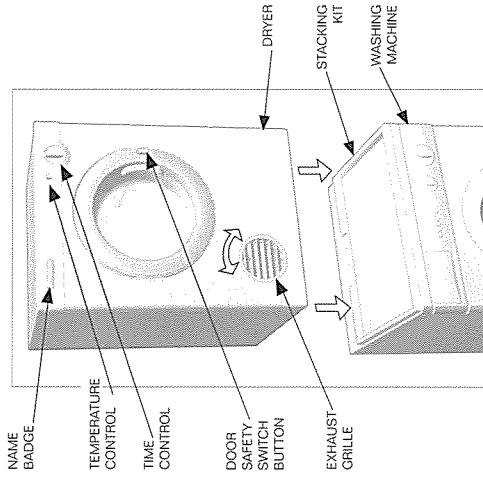

The exhaust grille has a range of positions, which allows you to select the optimum exhaust air angle. Simply hold the grille and rotate it until it hits the built-in stop.

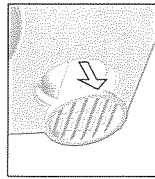

Name Badge

You can invert the name badge when you want to mount your dryer upside down on the wall. Use a suitable tool (such as a thin bladed tool). Unclip the badge from the panel, invert and clip back.

Do not install your dryer in a cupboard or small un-vented laundry unless you are using a venting kit.


There are 2 VENTING OPTIONS

- front
- rear - using a venting kit (optional extra)


Venting Kit

DVK005 - Through the wall
 DVK006 - Universal flexible hose
Important: Use only kits approved by Electrolux Home Products Pty Ltd with your dryer. Contact the Electrolux Home Products Pty. Ltd. Spare Parts Centre for the list of approved kits. The exhaust duct must not exceed 2 metres in length and 100mm in diameter.
 If connecting the dryer to a common ducting system, safety advice should be requested from the manufacturer.

If you choose to use an optional vent kit, the exhaust grille at the front of the dryer will need to be replaced with the outlet cover from the back of the dryer. Gently prise open the grille, using a thin bladed tool. Next, remove the cover from the back and clip it into the grille space at the front. The exhaust grille is not required when using a vent kit.

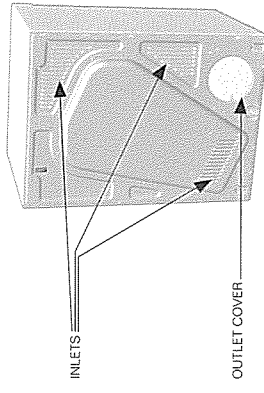

You can position the vent kit at the back of the dryer to remove air upwards or sideways.

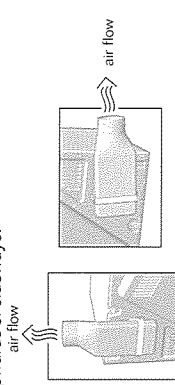


Inlet and outlet points need clear airflow to prevent overheating, so ensure there is adequate ventilation. (i.e. open window or external door.)

If a venting kit is used and the exhaust is discharged out of the room, there must be adequate ventilation to avoid the back flow of gases into the room from appliances burning other fuels, including open fires, when operating the tumble dryer. This is not applicable where a venting hose is directed to an open window. The exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.

Quick 5 Step Operating Guide

1 Load your dryer loosely until it is no more than **TWO THIRDS FULL**. Clothes must tumble freely in a dryer. Don't cram them in. Wet clothes fluff up when dry.

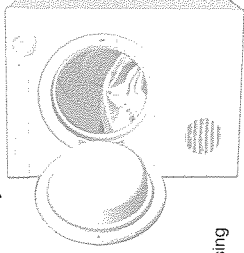


Overloading will:

- Reduce efficiency
- Increase drying time
- Increase the risk of creasing

Do not load clothes or other articles which are dripping wet into your dryer.

2 Select one of the two (2) temperature settings.

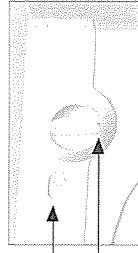

- **'Warm'** for delicate items which can shrink, such as synthetics, underwear, etc.
- **'Hot'** for heavy, durable items such as towels and flannelette sheets.

Useful Hints


- Never tumble dry the following: Delicate items such as net curtains, woollen, silk, fabric with metal trim, nylon tights, bulky materials such as anoraks, blankets, eiderdown sleeping bags, feather quilts and any item containing rubber foam or materials similar to foam rubber.
- Do not place in your dryer undergarments such as bras and corsets that contain metal reinforcements. Your dryer may be damaged if metal parts were to come loose from the garment. Place such items in a bag designed for this purpose.
- For nylon socks and other small light items, place them in a bag designed for this purpose. This will stop these items being caught in the lint filter cavity.
- Check and empty pockets. Clips, pens, nails and pins can damage both the dryer and your clothes. Other items such as matches or cigarette lighters will cause a fire.
- Close all press studs, hooks, eyes and zips that may catch on something else. Tie all belts and apron strings to prevent tangling.
- Drying time will depend on fabric type and construction, load size and wetness. Save time and money and always spin the load as dry as possible in your washing machine.

3 Select the drying time.

Turn the knob control in the direction of the arrow only (clockwise). Turning the knob in opposite direction (counter-clockwise) will damage the timer. This damage will not be covered by product warranty.

4 Switch On

The dryer will not operate unless the safety button on the door is fully pressed in.

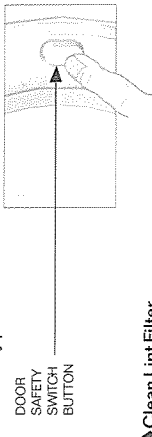

5 Clean Lint Filter

After every load clean the lint filter located at the front of your dryer to reduce drying times and avoid overheating.

STANDARD FEATURES

Reversing Action

The drum is designed to turn one minute in each direction, clockwise and anti-clockwise. This reduces tangling and gives more even drying in a shorter time.

Cooling Down

At the end of the drying cycle, there is automatically a time of no heat, to cool down the load and minimise creasing.

- Drying time will also be affected by voltage fluctuations, room temperature and humidity. Clothes will dry more slowly on a cool or humid day.
 - For best results, sort the load according to fabric types. Such as heavy items which may take longer to dry, eg towels, flannelette sheets etc, than ones which dry quickly, eg poly/cotton shirts and sheets.
 - Avoid drying dark clothes with light coloured items such as towels as lint will show on the dark clothes.
- Note: Some fabrics will collect lint from other clothes and items. Separate the lint 'givers' and the lint 'collectors' to minimise this problem.**
 Clothes that give lint include towels, nappies, chenille. Clothes that collect lint include corduroy, synthetics and permanent press garments.
- If individual items are still damp after drying, set a 30 minute post drying time. This will be necessary particularly for multilayered items (eg collars, pockets, etc).
 - Always clean the lint filter - this will reduce drying time and save you money.

Useful Hints, Troubleshooting & Accessories

USEFUL HINTS (continued)

- The laundry must be thoroughly spun before tumble drying.
- Easy-care items eg shirts, should be briefly pre-spun before drying (depending on the crease resistance approximately 30 seconds)
- To avoid static charge when drying is completed, use either a fabric softener when you are washing the laundry or a fabric conditioner specifically for tumble dryers.
- Remove the laundry when the dryer has finished drying.
- Do not over-dry laundry, this avoids creasing and saves energy.
- Clothes or towels containing sand or grit should be washed first.

To help you, here is a list of the average weights of some common laundry items.

Sheet	700 - 1000g
Tablecloth	400 - 500g
Kitchen towel	70 - 120g
Table napkin	50 - 100g
Towelling hand towel	150 - 250g
Bathrobe	1000 - 1500g
Men's shirt	200 - 300g
Pillowcase	100 - 200g
Men's pyjamas	400 - 500g
Ladies nightdress	200 - 250g
Bath towel	300 - 400g

TROUBLESHOOTING

Check the points listed here before you call for help, and make sure that you have followed the **Important Safety Information** on pages 2 & 3.

If you can't start your dryer, check these probable causes.

- Plug is not firmly in socket, or power not turned on.
- You have blown a fuse. Check that power point with another appliance.
- You have not closed the dryer door or pushed in the door safety switch button.
- You have not turned the control knob to the setting you want.

If your clothes are still wet:

- The selected drying time was insufficient. Turn the control knob to a longer time setting.
- Longer time may be needed when the room temperature is 10°C or less.
- Check that the lint filter is not blocked.
- Check to see that you have read all the instructions carefully.
- Contact the Service Centre if you are still having problems. Write down the model and serial numbers and the date of purchase before you ring. The Service Centre will need this information.

Important

To operate efficiently the clothes dryer must have an unrestricted air supply and exhaust ventilation.

Service calls resulting from installation where ventilation is restricted are not covered by warranty.

THE COST OF THIS TYPE OF CALL WILL BE CHARGED TO THE CUSTOMER.

Should you require further instructions in the use and care of your clothes dryer please contact the CUSTOMER CARE CENTRE on the phone numbers listed:

Australia..... **1300 363 640 8am to 7pm EST & 8pm EDST**
Monday to Friday
New Zealand..... **(09) 573 2384 8am to 5pm**
Monday to Friday

If you have a warranty or spare parts enquiry you should call the number listed on page 7.

ACCESSORIES


You can buy both the venting kits and the stacking kit (as mentioned on page 4) from your local appliance shop or Electrolux Home Products Pty Ltd, Spare Parts Distributor.

Important Safety Instructions


LINT BUILD-UP IS A FIRE HAZARD

A clean lint filter reduces drying times, saves energy and avoids overheating. Overheating may also damage your clothes.


What happens if I forget to clean the lint filter?

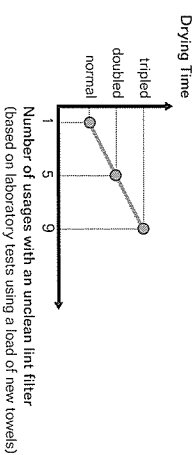


The lint filter is located at the front of your dryer at the bottom of the door opening.

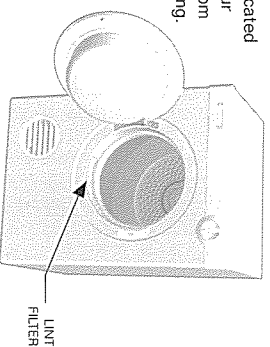

You must clean this lint filter after every load.

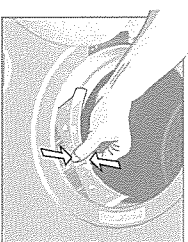

To remove the lint filter open the door and press the two pads together. Pull the lint filter out of the pocket.

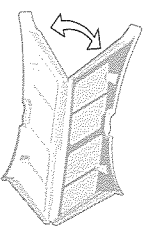

Open apart the lint filter and wipe or peel off the lint. Ensure the lint filter 'clicks' when replacing. It can be inserted into the pocket either way.

- Never operate your dryer without the lint filter.
- Do not allow lint to build up around your dryer.
- A torn or damaged lint filter must be replaced immediately.
- Overloading can increase lint build-up because the airflow is reduced.

To avoid potential fire hazards, we recommend that you pay a qualified service technician to periodically clean your dryer. You must do this also when you change your mounting from upright to inverted, or vice versa.

 
DRYING GUIDE

Your load, when dry must not exceed the rated capacity.

- 4kg for the 4kg Machine
- 5kg for the 5kg Machine
- 6kg for the 6kg Machine

(See page 6 for a table of average weights of laundry items)

Always check your labels for the drying symbols which the International Care Labelling Code now uses.

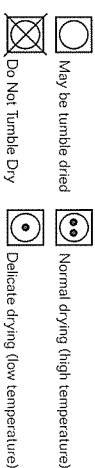

Permanent press and synthetics - take out as soon as the dryer stops to reduce wrinkles.

- Woollen articles - not recommended. Pull them to their original shape, then dry them flat.
- Woven and loop knit materials - may shrink, by varying amounts, depending on their quality. Do not use the 'hot' setting for these fabrics. Always stretch them out immediately after drying.

Fibre or leather materials - always check the manufacturer's instructions.

Baby clothes and night gowns - acrylic clothing or sleepwear use only on the 'warm' setting.

- Rubber and plastics - Do not dry any items made from or containing rubber or plastics, such as aprons, bibs, babies' water-proof napkins, curtains, tablecloths, shower caps, clothes fitted with foam rubber pads, pillows, galoshes, or rubber coated tennis shoes.

Fibreglass - not recommended. Glass particles left in the dryer could be picked up by your clothes the next time you use the dryer, and irritate your skin.

- During the drying cycle, if you want to
 - add or take out clothes, or
 - check the dryness of the load,
 turn down the timer to 'Airring' for at least one minute before opening the door. This is to prevent scorching or possible self combustion of the fabric.

Fabric softeners or similar products should not be used in a tumble dryer to eliminate the effects of static electricity unless this practice is specifically recommended by the manufacturer of the fabric softener or product.

Note: We strongly advise against the use of fabric conditioners of the sheet type that are added to the clothes in the drum. These products may lead to rapid blockages of the lint filter and inefficient operation of your dryer.

Contents

Conditions of Use	page 2	Quick 5 Step Operating Guide	page 5
Important Safety Information	page 2	Useful Hints	page 5
Dryer Safety	page 2	Useful Hints (continued)	page 6
Fire Hazards	page 2	Troubleshooting	page 6
Cleaning the Lint Filter	page 3	Accessories	page 6
Drying Guide	page 3	Warranty	page 7
Installation Instructions	page 4	Purchase Details	page 8

Conditions of Use

This appliance is intended to be used in household and similar applications such as:


- Farm Houses.
 - By citizens in serviced apartments, holiday apartments and other residential type environments.
- It must not be used for purposes other than those for which it was designed.

Important Safety Instructions

DRYER SAFETY

Failure to follow these safety instructions could damage the dryer or your clothes. You may then not be covered by warranty for this damage.

Only plug this appliance directly into an AC power supply, which is properly earthed and has the correct voltage. See the serial number sticker located on the top of the door opening for voltage information.

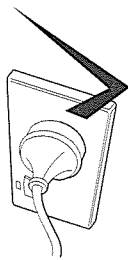

CAUTION: If this appliance is supplied from a cord extension set or electrical portable outlet device, the cord extension set or electrical portable outlet device must be positioned so that it is not subject to splashing or ingress of moisture. For safety reasons we strongly advise against the use of double adaptors, extension cords or power boards.



This tumble dryer is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance.

IMPORTANT: If the electrical cord of this appliance is damaged, it must be replaced by the Manufacturer, Authorised Service Agent or similarly qualified person in order to avoid a hazard.

These dryers are for drying clothes, towels and linen at home. Do not use them for any other purpose.

FIRE HAZARDS

Some fabrics are not suitable for tumble drying. The following **MUST NOT** be placed in your dryer due to the risk of a fire or an explosion:

- Items that have been spotted or soaked with vegetable oil, cooking oil, sultan oil, linseed oil, salad oil, lubrication oil or grease. Oil affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If heat cannot escape, the items can become hot enough to ignite. Piling, stacking, or storing oil-affected items can prevent heat from escaping and create a fire hazard. If it is unavoidable that fabrics that contain vegetable or cooking oil, or have been contaminated by hair care products be placed in a tumble dryer, they should first be washed in hot water with extra detergent. This will reduce, but not eliminate the hazard. The 'cool down' cycle of tumble dryers should be used to reduce the temperature of the items. They should not be removed from the tumble dryer or piled while hot.

- Items that have previously been cleaned in, washed in, or spotted with petrol/gasoline, industrial chemicals used only for cleaning, dry-cleaning solvents or other flammable or explosive substances. Highly flammable substances commonly found around the house include acetone, (nail polish remover) denatured alcohol, petrol/gasoline, kerosene, some spot removers, turpentine, waxes and wax removers. Items containing foam rubber (also known as latex foam) or similarly textured rubber-like materials. Foam rubber materials can produce fire by spontaneous combustion when heated.

- Rubber-backed articles, clothes fitted with foam rubber pads, pillows, rubber boots and rubber-coated sports shoes.

For your safety, and to reduce the risk of fire or an explosion, **DO NOT** store or use petrol or other inflammable vapours and liquids near your dryer.

Electrolux Warranty

FOR SALES IN AUSTRALIA AND NEW ZEALAND
APPLIANCE: SIMPSON DRYER

This document sets out the terms and conditions of the product warranties for Electrolux Appliances. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should you require service for your Appliance.


- In this warranty, 'acceptable quality' as referred to in clause 10 of this warranty has the same meaning referred to in the ACLI.
- 'ACLI' means Trade Practices Amendment (Australian Consumer Law) Act (No.2) 2010.
- 'Appliance' means any Electrolux product purchased by you accompanied by this document;
- 'ASC' means Electrolux' authorised service centres;
- 'Electrolux' means Electrolux Home Products Pty Ltd of 163 O'Riordan Street, Mascot, NSW 2020, ABN 51 004 762 341, in respect of Appliances purchased in Australia and Electrolux (NZ) Limited of 3-5 Niall Burgess Road, Mount Wellington, in respect of Appliances purchased in New Zealand;
- 'major failure' as referred to in clause 10 of this warranty has the same meaning referred to in the ACLI, and includes a situation when an Appliance cannot be repaired or it is uneconomic for Electrolux, at its discretion, to repair an Appliance during the Warranty Period;
- 'Warranty Period' means:
 - where the Appliance is used for personal, domestic or household use (i.e. normal single family use) as set out in the instruction manual, the Appliance is warranted against manufacturing defects in Australia for 12 months and in New Zealand for 24 months, following the date of original purchase of the Appliance;
 - where the Appliance is used for commercial purposes (including being used to directly assist a business or where the Appliance is used in a multi-family communal or share type environment), the Appliance will then be warranted against manufacturing defects in Australia for 3 months and in New Zealand for 3 months, following the date of original purchase of the Appliance;
 - 'you' means the purchaser of the Appliance not having purchased the Appliance for re-sale, and 'your' has a corresponding meaning.

- This warranty only applies to Appliances purchased and used in Australia or New Zealand and is in addition to (and does not exclude, restrict, or modify in any way) any non-excludable statutory warranties in Australia or New Zealand.
- During the Warranty Period Electrolux or its ASC will, at no extra charge if your Appliance is readily accessible for service, without special equipment and subject to these terms and conditions, repair or replace any parts which it considers to be defective. Electrolux or its ASC may use remanufactured parts to repair your Appliance. You agree that any replaced Appliances or parts become the property of Electrolux. This warranty does not apply to light globes, batteries, filters or similar perishable parts.
- Parts and Appliances not supplied by Electrolux are not covered by this warranty.
- You will bear the cost of transportation, travel and delivery of the Appliance to and from Electrolux or its ASC, if you reside outside of the service area, you will bear the cost of:

 - travel of an authorised representative;
 - transportation and delivery of the Appliance to and from Electrolux or its ASC.

Important Notice:

Before calling for service, please ensure that the steps listed in point 13 above have been followed.

FOR SERVICE or to find the address of your nearest state service centre in Australia: Please call 13 13 49 (Australia only)	SERVICE AUSTRALIA  ELECTROLUX HOME PRODUCTS www.electrolux.com.au	FOR SPARE PARTS or to find the address of your nearest state spare parts centre in Australia: Please call 13 13 50 For the cost of a local call (Australia only)
FOR SERVICE or to find the address of your nearest authorised service centre in New Zealand: Please call 0800 10 66 10 (New Zealand only)	SERVICE NEW ZEALAND  ELECTROLUX HOME PRODUCTS www.electrolux.co.nz	FOR SPARE PARTS or to find the address of your nearest state spare parts centre in New Zealand: Please call 0800 10 66 20 (New Zealand only)



Quality kept simple

EZILoader

Key Feature Guide

- Big and easy controls
 - A big door
 - Wall mounting kit
 - Front lint filter
 - Front venting
 - Optional rear venting
 - Economical operation*
 - Faster drying
 - Improved safety
- *Based on 11.6c/kWh - check with your local energy supplier for your local rate

for EZI use even when the dryer is wall mounted
 32cm wide opening window door for EZI loading and viewing
 EZI to install with the included wall mounting brackets
 for EZI access and to encourage safe and economical operation
 EZI venting of moist exhaust air away from your laundry walls
 with our vent tube kit you can exhaust out of your laundry
 dry a 4kg load for 40c, a 5kg load for 50c, or a 6kg load for 60c
 dry 6kg in the time that 4.5kg dry on others
 the heater element is now located away from the drum

Product Date of Purchase

Model Serial Number

Purchaser's Name

Full Postal Address

.....

Retailer (Shop)

Address

Please keep this book and your Proof of Date of Purchase to show the technician if you need service during the warranty period.


From the Electrolux Group. The world's No. 1 choice.

KITCHEN, CLEANING AND OUTDOOR APPLIANCES



Quality kept simple

EZILoader

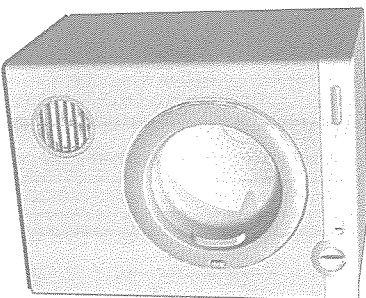

Clothes Dryer Instruction Booklet

Congratulations on your choice of clothes dryer which will give you many years of easy loading and easy drying in the Simpson tradition