 


OSD Menu

4. TIME menu

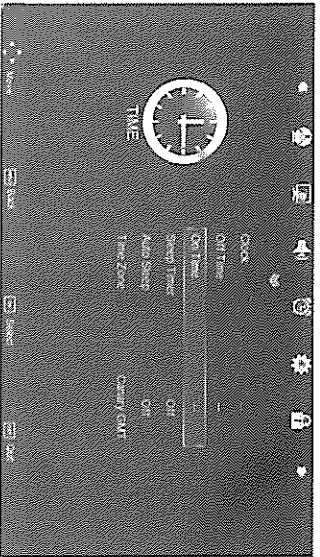

Description

Clock: Use the < and > buttons to select the position, and use the V and A buttons to set the time.

Note: *User can not change time manually during DTV mode, for time is from signal source directly.*

Off Time: Press OK button to enter the submenu, you could set the time when the TV set will be turned off automatically, you could also set the frequency.

On Time: Press OK button to enter the submenu, you could set the time when the TV set will be turned on automatically, you could also set the frequency, volume and program.

 
Sleep Timer: Allows you to setup the sleep timer among: 10min, 20min, 30min, 60min, 90min, 120min, 180min, 240min and off.

Auto Sleep: Turn on/off the auto standby function.

Time Zone: Allows you to select the time zone.

OSD Menu

5. OPTION menu

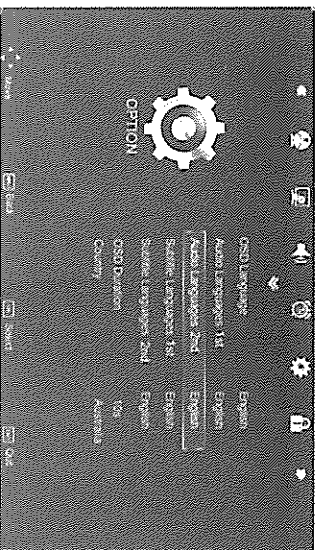

Description

OSD Language: Allows you to select menu language.

Audio Language 1st/2nd (can be selected in DTV mode): Allows you to select first and second audio language.

Subtitle Language 1st/2nd (can be selected in DTV mode): Allows you to select first and second subtitle language.

 
OSD Duration: Allows you to setup the time of the menu display on the screen among: 5s, 10s, 15s, 20s, 25s, 30s, 35s, 40s.

Country: Display the current Country, and you should select the Country when you want to auto tuning.

Restore Factory Default: Press OK button to restore factory default.

OSD Menu

6. LOCK menu

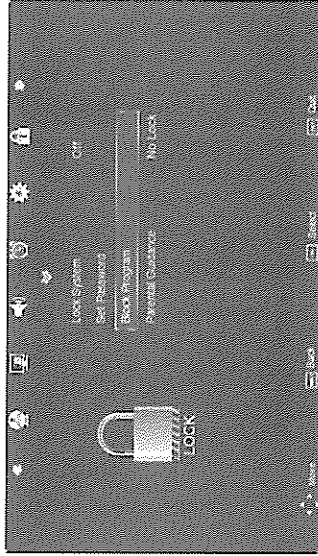

Description

Lock System: Turn on/off the Lock System function.

 
Note: You should enter the code to operate the menu. (original code is 0000)

Set Password: Set pin code. If the Pin code has been changed you must enter the present code.

New : Enter the new password.

Confirm: Enter the new password.

Block Program: Lock the channel, you have to enter the code to view the channel. Use \wedge and \vee buttons to select the channel, and press the GREEN button on the remote control to lock the channel or canal.

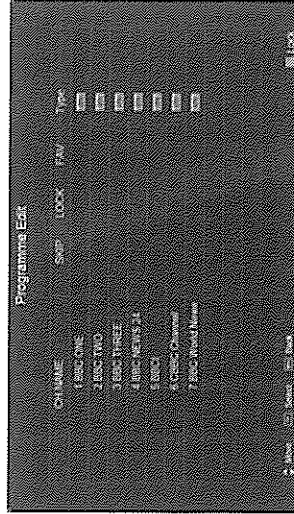

Parental Guidance: Allows you to select the Parental Guidance mode.

OSD Menu

3. SOUND menu



Description

Sound Mode: Allows you to select among: Standard, Music, Movie, Sports and User.

Treble(Could be adjusted when the sound mode is User): Controls the relative intensity of higher pitched sounds.

Bass (Can be adjusted when the sound mode is set to User): Controls the relative intensity of lower pitched sounds.

Balance: To adjust the balance of the left and right sound track, or turn off the volume of the left and right sound track.

 
Auto Volume: Control the volume of the program automatically when you turn on the function by selecting "On".

Surround Sound: Turn on/off the surround sound function by selecting "off"/"surround".

SPDIF MODE: Allows you to select among: Off, PCM and Auto.

OSD Menu

2. PICTURE menu

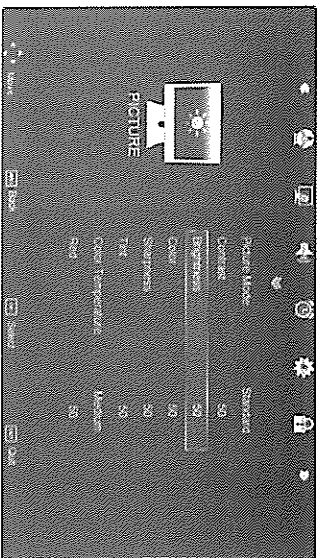

Description

Picture Mode: Choose from Standard, Dynamic, User and Mild.

Note: *Contrast, Brightness, Color and sharpness are only available and can be adjusted in the User mode option in the Picture Mode Settings.*

Contrast: Controls the difference between the brightest and darkest regions of the picture.

Brightness: Controls the overall brightness of the picture.

Color: Control the color.

Sharpness: Increase this setting to see crisp edges in the picture; decrease it for soft edges.

Tint: Controls the tint (NTSC mode only).

Color Temperature: Choose from Medium, Cool, User and Warm.

Red: Controls the red colour of the picture.

Green: Controls the green colour of the picture.

Blue: Controls the blue colour of the picture.

Aspect Ratio: Choose from 4:3, 16:9, Zoom1, Zoom2, Just Scan and Panorama.

Note: *The aspect ratio modes you can select according to the input source.*

 
Noise Reduction: Choose interference noise modes from Off, Low, Middle, High and Default.

Screen(PC mode only): Press OK button to enter the submenu to adjust Horizontal / Vertical position, Size or Phase of the picture.


Multimedia Operation

Basic Operation

1) Press the TV/AV button on the remote control to display the input source menu, select USB source by the $\blacktriangle/\blacktriangleright$ buttons, and press OK button to enter the Multimedia menu seen below.

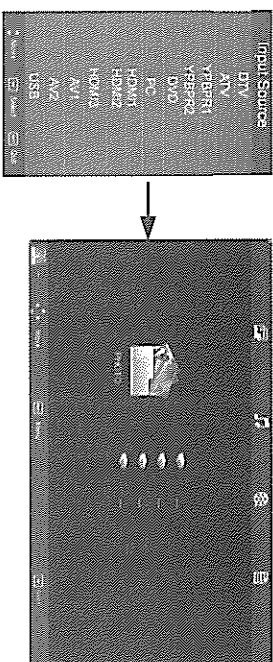

 
2) Insert USB device, you will find the name of the device display on the screen.

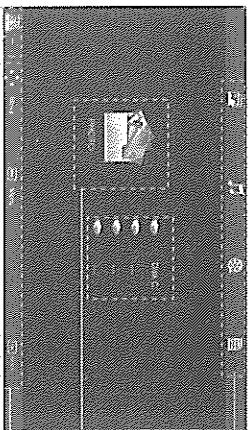

MAINS MENU
PHOTO MUSIC MOVIE TEXT
USB device list
Hints for operation

Hints and Informations of USB device

 3) Press $\blacktriangle/\blacktriangleright$ button to select the kind of the files in the device you want to program from PHOTO, MUSIC, MOVIE and TEXT. Press $\blacktriangle/\blacktriangleright$ button to select the device and press OK button to enter.

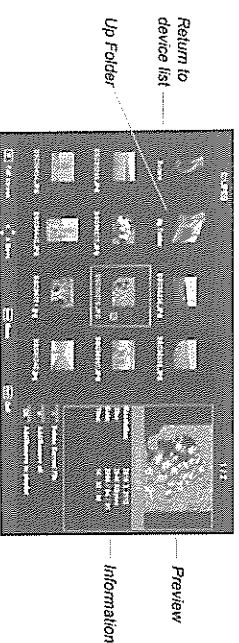


Press $\blacktriangle/\blacktriangleright$ / $\blacktriangle/\blacktriangleright$ buttons to move , and press OK button to select the file or unfold the folder. Then press \blacktriangleright button to program the files (be signed) you select or the files in the fold you select. You can display the option table on the bottom of the screen by OK button, press \blacksquare button to hide. Press \blacksquare button to stop and exit the full screen program.

Multimedia Operation

1. Photo

 Play the photo

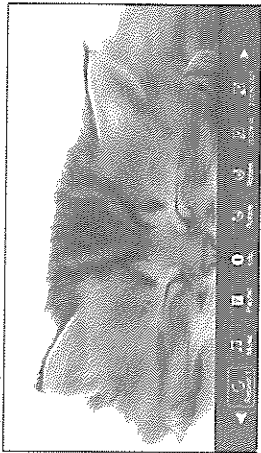

Press **◀/▶** button to select the option on the table, and press **OK** button to change.

Repeat: Select the repeat mode from Repeat All, Repeat 1, Repeat None.

Music: Play/pause the music program (you can only play or pause the music you have programmed).

Playlist: Display the playlist on the screen, and you can select the photo by **▼/▲** button, and press **OK** button to program. Press **◀/▶** button to return to the options table.

Info: Display the information of the photo.

 
Rotate: Rotate the photo clockwise/counterclockwise.

Zoom Out/In: Zoom out/in the photo.

Move View: Move the photo in Zoom in mode.

2. Music

Play the music

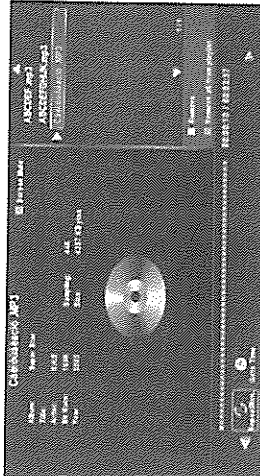

Press **◀/▶** button to select the option on the table, and press **OK** button to change.

Press **▼/▲** button to select the music, and press **OK** button to program.

Repeat: Select the repeat mode from Repeat All, Repeat 1, Repeat None.

Go to Time: Program the music from the time you set.

 
Press **OK** button to display the time table, and select the position by **◀/▶** / **▼/▲** button, set the time by the number buttons, select "OK" and press **OK** button to search.

Screen Mute: Press **BLUE** button to enter the Screen Saver Mute, press again to exit.

OSD Menu

Programme Edit

Press **OK** button to enter the Programme Edit menu as the following picture.

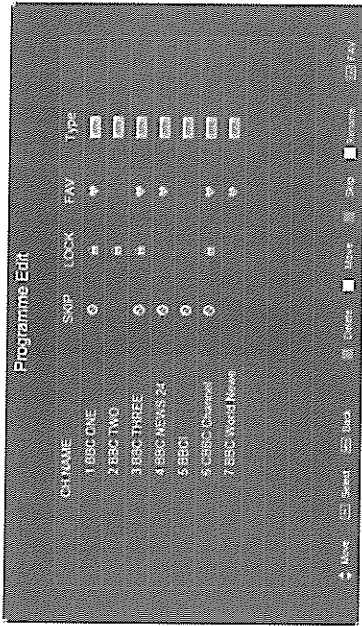

Delete: Select a channel and press **RED** button, "Delete" will appear on the right of the program edit menu next to the channel you have chosen, then press **RED** button again, the program will be deleted. However if you decide not to continue to delete press the menu button to quit.

Move: Select an channel, and press **YELLOW** button, then you can use **▲** and **▼** buttons to change the position of the program, press **YELLOW** again to confirm the change. Press menu to exit and it will automatically save the current set.

Skip: Select a channel and press the **BLUE** button to label the channel, as long as the channel has a skip label it will be skipped when searching through the channels with the **CH+/-** buttons.

Rename: Select an **ATV** channel and press the **GREEN** button to change the name of the channel by **▲ ▼ < >** buttons

FAV: Select a program, press **FAV** button to set or delete the program as the favorite channel.

Signal Information

 
Display the signal information in DTV mode.

Software Update(USB)

Press **OK** button to enter the menu, and update the software by the USB device.


OSD Menu

1. CHANNEL menu

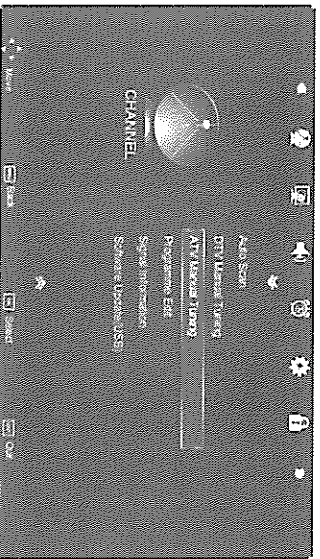


Description

 
Auto Scan
Press **OK** button to enter the hint menu, and select the Country and Tune Type mode for the TV, then press **OK** button to start auto tuning.

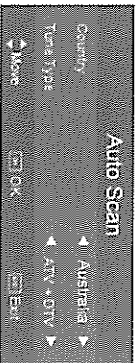

 DTV Manual Tuning
Press **OK** button to enter the DTV Manual Tuning menu, select a DTV channel, and press **OK** button to start searching.

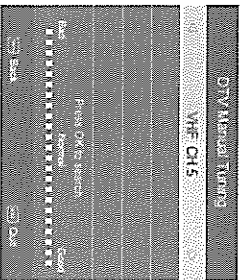


ATV Manual Tuning
Press **OK** button to enter the ATV Manual Tuning menu.
Storage To: Select a position for storing the program.
System: Select a TV system for searching.
Current CH: Select the channel you want to manual tuning.
Search: Press < / > button to manual search.
Fine-Tune: Press < / > button to fine-tune.
Frequency: Display the current frequency.
Note: Press **RED** button to save all the setups you have changed.

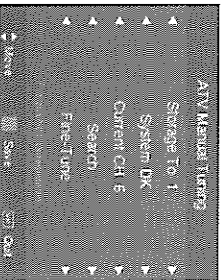 

Multimedia Operation

3. Movie

 Play the movie

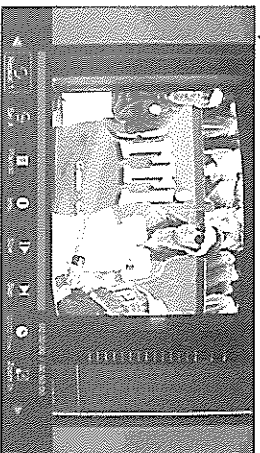

Press ◀/▶ button to select the option on the table, and press **OK** button to change.

Repeat: Select the repeat mode from Repeat All, Repeat 1, Repeat None.

Set A-B: Select and play the preferable paragraph of the program by setting A and B at the beginning and end, and there will be a sign on the left screen, press **OK** button again to cancel.
Playlist: Display the playlist on the screen.

Info: Display the information of the movie.

Slow: Play the programs at slow speed, press ▶ button to cancel.

Step: Step the programs by **OK** button, press ▶ button to cancel.

Go to Time: Program the movie from the time you set.

 
Zoom out/in: Zoom out/in the movie screen.

Aspect Ratio: Select the aspect ratio of the screen display.

Move View: Move the photo in Zoom in mode.

4. Text

Play the text

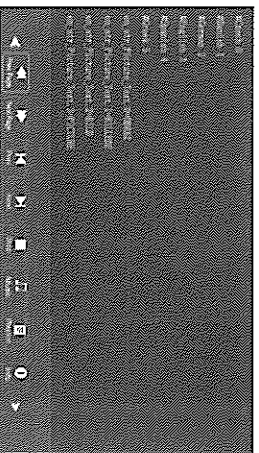

Press ◀/▶ button to select the option on the table, and press **OK** button to change.

Prev/Next page: Turn to previous/next page of the text.

Prev/Next: Turn to previous/next file.

Stop: Stop auto turning pages.

Music: Play/pause the music program.

 
Playlist: Display the playlist on the screen.

Info: Display the information of the text.


Recording Operation

1). Recorded List

Press the MENU button, and select CHANNEL menu.

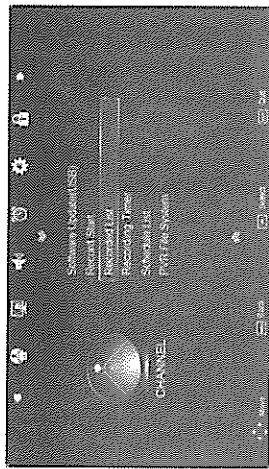

 1). Recorded List

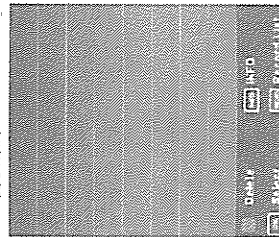

Display the recorded list

 
Recorded list: Display the Recorder List menu,

and changed the mode of program.

INFO: Display the information of the program you recorded.

RED button: Delete the program you select.

2). Recording Timer

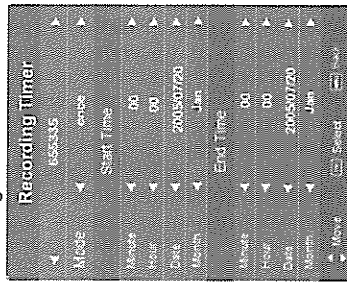

Set the Recording Timer
The TV will record the program automatically according to your settings.

TITLE: Display the name of the recording program.

MODE: Select the record mode.

Start Time: Set the start recording time.

End Time: Set the end recording time.

Press OK button to save the setting and exit the menu.

Basic Operation

 
Power on/off

1. Connect to the power.
2. -To turn on the TV
Press **POWER** button on the TV or remote control.
-To turn off the TV
Press **POWER** button on the TV or remote control.

Input Source select


Press TV/AV button on the TV set or remote control to display input source menu, and use CH+/- button on the TV set or ^/v button on remote control to select the input source, press OK button on the remote control to enter.

Note: Before you select the **input source**, make sure the **connections are prepared**.

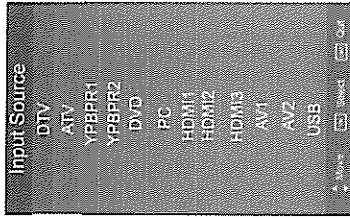

Basic OSD Menu operation

 Press MENU button to display the OSD menu as below:

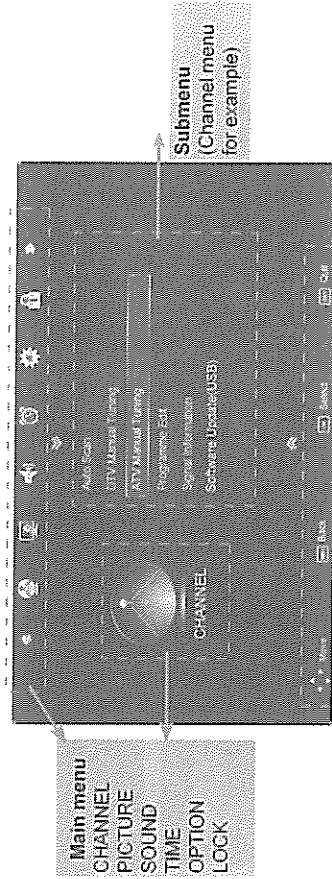

Hint---you should operate the OSD menu according to the hint.

Use </> button to select the main menu, and press v button to enter the submenu. In the submenu, use ^/v button to select the function item, press </> button to adjust/setup, or press OK button to enter the submenu.


* (Press MENU button to return to the upper menu.)

* (Press EXIT button to exit the menu display.)

Note1: Only when you input the suitable signal, the relevant items can be activated

Note2: Please operating the OSD menu according to hint on the bottom of the banner.

 Remote Control

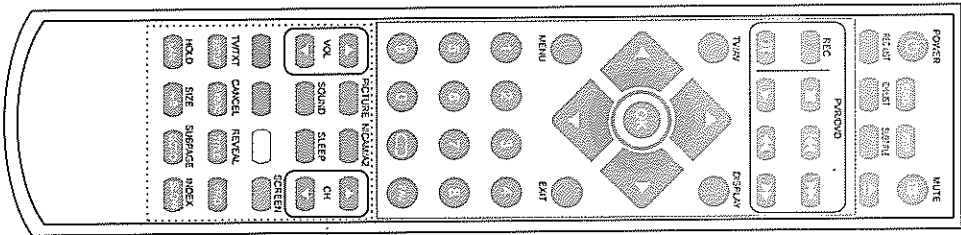

CH▲▼: Scan through channels

VOL▲▼: Adjust the volume

PICTURE: Select the picture mode

NICAMIA2: TV NicamIA2 select.

SOUND: Select the sound mode.

SLEEP: Standby timer.

SCREEN: Turn on/off the screen

TV/TEXT: Turn on/off the Teletext display

CANCEL: Cancel the Teletext display.

REVEAL: Reveal any hidden text.

HOLD: Hold or carry on the current subpage.

SIZE: Press to see top half of page double size.

Press again to see the bottom

half of page double size. Press again for normal size.

SUBPAGE: Press to enter subpages, press again to cancel.

INDEX: Go to index.

Colour buttons: Short cut: follow the coloured links in the text

SETUP: DVD system setup.

D/MENU: DVD play list/Disc menu.

TITLE: DVD title.

PRO: Edit the program and play.

LAN: Select DVD disc language.

A-B: Select and play the preferable paragraph of DVD program

 
by pressing this key twice at the beginning and end of it.

GOTO: Play your favorite title/chapter/track.

SLOW: Play DVD programs at slow speed.

Recording Operation

3). Schedule List

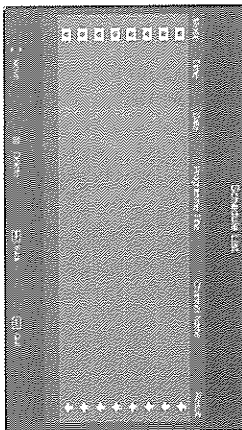

Display the recorder schedule

Note: a. Could't add schedules which have existent on the list.

b. Could't add schedules when the list is full, you have to delete some schedules.

c. You could delete a schedules by RED button on the remote control.

4). PVR File System



Setup the PVR File system before you start recording.

Select Disk: Select the device for the Record files.

Check PVR File System

USB Disk: Display the USB state.

 
Format: Format the USB device for PVR operating.

Time Shift Size: Display the size of the USB device (The device has been formatted).


 

Speed: Display the speed of the USB device (The device has been formatted).

Recording Operation

 
5) Record Start


When you finish the settings above, you could start recording by select Record Start in the menu and press OK button in DTV mode. (You can also start recording by press the  button on the remote control)

Record buttons

-  **Recording:** Press to enter the recording mode.
-  **PAUSE:** Press to enter the timeshift mode.
- Recording list:** Press to display the recording list.
-  **Stop:** Press to stop recording.

Recording menu

 When you press  REC button, the screen will display the recording menu as below:

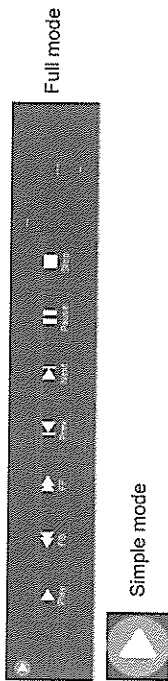


- Note: a. You could change the mode of Recording menu by REC/Exit button.
 b. Press STOP button to exit the recording mode.
 c. Press PLAY button to play the program you are recording from the beginning.
 d. Press Recording list button to display the Recorder list, and you could play the program you selected. The recording will be going on, and the Recording menu will display when you exit the Recorder list.

Timeshift

Press PAUSE button to enter the Timeshift mode, and the picture will be paused, the recording will begin.

- Note: a. You could change the mode of Timeshift menu by REC/Exit button.
 b. Press STOP button to exit the Timeshift mode.
 c. Press PLAY button to play the program you are recording from the beginning.

 Playback

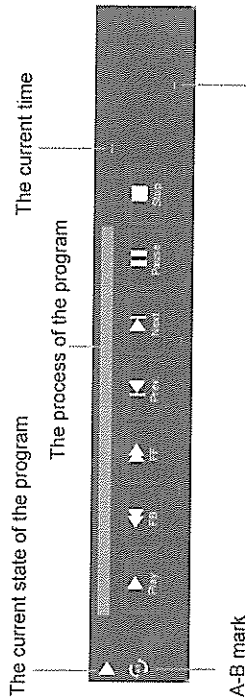



The name and number of the program

  
 
 
 
 

 
 
Remote Control


Functions of remote control buttons

The remote control is using Infra-Red (IR). Point it towards the front of the TV. The remote control may not work correctly if it is operated out of range or out of angle.

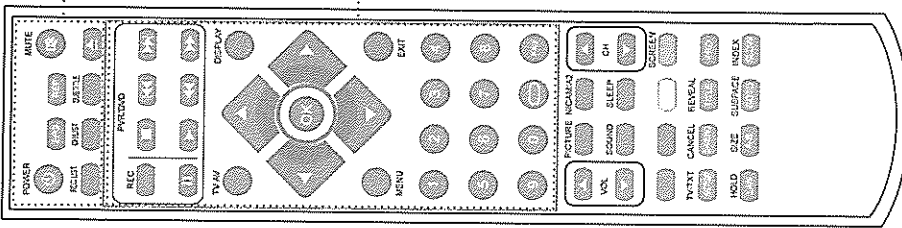

 
 
- POWER:** Turn the TV on/standby.
- MUTE:** Press to mute the sound, press again or press VOL+ to unmute.
- REC LIST:** Record List.
- CH/LIST:** Display the programs list.
- SUBTITLE:** Turn on/off the subtitle display in DTV mode and DVD mode.
- EPG:** To show the Electronic Program Guide during no-menu state only in DTV mode.
- REP:** Repeat playing the title or chapter.
-  : Load/Eject DVD disc.

- PVR/DVD**
- REC ** : Press to start record the program in DTV mode.
-  : Stop program.
-  : Previous chapter.
-  : Next chapter.
-  : Pause program.
-  : Play program.
-  : Fast reverse.
-  : Fast forward.

- TV/AV:** Press to display the input source menu.
- DISPLAY:** Press to display the current mode's information.
- MENU:** System setup menu
- EXIT:** Exit the OSD menu.
- FAV:** Display the favorite program list.
- NUMBER BUTTONS**
- Press 0-9 to select a TV channel directly when you are watching TV.
- 
- Return to the previous channel viewed.
- CURSOR KEYS (←/→/↑/↓/OK)**
- Allows you to navigate the on-screen menus and adjust the system settings to your preference.

Names of each part

Back View

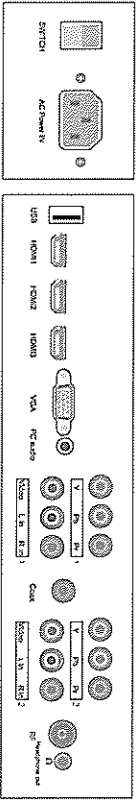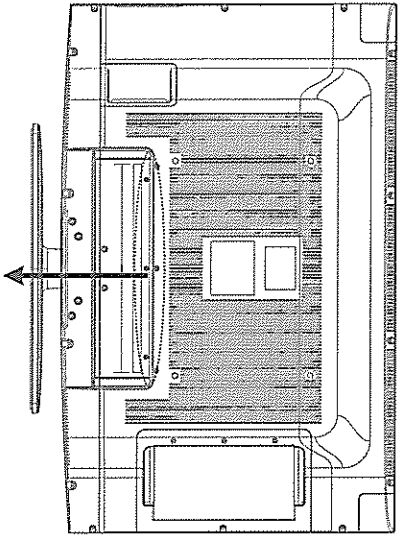

SWITCH: Switch on/off the power supply.

AC POWER IN: Connect it to AC100-240V ~ 50/60Hz power supply with the mains cable.

USB: Software update and Multimedia Operation.

HDMI1/2/3: Connect it to the HDMI of DVD or other equipment.

VGA: For PC display. Connect it to the D-Sub 15 pins analog output connector of the PC.

PC audio in: Connect it to the audio output terminal of PC.

YPbPr1/2: Connect them to the YPbPr-video output terminal of DVD.

Coax-out: Digital coaxial output.

VIDEO1/2: Connect it to video output terminal of DVD.

R/L In 1: Connect them to the audio output terminal of DVD.(shared with YPbPr-1)

R/L In 2: Connect them to the audio output terminal of DVD.(shared with YPbPr-2)

RF: Connect antenna or cable 75 Ohm coaxial to receive TV signal.

Headphone out: Connect it to your headphone or other audio equipment.

DVD Operation

Basic Operation

Press the Power button on the TV or the remote control, then press the TV/AV button to select DVD mode.

If there is no disc in the DVD player the screen will show "NO DISC".

Insert Disc according to picture next to disc slot.

Do not touch the playing surface.

Hold the disc around the outside with your fingers and place the disc into the slot. The player will

automatically draw the disc into the player.

To "Eject" the disc, press the EJECT button on the TV or the "▲" button on the remote control.

DVD Setup Mode

• Setup Mode provides the menu for the configuration of General Setup Page, Audio Setup Page,

Dolby Digital, Setup, Preference Page.

• Item selection in the Setup Menu is done by using the Navigation Arrows, SETUP button and the

OK button.

• Press the SETUP button first, enter into SETUP menu, then press the DIRECTION RIGHT button,

you can enter into the next Sub-menu.

• Press the SETUP button again to exit the Setup Menu.

General Setup

TV Display

• 4:3 Pan Scan

 
This is selected when the DVD player is connected to a normal TV. Wide-screen images are shown on the screen, but with some parts cut automatically.

• 4:3 Letter Box

This is selected when the player is connected to a normal TV. Wide-screen images are shown on the screen, with black belt on the top and bottom.


• Wide

This is selected when the player is connected to a wide-screen TV.

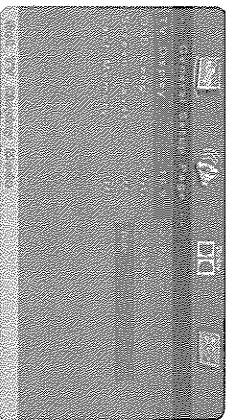

Names of each part

 
Front view

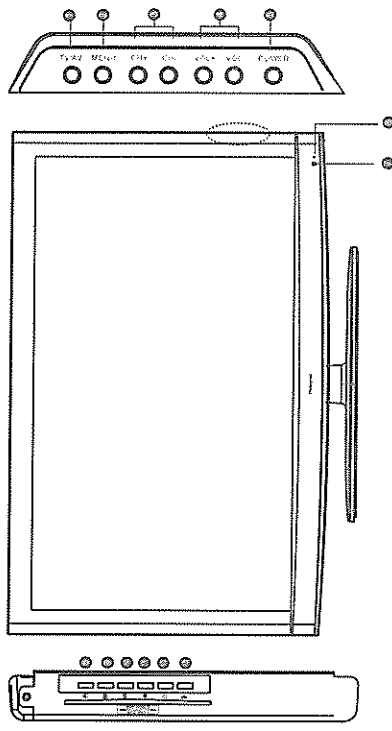

- ① TV/AV button - Input Source Select Button
- ② MENU button - OSD Menu Display Button
- ③ CH+/ button - Channel/Program up/down
- ④ VOL +/- button - Volume up/down
- ⑤ POWER button
- ⑥ POWER indicator
- ⑦ IR (Remote Sensor) Infrared sensor for remote control
- ⑧ (EJECT) Load/Eject DVD disc.
- ⑨ (NEXT) DVD next chapter.
- ⑩ (PREV) DVD previous chapter.
- ⑪ (STOP) Stop DVD program.
- ⑫ (PAUSE) pause DVD program.
- ⑬ (PLAY) Play DVD program.

Accessories

 
The configuration of the components may look different from the following illustration.

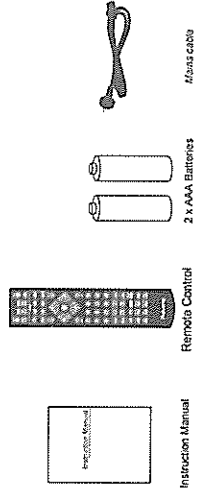

DVD Operation

OSD Language

 
This is used to select the OSD language.

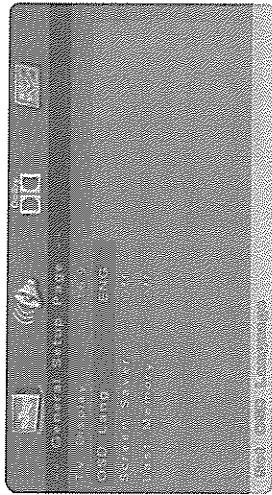

Screen Saver

Start the screen saver, the screen saver image will appear when the player stops or the picture is frozen for a few minutes. This saver can keep the screen from being damaged.

 - On (Start the screen saver)
- Off (Remove the screen saver).

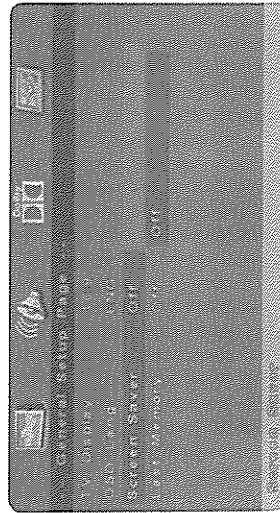


Last Memory

Can set the items on the last memory, "on" and "off" option.

Select "On", the shutdown will shutdown the machine before the settings for memory, re-boot the machine settings. Set near the same time.

- Select "Off", every time the machine automatically switched back to the default settings
- On (Start the memory)
- Off (Remove the memory).

 DVD Operation

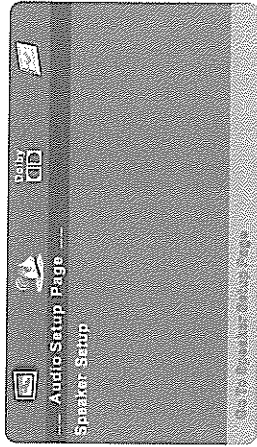


Downmix

- L/R/T

A disc recorded multi channel soundtrack, the output signal will be incorporated to left and right channel.

- Stereo

 A disc recorded multi channel soundtrack, The output signal will be incorporated to stereo.

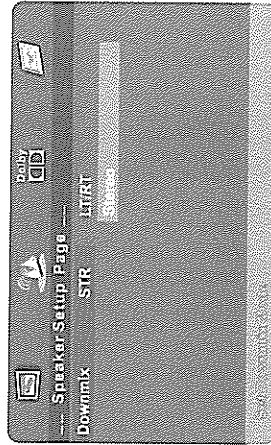

Important Safety Instructions

Warnings and Precautions

To prevent any injuries, the following safety precautions should be observed in the installation, use, servicing and maintenance of this equipment.

Before operating this equipment, please read this manual completely, and keep it nearby for future reference.

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with a dry cloth.
- 7) Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use the attachments/accessories specified by the manufacturer.
- 12) Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

 


combination to avoid injury from tip-over.

Use and Maintenance

Warnings

- Disconnect the power cord from the wall outlet during an electrical storm.
- Not doing so may result in fire or electric shock.
- Do not insert any metal objects, such as a screwdriver, paper clip, or bent wire into the ventilation openings or AV terminals.
- Doing so poses a serious risk of fire or electric shock.
- Do not allow children to climb or hang on the unit.
- The unit could topple over onto a child and result in serious injury.
- Never disassemble or modify the unit in any way. Do not attempt to service the unit yourself.
- Doing so may result in fire or electric shock. If the unit requires repair, contact the service center.







Cautions

- When not using the unit for long periods of time, disconnect the power cord from the wall outlet.
- Use caution around trees on the unit and ensure it is protected from lightning or other electrical storms.
- When moving the unit, be sure to turn off the unit and unplug the power cord from the wall outlet.
- Moving the unit with the power cord connected to the cord, resulting in fire or electric shock.
- If you notice any unusual odors or smoke around the unit, immediately disconnect the unit from the outlet and contact the service center.
- Failure to do so may result in fire or electric shock.
- When removing the batteries from the remote control, make sure children do not swallow them. Keep the batteries out of the reach of infants and children.
- If a child has swallowed a battery, seek medical attention immediately.



    - Always use two or more people to lift or move the unit.
- Wipe off any moisture, dirt, or dust on the power plug pins with a clean dry cloth.
- Failure to do so may result in fire or electric shock.
- It is advisable to clean the interior of the unit at least once a year. Contact the store of purchase or service center for information.
- Continuing to use the unit without cleaning will cause buildup, which may result in fire or electric shock.
- Always turn off the unit and unplug the power cord when cleaning the unit. Use a soft cloth to clean the unit.
- Never clean with industrial strength polish, wax, perfume, paint thinner, air freshener, liquid detergent, or other such chemicals. Also, do not clean with a damp cloth.




DVD Operation


Dolby Digital Setup

Dynamic

 This option is used to set the compression ratio in order to control the sound (Volume) contrast.

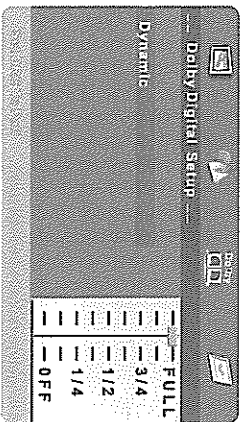

Preference Setup

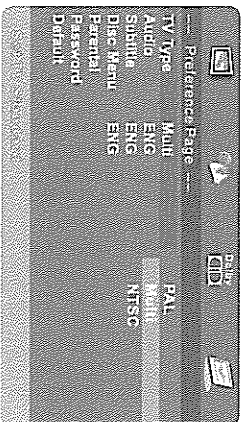 

You must press STOP twice to enter Preference Page or NO disc

 
TV Type

- **PAL** This is selected when the player is connected to an PAL System TV.
- **MULTI** The player will set the TV system according to the disc in the tray.
- **NTSC** This is selected when the player is connected to a NTSC System TV.

Audio


If a language listed below is recorded on the disc, you can play the sound in such language. If not, the language recorded will be used.

DVD Operation

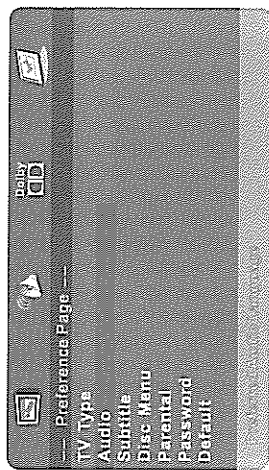


Subtitle

 If a language listed below is recorded on the disc, you set the subtitle to be displayed in such language. If not, the language recorded will be used.

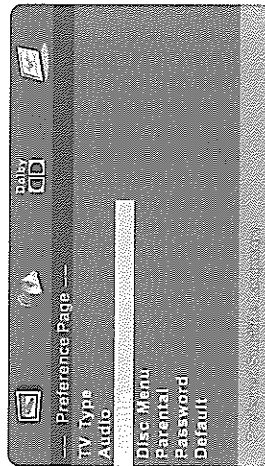

Disc Menu

 If a language listed below is recorded on the disc, you can set the Menu to be displayed in such language. If not, the language recorded will be used.

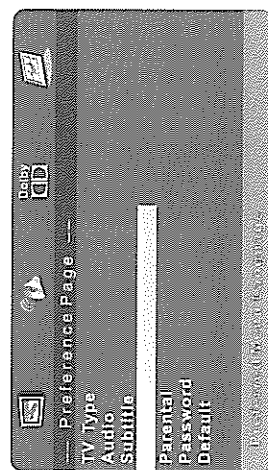

Installation

Warnings

 
Do not place containers with liquids such as flower vases, soft drink cans, or medicine bottles or small metallic objects on top of the unit.

If liquid enters the unit or any metal object falls into the unit, it may result in short-circuit, fire, or electric shock.



Do not place the unit where it is exposed to rain, excessive moisture or grease.

Doing so may result in fire, electric shock, malfunction, or deformation.



Do not use or store flammable or combustible materials near the unit.

Doing so may result in fire or explosion.



Do not place the unit on an unstable surface, such as a wobbly stand or support table, or on a surface that is smaller than the bottom area of the unit.

If a child climbs on the unit, it could topple and fall onto the child, resulting in serious injury to the child. Do not allow children to climb the unit or on the table or chairs.



Do not place a burning candle, burning anti-mosquito incense, or lighted cigarettes on top of the unit. Do not place the unit near any heat source such as a fireplace or space heater.

Doing so poses a serious risk of fire.



Do not place the unit in a poorly ventilated enclosure, such as a cabinet.

Doing so poses a serious risk of fire.



Do not run power cords near heat-producing appliances such as radiators, stoves, or irons.

The excessive heat could melt the insulation and expose live wires, resulting in fire or electric shock.



Install the antenna away from high-voltage power lines and communication cables and make sure it is installed securely.

If the antenna touches a power line, contact with the antenna could result in fire, electric shock, serious injury, or death.



Cautions

Install the unit at an adequate distance from the wall to ensure sufficient ventilation.

If the temperature inside the unit rises, it may result in fire.

 


Do not cover the unit with a tablecloth, curtain, or other material.

If the temperature inside the unit rises, it may result in fire.



Be sure to place the unit on a level surface.



Warnings

Form a dip loop where the coaxial antenna cable enters your building to prevent rainwater from traveling along the cable and coming in contact with the antenna input terminal.

If rainwater finds its way inside the unit, it may result in fire or electric shock.



The following precautions are divided into "Warnings" and "Cautions".

Warning : Ignoring this precaution may result in death or serious injury.

Caution : Ignoring this precaution may result in injury or property damage.

Power Supply

Warnings

Do not touch the power plug with wet hands.

- Doing so may result in electric shock.

Do not use a damaged power cord or plug or a loose outlet.

- Doing so may result in fire or electric shock.

Do not plug several devices into the same outlet.

- Doing so may cause the outlet to overheat and start a fire.

Insert the power plug fully into the outlet.

- A loose or improperly inserted power plug may result in fire.



Do not bend the power cord excessively or place heavy objects on it.

- Doing so may result in fire or electric shock.



Be sure to ground the unit.

- Failing to do so may lead to electric shock when a short circuit or overload occurs. If necessary, install a ground fault circuit breaker. Never ground to a telephone line, lightning rod, or metal gas pipe. (Doing so may result in fire, electric shock, or other hazards.)



Cautions

When disconnecting the power cord from an AC outlet, always grasp it by the plug.

- Pulling on the cord can damage the internal wire and may result in fire.



Always unplug the unit before cleaning.

- Not doing so may result in fire or electric shock.



The purpose of these precautions is to ensure user safety and prevent property damage. Be sure to read and observe all safety precautions.

 


DVD Operation

Parental

When playing disc with parental lock function, you may select an Age Control Grade according to grade of disc and your own preference. For example, if PG is selected, DVD Video disc rated higher than the PG grade cannot be played.


- KID SAFE
- G
- PG
- PG-13
- PGR
- R
- NC-17
- ADULT

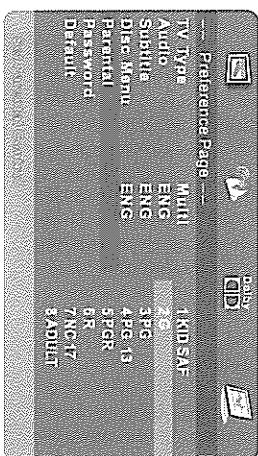



Password

User can change the password that is required when the user wants to change the Age Control Grade in the Parental Lock function.

 NOTE:(Default password is 123456)

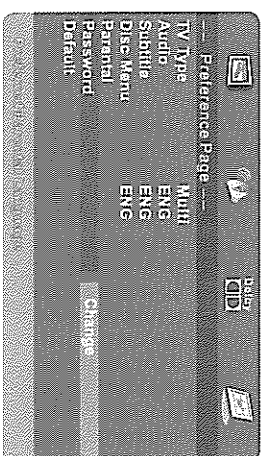


DVD Operation

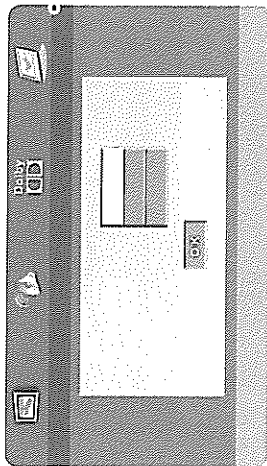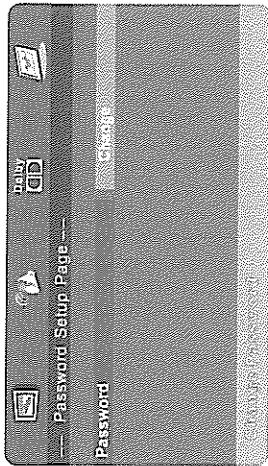  

Default

 User can load the original factory setting by choose RESET and press OK button .

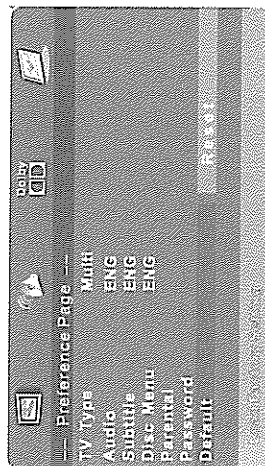

Safety Precautions

Power Supply	1
Installation	2
Use and Maintenance	3
Important Safety Instructions	4-5

User Guidance Information

Names of each part(Front View) / Accessories	6
Names of each part(Back View)	7
Remote control	8-9

Basic Operation

Basic Operation	10
-----------------	----

OSD Menu

1 CHANNEL Menu	11-12
2 PICTURE Menu	13
3 SOUND Menu	14
4 TIME Menu	15
5 OPTION Menu	16
6 LOCK Menu	17

Multimedia Operation

Multimedia Operation	18-20
----------------------	-------

Recording Operation

Recording Operation	21-23
---------------------	-------

DVD Operation

DVD Operation	24-31
---------------	-------

Specifications	32
----------------	----

Specifications

LCD Panel	Panel Size	26"
Max Resolution		1366 x 768
Input Connector	VIDEO	2
	YPbPr	2
	VGA	1
	AUDIO (L/R)	2
	PC AUDIO	1
	HDMI	3
	RF	1
	USB	1
Output Connector	HEADPHONE	1
	COAX	1
Main Voltage		100-240V ~ 50/60HZ
Power		100W

IMPORTANT NOTICE:

This product composes up to 6.0 million cells and a few cell defects may occur in the manufacture of the panel. Several dead pixels fallow up to 2 bright or 2 dark pixels) on the panel are deemed acceptable by the industry standards. In line with manufacturers and would not mean that the panel is faulty. Dead pixels panels with 6 pixels or more within 12 month period, Palsonic Corporation Pty Ltd. complies with industry standard and reserves the right to repair the unit and non-refundable. We hope you will understand that the product that corresponds to this standard is regarded as acceptable.


ZSARm2

Palsonic
The AUSTRALIAN Company

User's Manual

TFTV6840DT

 66cm (26") LCD TV / DVD Combo with DVB-T

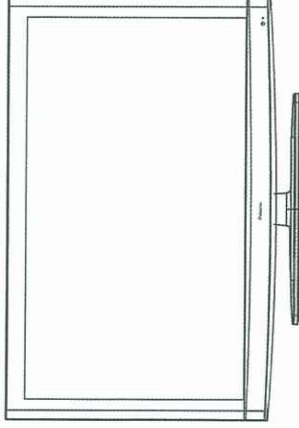

Palsonic
The AUSTRALIAN Company

Palsonic Customer Service
Telephone (Australia) 1300 657 888

Palsonic Corporation Pty Ltd ABN 34 000 474 108
1 Joynton Avenue, Waterloo NSW 2017 Australia

Telephone (02) 9313 7111 Facsimile (02) 9697 0655
www.palsonic.com.au



Offering Australians quality since 1958 | www.palsonic.com.au