

OPERATING INSTRUCTIONS

EA Electronic Safe

➤ **Open safe using emergency key provided.**

Remove the override cover in the centre of the face of Safe, insert override key & turn anti clockwise, rotate the knob to open the door.

➤ **Insert batteries in the box inside the door.**

➤ **Opening the Safe - Pre-set factory code "159"**

input "159" (the yellow light will "flash & the buzzer will beep"), then press A or B button, the green light will be on, rotate the knob clockwise, pull outwards, the door is opened.

➤ **Closing the Safe**

Close the door, turn the knob anti clockwise the control system will activate and the safe will be locked.

➤ **Changing the Code**

Open the safe, Press the Red button located inside the door, the yellow light will go on indicating the code can be changed. Input the new code (1-8 digits), then press A or B button, it shall be confirmed by two beeps indicating the new code has been accepted & stored. If the yellow light & Buzzer "beeps" 3 times the code is invalid - try again.

➤ **Emergency Key - Store in a secure place not inside the Safe .**

Remove the override cover in the centre of the face of Safe, insert the override key & turn anti clockwise, rotate the knob clockwise to open the door. **Keys Provided are for Emergency Use ONLY. Use Digital Code Only to operate the Safe, constant use of Emergency Key shall Void Warranty.**

➤ **Changing the Battery**

If the Red & Green light are on this indicates the Batteries are low and require changing. To ensure the batteries have been installed correctly test before closing the door.

Note: Do not leave your emergency keys inside the Safe!
REPLACEMENT EMERGENCY KEYS ARE NOT AVAILABLE
FOR THIS MODEL